

Contents

- Section 1** : Your components guide
- Section 2** : Fittings guide
- Section 3** : Handy hints on preparation and installation
- Section 4** : Installation sequence
- Section 5** : Finishing touches - décor panel fitting
- Section 6** : Finishing touches - fascia installation
- Section 7** : Finishing touches - drawer fitting and other internals
- Section 8** : Finishing touches - curved units
- Section 9** : Finishing touches - other décor units
- Section 10** : Customer care guidance
- Section 11** : Key unit dimensions

Important information

Before you install your customer's kitchen, please read this guide.

These guidelines are not a substitute for professional advice. Whilst every care has been taken to ensure that the product design, descriptions, specification and techniques of constructing the products are accurate at the date of printing, Benchmarx product will inevitably change from time to time, and the customer is advised to check that the design, descriptions, specification and techniques of any of the products described in this booklet are still valid at the time of purchase or placing an order. Where these guidelines vary from the instructions on a product or its packaging, then the instructions on the product or the packaging should be followed.

Note: It is not advisable to fit a kitchen in a newly constructed or recently plastered room. A high moisture content in the environment may cause the doors to swell and split. It is recommended that doors are stored outside the kitchen until the room has dried out thoroughly. A garage or other out buildings are not suitable for this purpose.

Important: Installation should be carried out exactly according to the manufacturer's instructions otherwise a safety risk can occur if incorrectly installed.

Warning: Assess the suitability of the wall/ceiling to ensure that the fastening devices will withstand the forces generated. In order to prevent falling down this product must be used with the wall attachment devices provided.

Should you require any additional support with regards to your project, please contact your nearest branch.

Section 1:

Your components guide

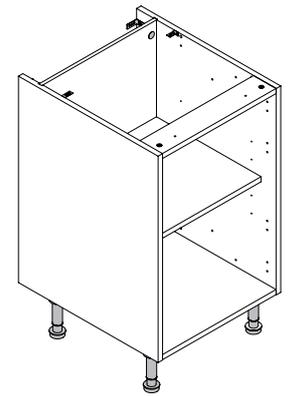
Base units

Benchmark Kitchens are supplied in a multi-pack format. Use this section as a checklist, as it shows the component breakdown that makes up each ordered item. The drawing and description on the left is how the item was ordered. On the right is how the components will be shipped.





Certain items, pelmet, cornice, plinth, end panels and worktops are supplied oversized to allow clean cutting to size.

Ensure all components are checked against delivery notes on receipt.

Certain specific fittings and fixings will be required depending on such things as wall type or individual installation requirements. The below codes will be printed on the labels, "xx" is used to refer to code parts that will vary by kitchen range.






Ordered items: Component received:




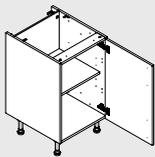
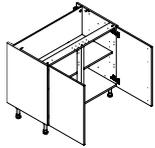

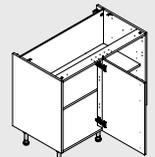
Base units highline	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items	
			White	Grey				
300 Highline base 400 Highline base 450 Highline base 500 Highline base 600 Highline base 		300 Base cabinet 400 Base cabinet 450 Base/sink cabinet 500 Base/sink cabinet 600 Base/sink cabinet	664115 664116 664276 664205 664322	664229 664146 664321 664221 664121		300 highline fascia 400 highline fascia 450 highline fascia 500 highline fascia 600 highline fascia	1	
800 Highline base 900 Highline base 1000 Highline base 		800 Base/sink/hob cabinet 900 Base/sink/hob cabinet 1000 Base/sink/hob cabinet	664358 664296 664264	664251 664281 664347		2 x 400 Highline fascia 2 x 450 Highline fascia 2 x 500 Highline fascia	2	
800 Highline corner base 1000 Highline corner base 		800 Base/sink/hob cabinet 1000 Base/sink/hob cabinet	664358 664264	664251 664347		300 Highline fascia 400 Highline fascia 500 Highline fascia (Required fascia size depends on unit configuration)	1	1 x Base corner filler Richmond and Options also include fixing blocks
						400 Highline fascia 500 Highline fascia 600 Highline fascia (Required fascia size depends on unit configuration)	1	1 x Base corner filler Richmond and Options also include fixing blocks

Base units

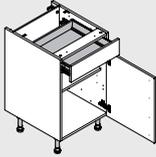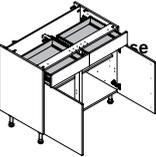Ordered items: Component received:










Base units highline	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
			White	Grey			
300 Drawerline base 400 Drawerline base 500 Drawerline base 600 Drawerline base 		300 Base cabinet	664115	664229		1	Metabox 1 x 664497 - Single drawer Metabox rigid white 300mm Or Blum 1 x 780295 - 300 single drawer set
		400 Base cabinet	664116	664146		1	Metabox 1 x 664500 - Norbord single drawer set Or Blum 1 x 780296 - 400 single drawer set
		500 Base/sink cabinet	664205	664221		1	Metabox 1 x 664501 - Norbord single drawer set Or Blum 1 x 780297 - 500 single drawer set
		600 Base/sink cabinet	664322	664121		1	Metabox 1 x 664502 - Norbord single drawer set Or Blum 1 x 780298 - 600mm single drawer set
800 Drawerline base 		800 Base/sink/hob cabinet	664358	664251		2	Metabox 2 x 664500 - Norbord single drawer set Or Blum 2 x 780296 - 400 single drawer set
		1000 Base/sink/hob cabinet	664264	664347		2	Metabox 2 x 664501 - Norbord single drawer set Or Blum 2 x 780297 - 500 single drawer set

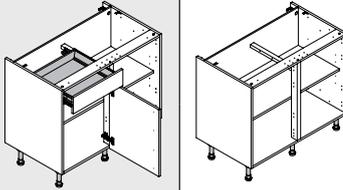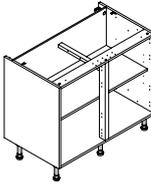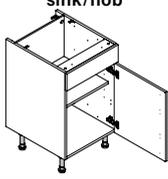
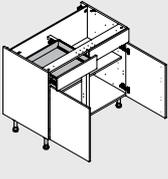

Ordered items: Component received:

Base units highline	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items	
			White	Grey				
800 Drawerline corner base 1000 Drawerline corner base 		800 Base/sink/hob cabinet	664358	664251		1	300 Highline fascia Available in Somerset, Cambridge, Sherwood, Richmond, Options Or 400 Highline fascia Available in Somerset, Cambridge, Sherwood, Richmond, Options Or 500 Highline fascia Available in Somerset, Cambridge, Sherwood, Richmond, Options (Required fascia size depends on unit configuration)	1 x base corner filler 1 x YAQQDS3M (metal) Or 780295 (Tandem) 300 single drawer set 1 x YAQQDS4M (metal) Or 780296 (Tandem) 400 single drawer set 1 x YAQQDS5M (metal) Or 780297 (Tandem) 500 single drawer set
		1000 Base/sink/hob cabinet	664264	664347			400 Highline fascia Available in Somerset, Cambridge, Sherwood, Richmond, Options Or 500 Highline fascia Available in Somerset, Cambridge, Sherwood, Richmond, Options Or 600 Highline fascia Available in Somerset, Cambridge, Sherwood, Richmond, Options (Required fascia size depends on unit configuration)	1 x Base corner filler Richmond and Options also include fixing blocks 400mm Metabox 1 x 664500 - Norbord Single Drawer Set Metabox Rigid White 400mm Or Blum 1 x 780296 - 400 Single Drawer set 500mm Metabox 1 x 664501 - Norbord Single Drawer Set Metabox Rigid White 500mm Or Blum 1 x 780297 - 500 Single Drawer set 600mm Metabox 1 x 664502 - Norbord Single Drawer Set Metabox Rigid White 600mm Or Blum 1 x 780298 - 600mm Single Drawer set
500 Drawerline sink 600 Drawerline sink/hob 		500 Base/sink cabinet	664205	664221		1	500 Drawerline fascia	
		600 Base/sink cabinet	664322	664121			600 Drawerline fascia Available in Somerset, Cambridge, Sherwood, Richmond and Options. Also available in Eton and Oxford as separate 584 x 600mm fascia and 143 x 600mm fascias	
800 Drawerline sink/hob 1000 Drawerline sink/hob 		800 Base/sink/hob cabinet	664358	664251		2	400 Drawerline fascia Available in Somerset, Cambridge, Sherwood, Richmond, Options	Note: This unit does not have the drawer.
		1000 Base/sink/hob cabinet	664264	664347			500 Drawerline fascia Available in Somerset, Cambridge, Sherwood, Richmond, Options	Metabox 1 x 664501 - Norbord single drawer set Or Blum 1 x 780297 - 500 single drawer set




















Base units

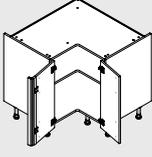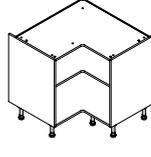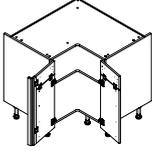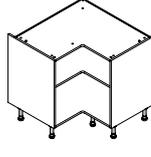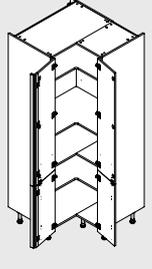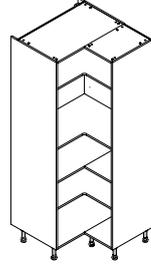Ordered items: Component received:

Base units 'L' shape corner base	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional Items	
				White	Grey				
		Pack 1	Ends, backs and muntins	664171	664197		2 x 300 Highline fascia	2 (170° degree hinges)	1 x Base corner filler Richmond and Options also include fixing blocks
		Pack 2	Horizontals	664188	664197				
		Pack 1	Ends, backs and muntins	664171	664197		2 x 300 Drawerline fascia	2 (170° degree hinges)	1 x Base corner filler Richmond and Options also include fixing blocks
		Pack 2	Horizontals	664188	664197				
		Pack 1	Top and base panels, fixings	664310	664356		2 x 1319 x 296 Door fascia 2 x 300 Highline fascia	5 (170° degree hinges)	1 x Larder corner filler 1 x Base corner filler
		Pack 2	Ends and large back panel	664334	664269				
		Pack 3	Back panels	664360	664164				
		Pack 4	Shelf packs	664162	664345				












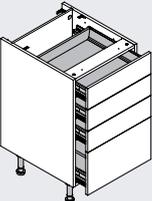
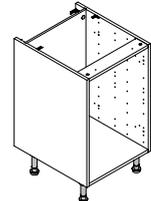

Base units drawer pack and pan drawers	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Additional Items	
			White	Grey			
		300 4 Drawer cabinet	664183	664262		300 Drawer pack fascia	3 x 780295 Shallow drawer box 1 x 243119 Deep drawer box
		300 Drawer cabinet	664361	664145			
		500 4 Drawer cabinet	664212	664155		Available as 500 Drawer fascia pack in: Somerset, Holborn, Nordica, Sherwood, Soho, Oxford cream, olive green and dove grey, Eton white, carbon and matt white, Richmond pebble grey and grey Oak, Options	3 x 780297 Shallow drawer box 1 x 243129 Deep drawer box
		500 Drawer cabinet	664205	664221			

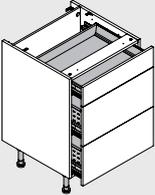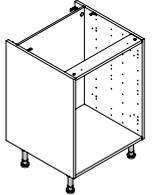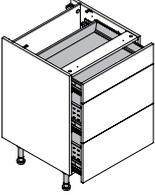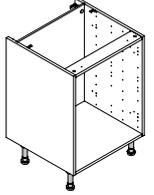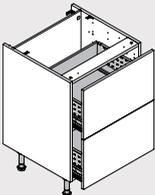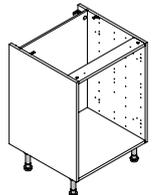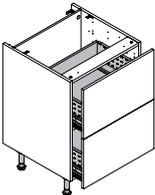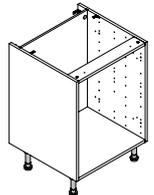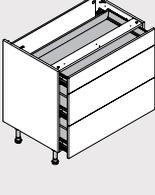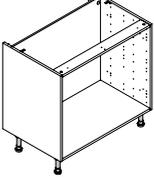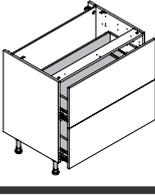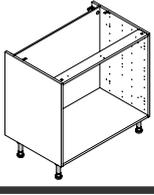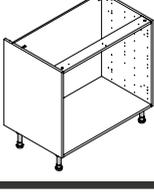Ordered items: Component received:





















Base units drawer pack and pan drawers	Carcase Cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Additional Items
			White	Grey		
500 3-Pan drawer 		500 3 Drawer Cabinet (Note this is pre-assembled as a four drawer unit and needs to be altered on site)	664212	664155		1 x 143mm x 496mm drawer Fascia 2 x 290 x 496mm Drawer Fascia Available in Cambridge, Oxford Pebble Grey and Slate grey, Eton Gloss light grey and matt dove grey, Richmond cashmere, urban grey, midnight blue, sandstone oak, white
		500 Drawer Cabinet	664205	664221		
600 3-Pan drawer 		600 3 Drawer cabinet	664340	664224		Available as a 600 3 pan drawer fascia pack in: Holborn, Soho and options Available as 1 x 143 x 596 drawer fascia and 2 x 290 x 596 drawer fascias in: All other ranges
		600 Drawer cabinet	664302	664282		
500 2-Pan drawer 		500 2 Pan Drawer Cabinet (Note this is pre-assembled as a four drawer unit and needs to be altered on site)	664212	664155		2 x 363 x 496mm fascias 2 x 243129 Deep drawer box
		500 Drawer cabinet	664205	664221		
600 2-Pan drawer 		600 Drawer cabinet	664302	664282		2 x 243117 600 Deep drawer box
900 3-Pan drawer 		900 Pan drawer cabinet	664157	664351		Available as 900 3-Pan drawer fascia pack in: Somerset, Holborn, Nordica, Sherwood, Soho, Oxford cream, green and dove grey, Eton, Richmond Available as 1 x 143mm x 896mm fascia and 2 x 290 x 896mm fascia in: Cambridge, Oxford pebble grey and slate grey. Not available in Options.
900 2-Pan drawer 		900 Drawer cabinet	664157	664351		2 x 243118 900 Deep drawer box
900 2-Pan drawer with sink drawer 		900 Pan drawer cabinet	664157	664351		1 x 780321 - 900 Sink drawer box pack

Wall units

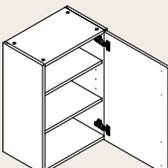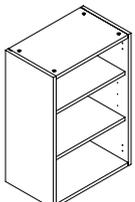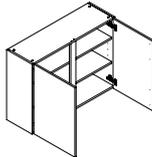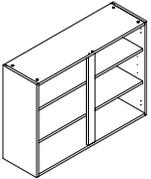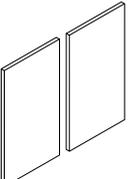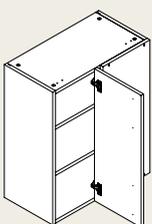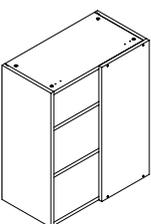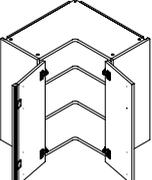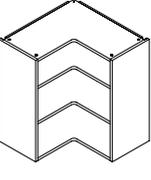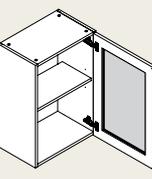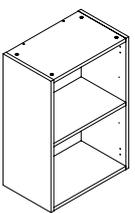Ordered items: Component received:




Wall units	Carcase Cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional Items	
			White	Grey				
300 Wall unit 400 Wall unit 450 Wall unit 500 Wall unit 600 Wall unit  		300 Wall cabinet	664313	664166		300 Highline fascia	1	
		400 Wall cabinet	664323	664332		400 Highline fascia	1	
		450 Wall cabinet	664382	664367		450 Highline fascia	1	
		500 Wall cabinet	664375	664156		500 Highline fascia	1	
		600 Wall cabinet	664168	664341		600 Highline fascia	1	
600 Wall unit (2 doors) 800 Wall unit 900 Wall unit 1000 Wall unit  		600 Wall cabinet Note: this unit will not have the mullion.	664168	664341		2 x 300 Highline fascia	2	
		800 Wall cabinet	664241	664191		2 x 400 Highline fascia	2	
		900 Wall cabinet	664259	664381		2 x 450 Highline fascia	2	
		1000 Wall cabinet	664118	664320		2 x 500 Highline fascia	2	
600 Corner wall unit  		600 Std corner wall cabinet	664131	664126		300 Highline fascia	1 x Inline hinge pack	1 x Roll of edging tape
625 L-shaped corner wall unit  		625 L shape corner wall	664249	664294		Pair of doors 285mm wide (includes filler)	2 (170° degree hinges)	
500 Glass wall unit  		500 x 735 Open display unit	Matt white - 664326		500 Glass fascia Available in Somerset, Cambridge, Sherwood, Oxford.	1	2 x 476597 Glass shelf	
	Kendal oak - 664300							
	Matt dove grey - 664231							
	Matt carbon - 664353							
	Pebble grey - 664112							
	Gloss white - 664202							

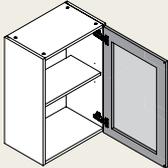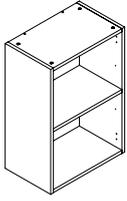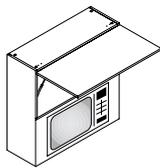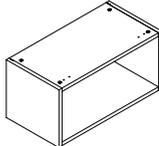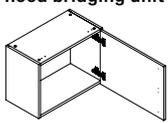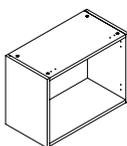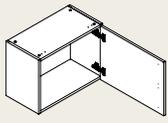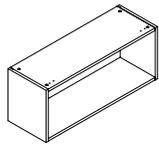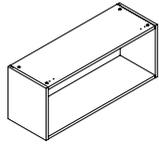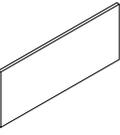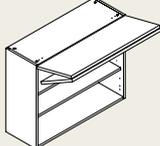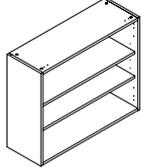Ordered items: Component received:








Wall units	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
			White	Grey			
500 Aluminium glass wall unit 		500 x 735 Open display unit	Matt white - 664326			1	2 x 476597 Glass shelf
			Kendal oak - 664300				
			Matt dove grey - 664231				
			Matt carbon - 664353				
			Denver oak - 664315				
			Pebble grey - 664112				
			Gloss white - 664202				
			Gloss pewter - 664372				
600 Microwave wall unit 		600 Wall cabinet	664168	664341		1	1 x 664418 White 600mm base shelf Or 1 x 664415 Grey 600mm base shelf 1 x 460690 Flap stay
600 x 294 Cooker hood bridging unit 		600 x 294 Bridging unit	664343	664279		1	1 x 460690 Flap stay
600 x 441 Cooker hood bridging unit 		600 x 441 Bridging unit	664170	664289		1	
500 Bridging unit 							
600 x 367 Mid height feature bridging unit 900 x 367 Mid height feature bridging unit 		600 Mid height wall cabinet	664346	664392		1	1 x 460690 Flap stay
		900 Mid height wall cabinet	664379	664201		1	2 x 460690 Flap stay
600 Full height feature aventos unit 900 Full height feature aventos unit 		600 Standard bi-fold unit	664401	664122		1	1 x Aventos mechanism
		900 Standard bi-fold unit	664342	664147		1	(There are three different strength mechanisms to suit individual kitchen ranges and weights)

Dresser units

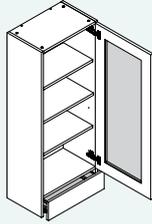Ordered items: Component received:












Dresser units	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour	Fascia		Hinges (pairs)	Additional items
500 Dresser cabinet with glass door 		500 Dresser cabinet	Matt carbon - 664114		500 Glass dresser fascia 500 Drawer fascia Available in Somerset, Cambridge, Sherwood, Oxford.	1	2 x 476597 Glass shelf 1 x 780322 500 Dresser cabinet drawer
			Kendal oak - 664167				
			Matt dove grey - 664117				
			Matt white - 664290				
			Pebble grey - 664135				

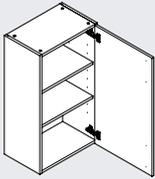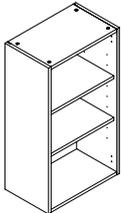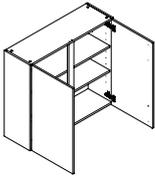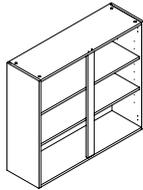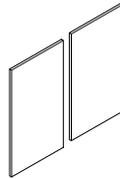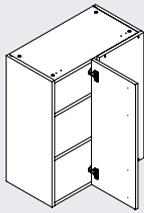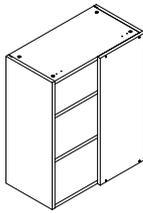Ordered items: Component received:










Tall wall units	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items	
			White	Grey				
300 Tall wall unit 400 Tall wall unit 450 Tall wall unit 500 Tall wall unit 600 Tall wall unit 		300 Tall wall cabinet 400 Tall wall cabinet 450 Tall wall cabinet 500 Tall wall cabinet 600 Tall wall cabinet	664255 664348 664151 664357 664266	664190 664286 664268 664124 664195		300 Tall wall fascia 400 Tall wall fascia 450 Tall wall fascia 500 Tall wall fascia 600 Tall wall fascia	1 1 1 1 1	
600 Tall wall unit (2 doors) 800 Tall wall unit 900 Tall wall unit 1000 Tall wall unit 		600 Tall wall cabinet Note: this unit will not have the mullion 800 Tall wall cabinet 900 Tall wall cabinet 1000 Tall wall cabinet	664266 664261 664172 664137	664195 664113 664106 664364		2 x 300 Tall wall fascia 2 x 400 Tall wall fascia 2 x 450 Tall wall fascia 2 x 500 Tall wall fascia	2 2 2 2	
600 Tall corner wall unit 		600 Tall corner wall unit	664250	664376		300 Tall wall fascia Not available in Options	1 x Inline hinge pack	1 x Roll of edging tape

Tall wall units

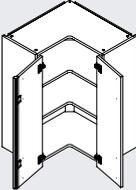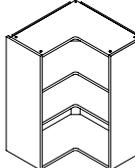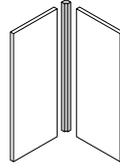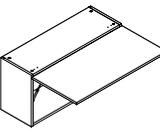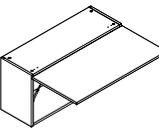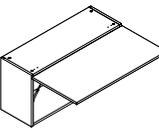
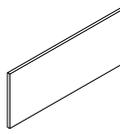
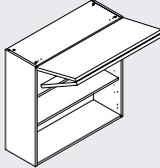
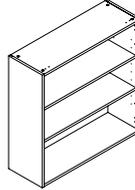
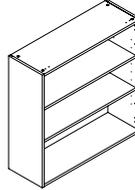
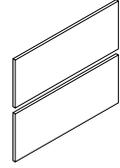
Ordered items: Component received:

Tall wall units	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items	
			White	Grey				
625 Tall L-shaped corner wall unit 		625 L shape tall wall cabinet	664134	664208	 <p>Pair of doors 285mm wide (includes filler) Not available in options</p>	2 (170° Degree hinges)		
600 x 448 Tall mid height feature bridging unit 900 x 448 Tall mid height feature bridging unit  		600 Mid height tall wall cabinet	664247	664141		444 x 596 Door fascia Available in Holborn, Cambridge and Nordica	1	2 x 460690 Flap stay
		900 Mid height tall wall cabinet	664379	664314		444 x 896 Door fascia Available in Holborn, Cambridge and Nordica	1	2 x 460690 Flap stay
600 Tall full height feature aventos unit 900 Tall full height feature aventos unit  		600 Tall bi-fold cabinet	664349	664144		2 x 444 x 596 Door fascia Only available in Nordica and Cambridge	1	2 x 460690 Flap stay
		900 Tall bi-fold cabinet	664299	664129		2 x 444 x 896 Door fascia Only available in Nordica and Cambridge	1	1 x aventos mechanism (There are three different strength mechanisms to suit individual kits and weights)

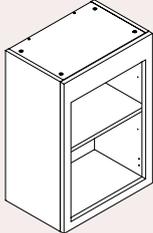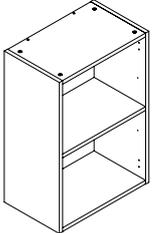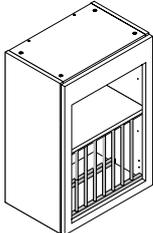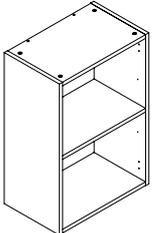

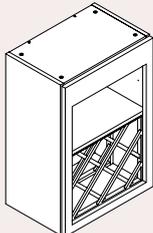
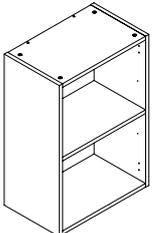

Ordered items: Component received:

Display units	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour	Fascia	Additional items
500 Open display unit with frame (base or wall) 		500 x 735 Open display unit	Matt white - 664326		Open display frame Available in Somerset, Cambridge, Sherwood.
			Kendal oak - 664300		
500 Open display unit with plate rack and frame 		500 x 735 Open display unit	Kendal oak - 664300		Open display frame Available in Somerset, Cambridge, Sherwood. 1 x 231635 Plate rack
500 Open display unit with wine rack and frame 		500 x 735 Open display unit	Matt white - 664326		Open display frame Available in Somerset, Cambridge, Sherwood. 1 x 231637 Wine rack trellis
			Kendal oak - 664300		
			Matt dove grey - 664231		
			Matt carbon - 664353		
			Denver oak - 664315		
			Pebble grey - 664112		
			Gloss white - 664202		
			Gloss cream - 664139		
Gloss pewter - 664372					

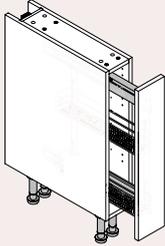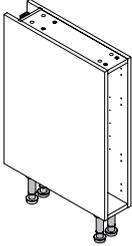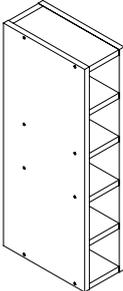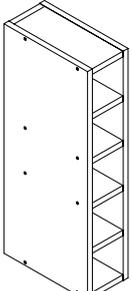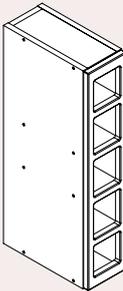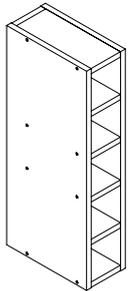Ordered items: Component received:










150mm units	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Additional items
			White	Grey		
150 Pull out unit with wirework baskets 		150 Pullout cabinet - flatpack	664175	664253	 150 Pull out fascia	1 x 564861 Mesh wirework Or 1 x 564862 Solid wirework
150 Wine rack 		150 Wine rack cabinet	Matt white - 664488	 (WRF15) 150 Wine rack frame	Available in Soho, Eton, Richmond	
			Kendal oak - 664491			
			Matt dove grey - 664496			
			Matt carbon - 664492			
			Denver oak - 664489			
			Pebble grey - 664494			
			Gloss white - 664490			
Gloss pewter - 664495						
150 Wine rack with frame 		150 Wine rack cabinet	Matt white - 664488	 (WRF15) 150 Wine rack frame		
			Kendal oak - 664491			
			Matt dove grey - 664496			
			Matt carbon - 664492			
			Pebble grey - 664494			
			Gloss white - 664490			
			Gloss pewter - 664495			

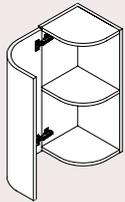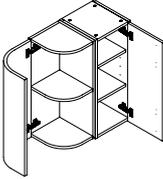Ordered items: Component received:

Curved units	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
			White	Grey			
300 External curved wall unit 		300 Wall / base curved end unit	664377	664396		External curved door Note: Certain ranges have left and right hand variants Available in Somerset, Holborn, Sherwood, Soho, Oxford. LH and RH variants in Soho and Holborn	
300 External curved base unit with 300 wall unit 	 	300 Wall / base curved end unit	664377	664396		300 External base/wall cabinet Note: Certain ranges have left and right hand variants 300 Wall cabinet Available in Somerset, Holborn, Sherwood, Soho, Oxford. LH and RH variants in Soho and Holborn	2 (90° Degree hinges)
		300 Wall cabinet	664313	664166			











Other base units

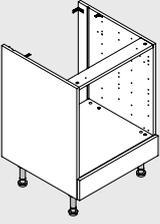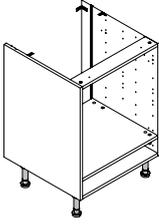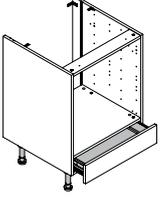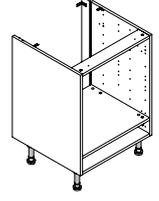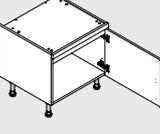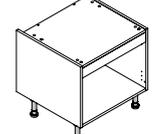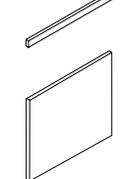Ordered items: Component received:

Other base units	Carcase cabinets are pre-assembled unless otherwise stated	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
			White	Grey			
600 Under oven housing unit 		300 Wall / base curved end unit	664377	664396	 131 x 596 Fascia		
		300 Wall cabinet	664313	664166			
600 Under oven housing unit with drawer 		600 Built under oven cabinet	664380	664150	 131 x 596 Fascia Not available in Holborn and Soho	1	1 x 780298 600 Shallow drawer box
600 Belfast sink unit with door 		600 Belfast sink support cabinet	664384	664284	 40 x 596 Filler panel 437 x 596 Door fascia Available in Somerset, Cambridge, Sherwood, Oxford	1	









Standard height larder storage units

Ordered items: Component received:













Standard height larder storage units	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
				White	Grey			
300 Larder unit 	Flatpack unit 	Pack 1	Larder ends	664485	664475		3	
		Pack 2	Horizontals and back panels	664463	664459			
300 Larder unit with pull out softclose basket 	Flatpack unit 	Pack 1	Larder ends	664485	664475		3	
		Pack 2	Horizontals and back panels	664463	664459			
400 Larder unit 	Flatpack unit 	Pack 1	Larder ends	664485	664475		3	
		Pack 2	Horizontals and back panels	664485	664448			
500 Larder unit 	Flatpack unit 	Pack 1	Larder ends	664485	664475		3	
		Pack 2	Horizontals and back panels	664436	664462			
500 Larder unit with swing softclose basket 	Flatpack unit 	Pack 1	Larder ends	664485	664475		3	Solid Basket 1 x 522666 - Larder Frame 1 x 328619 - Larder Runner 1 x 564893 - Solid Baskets Mesh 1 x 522666 - Frame 1 x 328619 - Runner 1 x 564892 - Mesh Baskets
		Pack 2	Horizontals and back panels	664436	664462			
600 Larder unit 	Flatpack unit 	Larder ends		664485	664475		3	
		Shelf pack box 1 of 2	Adjustable Shelves and Back Panels	664441	664447			
		Shelf pack box 2 of 2	Base panel, fixed shelves, support rails and front rail	664445	664460			

Standard height larder storage units

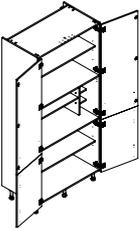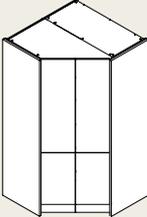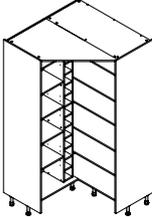Ordered items: Component received:





Standard height larder storage units	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour			Fascia	Hinges (pairs)	Additional items
				White	Grey	Oak			
		Larder ends		664485	664475			3	1 x 470977 - Frame 1 x 470988 - Door Frame 1 x 470985 - Runners 1 x 470987 - Baskets
		Shelf pack box 1 of 2	Adjustable Shelves and Back Panels	664441	664447				
		Shelf pack box 2 of 2	Base panel, fixed shelves, support rails and front rail	664445	664460				
		Larder ends		664192	664265	231718	 2 x 1319 x 496 Door fascia 2 x 500 Highline fascia Available in Holborn, Nordica, Cambridge, Sherwood grey, blue and french white, Soho, Oxford cream, dove grey, pebble grey and slate grey, Eton and Richmond		
		Larder pantry box 2 of 4	Pantry large fixed shelves, pantry small adjustable shelf, pantry internal partition ends, pantry / corner larder extra small shelves	664159	664206	231448			
		Grey larder pantry box 3 of 4	Top/base panel and large shelves	664308	664120	231829			
		Grey larder pantry box 4 of 4	Front rail and pantry back panels	664258	664363	231574			
		Larder Box 1 of 7	Larder Ends	664298	664388	231269	 2 x 1319 x 396 Door fascia 2 x 400 Highline fascia White and grey available in - holborn, Nordica, Cambridge, Sherwood grey, midnight blue and french white, oxford cream and dove grey.		1 x Corner pantry larder unit plinth kit
		Larder Box 2 of 7	Larder Ends	664232	664149	231263			
		Larder Box 3 of 7	Corner Larder Small Base Panel, Corner Larder Small Shelves, Pantry / Corn Larder Extra Small Shelves, Corner Larder Plinth Panels	664274	664275	231291			
		Larder Box 4 of 7	Corner Larder Shelves B (Fixed), Corner Larder Solid Back Panels	664278	664306	231293			
		Larder Box 5 of 7	Corner larder Angled Top Panel, Corner larder Large Top Panel, Corner Larder Large Base Panel, Corner Larder Solid Mid Back Panel	664400	664285	Available in Somerset, Cambridge, Sherwood, Oxford cream dove grey and olive green			
		Larder Box 6 of 7	Internal Larder ends	664397	664318				
		Larder Box 7 of 7	Adjustable Shelves	664327	664303				

Ordered items: Component received:

Tall height larder storage units	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
				White	Grey			
300 Tall larder unit 	Flatpack unit 	Pack 1	Tall larder ends	664487	664479		3	
		Pack 2	Tall horizontals and back panels	664453	664419			
300 Tall larder unit with pull out softclose basket 	Flatpack unit 	Pack 1	Tall larder ends	664487	664479		3	Chrome Powder Coated Solid Baskets 1 x 564891 - Solid baskets 1 x 399398 - Larder Frame 1 x 399399 - Larder runner Mesh 1 x 564889 - Mesh Baskets 1 x 399398 - Larder Frame 1 x 399399 - Larder runner Graphite 1 x 470991 - Larder Frame 1 x 470984 - Larder Runner 1 x 470981 - Solid Baskets
		Pack 2	Tall horizontals and back panels	664453	664419			
500 Tall larder unit 	Flatpack unit 	Pack 1	Tall larder ends	664487	664479		3	
		Pack 2	Tall horizontals and back panels	664439	664407			
500 Tall larder unit with swing softclose basket 	Flatpack unit 	Pack 1	Tall larder ends	664487	664479		3	Solid Basket 1 x 522666 - Larder Frame 1 x 328619 - Larder Runner 1 x 564893 - Solid Baskets Mesh 1 x 522666 - Frame 1 x 328619 - Runner 1 x 564892 - Mesh Baskets
		Pack 2	Tall horizontals and back panels	664439	664407			
600 Tall larder unit 	Flatpack unit 	Pack 1	Tall larder ends	664487	664479		3	
		Box 1 of 2	Adjustable Shelves and Back Panels for Tall Larder	664406	664443			
		Box 2 of 2	Base panel, fixed shelves, support rails and front rail	664445	664460			
















Tall height larder storage units

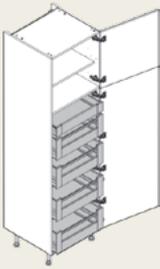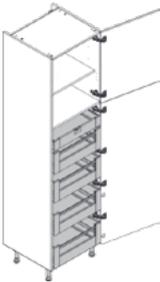Ordered items: Component received:

Tall height larder storage units	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
				White	Grey			
600 Space tower larder unit 	Flatpack unit 	Pack 1	Standard larder ends	664485	664475			1 x 242079 - Intivo concealed drawer 4 x 398899 - Intivo Deep Internal Drawer
		Box 1 of 2	Adjustable Shelves and Back Panels	664441	664447			
		Box 2 of 2	Base panel, fixed shelves, support rails and front rail	664445	664460			
600 Tall space tower larder unit 	Flatpack unit 	Pack 1	Tall Larder Ends	664487	664479			1 x 242079 - Intivo concealed drawer 4 x 398899 - Intivo Deep Internal Drawer
		Box 1 of 2	Adjustable Shelves and Back Panels for Tall Larder	664406	664443			
		Box 2 of 2	Base panel, fixed shelves, support rails and front rail	664445	664460			











Mid height larder and appliance units

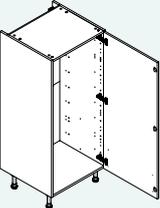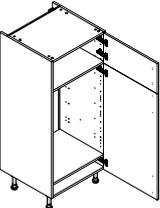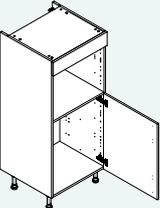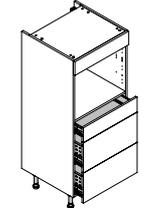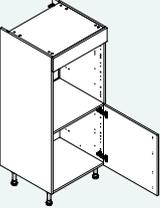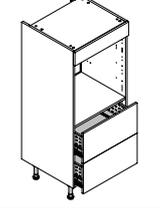Ordered items: Component received:












Mid height larder and appliance units	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items	
				White	Grey				
600 Mid height unit type A - larder 	Flatpack unit 	Pack 1	Larder ends	664485	664475		1319 x 596 Door fascia Not available in Soho	2	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Mid height unit type B - fridge or freezer 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		296 x 596 Door fascia 1025 x 596 Door fascia	2	1 x 460690 - Flap Stay
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Mid height unit type C - compact oven with door 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		131 x 596 Fascia 600 Highline fascia	1	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Mid height unit type D - compact oven with drawers 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		131 x 596 fascia Somerset, Nordica, Cambridge, Sherwood, Oxford, Eton, Richmond 1 x 143 x 596mm and 2 x 290 x 596mm drawer fascias Holborn, Soho and Options 600 3-Pan drawer fascia set	1	1 x 780298 - Blum Shallow drawerbox 2 x 243117 - Blum deep drawerbox
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Mid height unit type E - single oven with door 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		131 x 596 Fascia 584 x 596 Door fascia	1	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Mid height unit type F - single oven with drawers 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		131 x 596 fascia 2 x 290 x 596 mm drawer fascias	1	2 x 243117 - Blum deep drawerbox
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				

Standard height appliance units

Ordered items: Component received:













Standard height appliance units	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items	
				White	Grey				
600 Appliance housing unit A - single oven with door 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		600 Highline fascia 131 x 596 Fascia 584 x 596 Door fascia	2	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit B - double oven with door 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		437 x 596 Door fascia 131 x 596 Fascia 584 x 596 Door fascia	2	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit C - microwave and oven 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		437 x 596 Door fascia 110 x 596 Filler panel 437 x 596 Door fascia	2	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit D - two single ovens 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		290 x 596 Door fascia 110 x 596 Filler panel 437 x 596 Door fascia	2	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit E - fridge/freezer 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		584 x 596 Door fascia 1025 x 596 Door fascia 437 x 596 Door fascia	2 and 1 x appliance hinge pack	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 appliance housing unit F/ N - Fridge Freezer Note: Type N is the same but without the middle shelf 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		1025 x 596 Door fascia 1025 x 596 Door fascia	2	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				

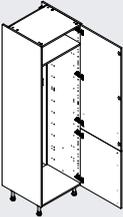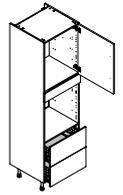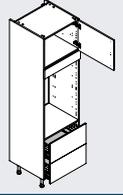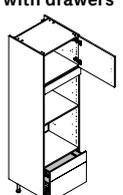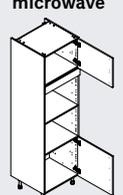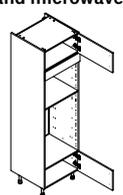Ordered items: Component received:












Standard height appliance units	Carcass cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items	
				White	Grey				
600 Appliance housing unit G - fridge freezer 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		1319 x 596 Door fascia 600 Highline fascia	3	1 x 476585 - Appliance strap pack
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit H - single oven with drawers 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		600 Highline fascia 131 x 596 Fascia 600 3-Pan drawer fascia Note: Only larger fascias required	1	2 x 243117 - Blum deep drawerbox
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit J - double oven with drawers 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		437 x 596 Door fascia 131 x 596 Fascia 600 3-Pan drawer fascia Note: Only larger fascias required	1	2 x 243117 - Blum deep drawerbox
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit K - microwave and oven with drawers 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		437 x 596 Door fascia 110 x 596 Filler panel 600 3-Pan drawer fascia Note: Only top and bottom fascias required	1	1 x 780298 - Blum Shallow Drawerbox 1 x 243117 - Blum deep drawerbox
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit L - compact oven and microwave 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		437 x 596 Door fascia 110 x 596 Filler panel 584 x 596 Door fascia	2	
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				
600 Appliance housing unit M - double oven and microwave 	Flatpack unit 	Pack 1	Appliance larder ends	664482	664476		290 x 596 Door fascia 110 x 596 Filler panel 290 x 596 Door fascia	2	1 x 460690 Flap Stay 1 x 243117 - Blum deep drawerbox
		Shelf pack box 1 of 2	Shelves and back panels	664441	664447				
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460				










Tall height appliance units

Ordered items: Component received:

Tall height appliance units	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
				White	Grey			
600 Tall appliance housing unit A - single oven with door 	Flatpack unit 	Pack 1	Tall appliance larder ends	664480	664481		2	
		Shelf pack box 1 of 2	Shelves and back panels	664406	664443			
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460			
600 Tall appliance housing unit B - double oven with door 	Flatpack unit 	Pack 1	Tall appliance larder ends	664480	664481		2	
		Shelf pack box 1 of 2	Shelves and back panels	664406	664443			
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460			
600 Tall appliance housing unit C - microwave and oven 	Flatpack unit 	Pack 1	Tall appliance larder ends	664480	664481		2	
		Shelf pack box 1 of 2	Shelves and back panels	664406	664443			
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460			
600 Tall appliance housing unit D - two single ovens 	Flatpack unit 	Pack 1	Tall appliance larder ends	664480	664481		2	
		Shelf pack box 1 of 2	Shelves and back panels	664406	664443			
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460			
600 Tall appliance housing unit E - fridge/freezer 	Flatpack unit 	Pack 1	Tall appliance larder ends	664480	664481		3	
		Shelf pack box 1 of 2	Shelves and back panels	664406	664443			
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460			
600 Tall appliance housing unit F - fridge freezer 	Flatpack unit 	Pack 1	Tall appliance larder ends	664480	664481		2	
		Shelf pack box 1 of 2	Shelves and back panels	664406	664443			
		Shelf pack box 2 of 2	Rails, top and base panel	664445	664460			






Ordered items: Component received:

Tall height appliance units	Carcase cabinets are pre-assembled unless otherwise stated	Pack	Contents	Product number and colour		Fascia	Hinges (pairs)	Additional items
				White	Grey			
600 Tall appliance housing unit G - single oven with door 	Flatpack unit 	Pack 1	Tall Appliance Larder Ends	664480	664481		3	1 x 476585 - Appliance strap pack
		Shelf Pack Box 1 of 2	Shelves and Back panels	664406	664443			
		Shelf Pack Box 2 of 2	Rails, Top and Base Panel	664445	664460			
600 Tall appliance housing unit H - single oven with drawers 	Flatpack unit 	Pack 1	Tall Appliance Larder Ends	664480	664481		1	1 x 780298 - Blum Shallow Drawerbox 2 x 243117 - Blum deep drawerbox
		Shelf Pack Box 1 of 2	Shelves and Back panels	664406	664443			
		Shelf Pack Box 2 of 2	Rails, Top and Base Panel	664445	664460			
600 Tall appliance housing unit J - double oven with drawers 	Flatpack unit 	Pack 1	Tall Appliance Larder Ends	664480	664481		1	2 x 243117 - Blum deep drawerbox
		Shelf Pack Box 1 of 2	Shelves and Back panels	664406	664443			
		Shelf Pack Box 2 of 2	Rails, Top and Base Panel	664445	664460			
600 Tall appliance housing unit K - microwave and oven with drawers 	Flatpack unit 	Pack 1	Tall Appliance Larder Ends	664480	664481		1	1 x 780298 - Blum Shallow Drawerbox 1 x 243117 - Blum deep drawerbox
		Shelf Pack Box 1 of 2	Shelves and Back panels	664406	664443			
		Shelf Pack Box 2 of 2	Rails, Top and Base Panel	664445	664460			
600 Tall appliance housing unit L - compact oven and microwave 	Flatpack unit 	Pack 1	Tall Appliance Larder Ends	664480	664481		2	584 x 596 Door fascia 110 x 596 Filler 584 x 596 Door fascia Not available in options
		Shelf Pack Box 1 of 2	Shelves and Back panels	664406	664443			
		Shelf Pack Box 2 of 2	Rails, Top and Base Panel	664445	664460			

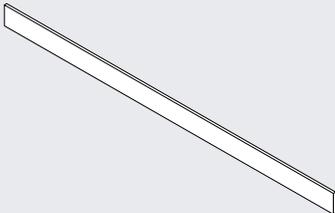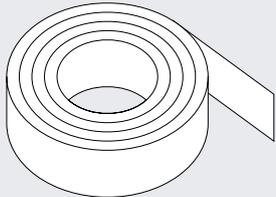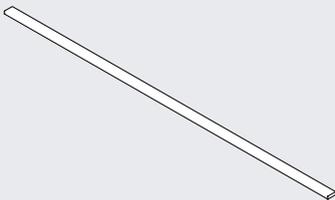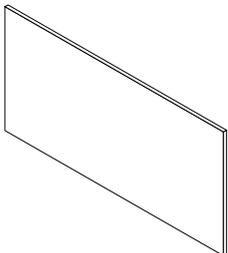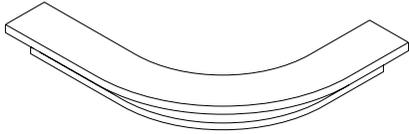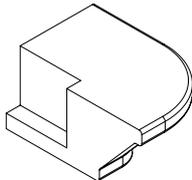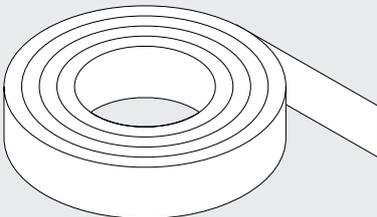Premium panels	Other Accessories	
<p>Decor Base Panel 890 x 600</p> 	<p>2.6m Continuous Plinth</p> 	<p>3.2m Roll of 60mm Edging Tape Not available in options</p> 
<p>Decor Wall Panel 795 x 337</p> 	<p>(CBP) External Curved Plinth Available Somerset, Holborn, Soho, Oxford and Sherwood</p> 	<p>Corner Base Blanking Panel. Note: This item is optional and not required to fit the corner base unit. 664478 - White; 664473 - Grey</p> 
<p>(TDPTW18) Decor Tall Wall Panel 956 x 337 Not available in Options</p> 	<p>2.6m Modern Cornice, Pelmet and Classic Pelmet Also comes with 1 x 467591 Fixing block</p> 	<p>Base Corner Filler 1 x 467591 Fixing block pack</p> 
<p>(TDPD18) Decor Dresser Panel 1283 x 337 Available in Sherwood, Somerset, Cambridge and Oxford</p> 	<p>2.6m Classic Cornice Available in Somerset, Cambridge, Sherwood and Oxford 1 x 476590 - Classic cornice screwpack</p> 	<p>Tall Pilaster</p> 
<p>Standard and Tall Appliance/Larder Panel 2400 x 600</p> 	<p>(CBDQ) External Curve Modern Cornice and Pelmet Block Note: Style will vary by range</p> 	<p>Tall Curved Corner Post Somerset, Holborn, Cambridge, Sherwood, Soho, Eton and Richmond</p> 
<p>Breakfast Bar Back Panel 890 x 2000</p> 	<p>External Curve Classic Cornice NOTE: Item is handed Available only in Somerset</p> 	<p>External Curve Classic Cornice NOTE: Item is handed</p> 
	<p>10m Roll of 18mm Edging Tape</p> 	

Section 2: Fittings guide

This shows the various fittings that are used to assemble and install your kitchen. Refer also to the individual instruction leaflets provided with flatpack units. In the unlikely event of any missing or damaged parts, please contact your local branch and quote the names and reference numbers shown below where possible (for example, a Cam is Ref. 154085). Please study this list so you can recognise fittings as you open the boxes. Items are not shown to scale.

Ref. No.	Item	Ref. No.	Item	Ref. No.	Item	Ref. No.	Item
BMX308		BMX316	 19mm Cover Cap	152181	 107° Hinge	153109	Metal drawer box kit each containing:  Metal Box Fascia Bracket (Pair)
BMX309	 12mm	BMX314	 Fascia Fixing	152161	 170° Hinge		Metal Box Drawer Runners (LH and RH) 
BMX305	 12mm	BMX315	 3mm Shelf Support	152165	 Framed Fascia Hinge		Metal Box Drawer Sides (LH and RH) 
BMX313	 15mm	BMX319	 5mm Shelf Support	152108	 Corner Hinge		
BMX311	 25mm	BMX321	 Lugged Shelf Support	152106	 45° Hinge	 Tandem Fascia Bracket	
BMX307	 30mm	BMX502	 Leg Boss	152168	 170° Hinge Soft Close Adaptor	 Tandem Cover (Pair)	
BMX306	 45mm	BMX501	 Leg Tube	152169	 Framed Fascia Soft Close Adaptor	 Tandem Dresser Drawer Runner (Pair)	
BMX324	 8mm Cover Cap White	BMX503	 Leg Plinth Clip	152107	 45° Hinge Soft Close Adaptor	 Tandem Dresser Drawer Side (Pair)	
BMX325	 8mm Cover Cap Grey	BMX323	 Metal Plate	152162	 Standard Hinge Plate	 Tandem Drawer Runner (Pair)	
BMX326	 8mm Cover Cap Brown	BMX320	 Door Spacer	152166	 Framed Fascia Hinge Plate	 Tandem Drawer Side (Pair)	
BMX302	 QF TL2 Dowel	BMX322	 Wall Hanging Plate	152100	 Special Use Hinge Plate	 Tandem Drawer Bracket (Pair)	
BMX303	 Wooden Dowel 8x30mm	LH - BMX401 RH - BMX402	 White Wall Hanging Bracket	152148	 107° Hinge Cover Cap	 Tandem Pan Drawer Bracket (Pair)	
BMX301	 Cam	LH - BMX403 RH - BMX404	 Grey Wall Hanging Bracket	152149	 170° Hinge Cover Cap	 Tandem Pan Drawer Box Side	
BMX318	 Joining Bolt (Female)	848310	 Hinge hole filler pack	460690	Stay arm kit each containing:  1	 Tandem Pan Drawer Gallery Rail	
BMX317	 Joining Bolt (Male)	BMX312	 Door Buffer		 1		
BMX304	 Angle Bracket	152160	 90° Hinge		 1		
					 5		

Section 3:

Handy hints on preparation and installation

Please spend five minutes reading this section before commencing to assemble and install a Benchmarx Kitchen



CAUTION!

Some pieces of hardware could be hazardous to small children.

Keep all these items out of reach and do not leave children unattended in the assembly area.

Many of the units, particularly the double door units and tall units, are heavy and should be lifted with caution.

To reduce risk, do not fit doors or drawers until the units have been attached to the walls.

DO NOT USE A KNIFE TO OPEN THE BOXES AS THIS MAY DAMAGE THE CONTENTS.

Read the Plans

- Find and review the plans and any other drawings used to prepare customer orders. Pay particular attention to any units that have special features or will be positioned unusually.

Preparation

- Before starting any assembly, spend some time preparing the area where the units will be fitted.
- To help your project run smoothly, make sure you've checked the measurements and dimensions before you start work.
- After checking that all the units ordered have been delivered, the area should be stripped out and any obstructions such as old skirting, disused pipes, tiles etc. removed.
- It is not advisable to fit timber doors in newly constructed or recently plastered rooms. High moisture content in the environment may cause the doors to swell and split.
- Don't store the products in an unsuitable place or on hard surfaces such as concrete etc. as they may get damaged.
- To get long-term use and performance from Benchmarx products, make sure the kitchen is installed as per these guidelines.

- Protect the finish on panels by laying them on the floor and using the packaging to prevent scratches.
- Do not overtighten screws and be particularly careful when using power screwdrivers.
- Make sure that all the parts and hardware have been enclosed. Contact your local Benchmarx store if there is anything missing or damaged.
- As certain units (for example tall units and corner base units) are supplied flatpack to ensure they reach you in the best possible condition, it is recommended that these are built in the room they are to be installed in.

Services

- If the customer wishes to fit or move any electric, gas or water points, now is the time to do this.
- Services to appliances should be to the manufacturer's specification and fitted by a qualified person.
- Benchmarx designers have created clear, easy-to-follow instructions but, if you have any difficulties, please call your local store who can help at any stage of the process.


Walls and Floor

- Make sure all plasterwork is sound, particularly where the units will be attached. This is between 800 and 870mm up the wall for base units and between 2100 and 2400mm from the floor for wall units. It is important to make sure all plaster is dry before fitting units, as damage may occur to the units.
- Floors should be sound and able to take the weight of the units and appliances.


Tools

- The following tools are necessary for assembling and installing the units:


Cross head No2 Screwdriver



5mm Flat Screwdriver




Bradawl



Metric Tape Measure




Spirit Level




Set Square(s)



Electric Drill with 15mm, 10mm, 8mm, 5mm and 3mm diameter wood drill bits and appropriate masonry drill bits




G-Clamps (minimum of two)




Dustmask (to be worn whenever cutting MDF)



Mallet/Hammer



Mitre Block




- Along with the above, you will also require a panel saw, jig saw and mitre saw. Always use a workbench or a firm work surface.

Decorating

- Although the units will cover a large amount of the floors and walls, it may well be easier to decorate wall, ceiling and floor areas that will show around the units before installation. This is particularly true of the wall and ceiling above the wall units and space between the base and wall units. If tiles are to be fitted, it is recommended that this is done after the units and worktop have been installed.

Section 4: Installation sequence

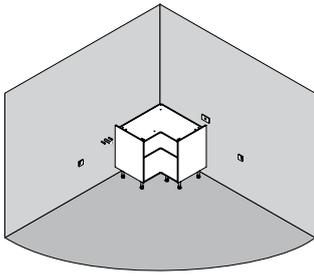Step 1 - Start in a corner



Begin in a corner. If a corner unit is to be fitted, assemble (if required) and position this unit in the corner.

If the units are to be fitted between two corners, refer to the plan to see which is the starting point.

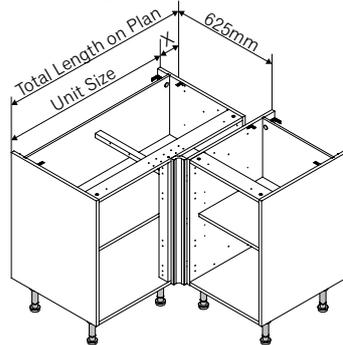
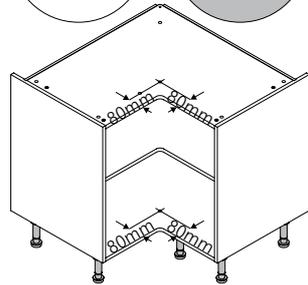
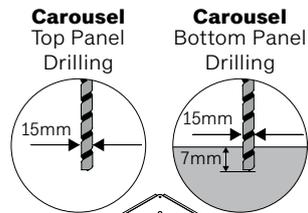
The units illustrated on the following two pages are all commonly used to start a run of units in a corner.

If the kitchen does not fit up to a corner, remember to allow for curve units or show ends when positioning the first unit.

925 x 925 Corner Unit and Internal Corner Base Unit


The shelf or carousel **MUST** be fitted before installation.

To fit the carousel, it is necessary to drill a 15mm diameter hole in the top and bottom panel in the locations shown in the illustration.



Corner Base Unit

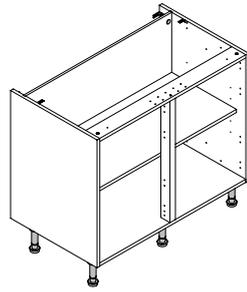Follow installation instructions below for the correct position in the corner.






Standard Base Unit

This will begin a straight run of units.

Appliance Housing or Larder Unit

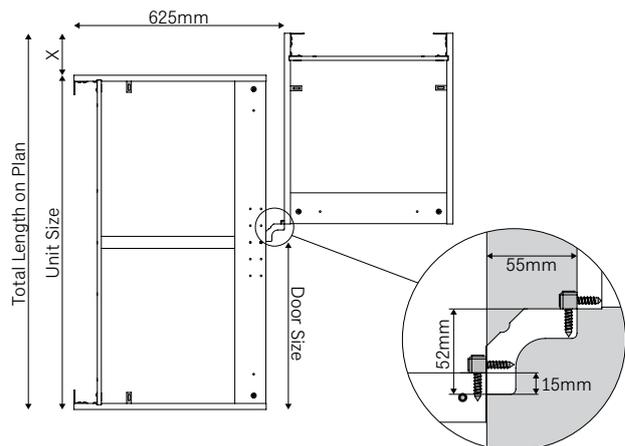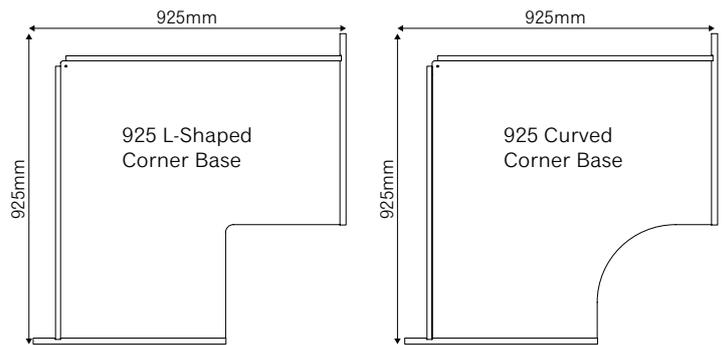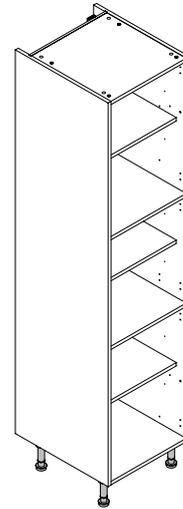This will begin a straight run of units.




When installing a Corner Base Unit, be careful with the position of the unit and be sure to check the customer's plan. There are a wide variety of both the 800mm and 1000mm options. Each has a different size door, so demands a different amount of wall space, which in turn means the void (x) on the above image is different. Please use the table below as a guide to fitting this unit in the correct space. The customer's plan will also detail the requirements. See following page for drilling advice.

Unit Size (mm)	Required Door Size (mm)	Total Length in Plan (mm)	Void "x" (mm)
800	300	925	125
800	400	1025	225
800	500	1125	325
1000	400	1025	25
1000	450	1075	75
1000	500	1125	125
1000	600	1225	225

**Corner Base Unit
Drilling Advice**

In order to allow for the numerous configurations, this unit requires drilling at locations A, B and C as shown opposite. The holes are part drilled for ease of use. Use a 5mm drill, and drill into a piece of scrap wood.

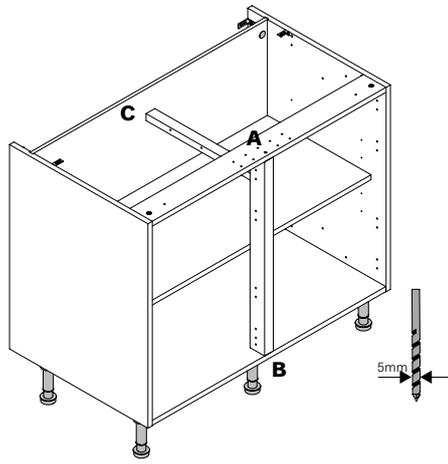NOTE: Location C on the back panel only needs drilling if unit is to be drawerline.




**925 x 925 Corner
Larder Unit**




The shelf or carousel in the bottom part of the unit **MUST** be fitted before installation.

To fit the carousel, it is necessary to drill a 15mm diameter hole in the top and bottom panel in the locations shown in the illustration.

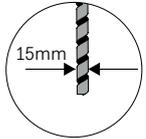**Carousel
Top Panel
Drilling**





**Carousel
Bottom Panel
Drilling**

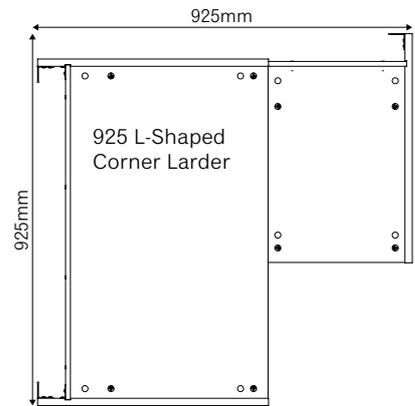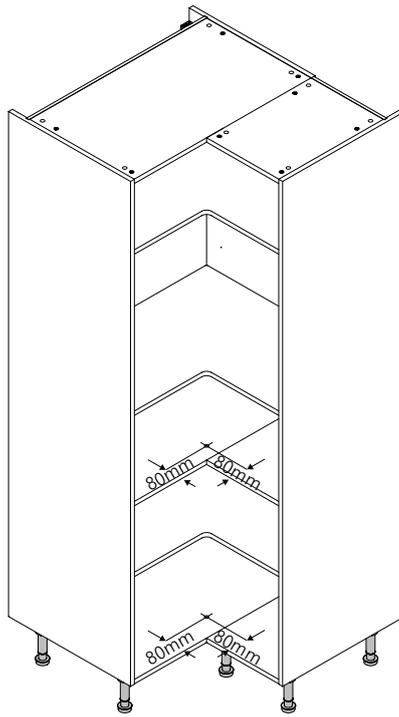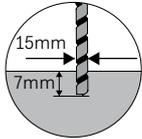

Corner Larder Pantry Unit


This unit **MUST** be fitted with decorative ends to ensure door hinges do not clash with adjacent worktops. Allow for these when fitting.

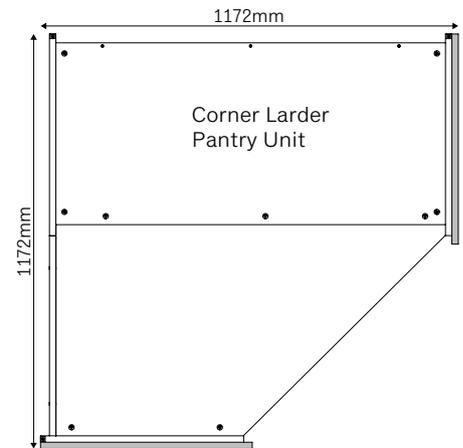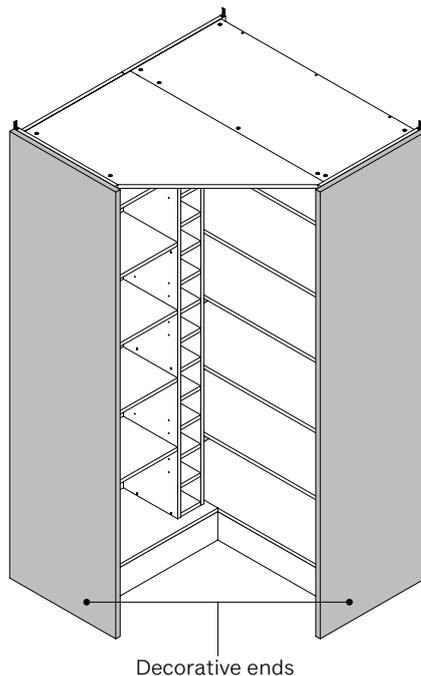Note: Ends and plinth kit should be planned in with customer's kitchen. Contact nearest branch if either are missing.




Note: Measurement of 1172mm includes the decorative end panels.

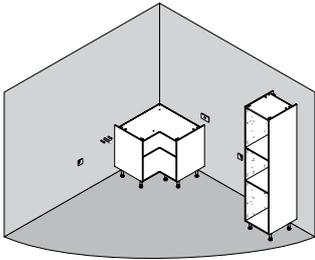Step 2 - Tall units




Assemble the appliance/larder units and place in position as shown on the plan.

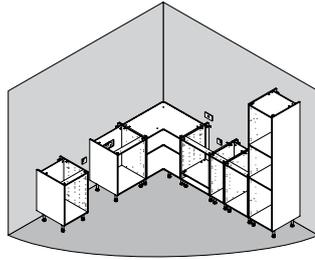Step 3 - Assemble and position the base units




Assemble any remaining base units and place in position.

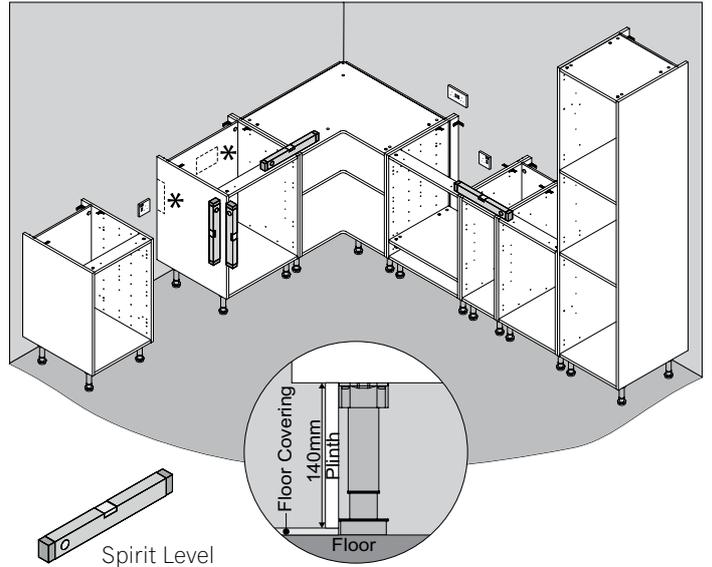*Sink units should be cut as necessary for the plumbing. Find the lowest point on the floor. The legs on the unit in this position should be 140mm high plus the thickness of any flooring that will be underneath the plinth. Level the remaining base units, working away from this unit.




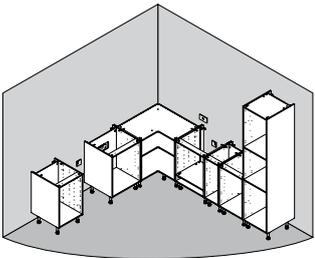Step 4 - Connect the base units and fix to the wall




Once the units are correctly positioned, start in a corner and fix the units to the wall and connect them together.

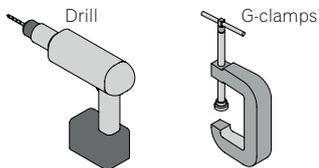
Fix to the wall with the supplied brackets. Use plugs or other suitable fixings of the correct type for the wall constructions. Tall and appliance units in particular must be securely fixed.







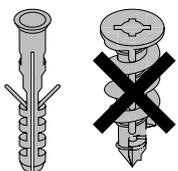
Please use suitable fixings (not supplied)



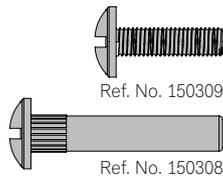Plasterboard Fixings - Not suitable for many units. See notes opposite.







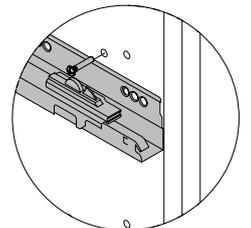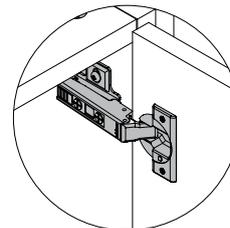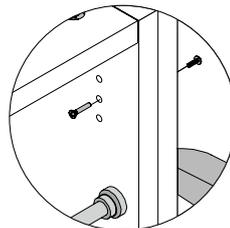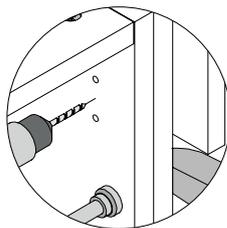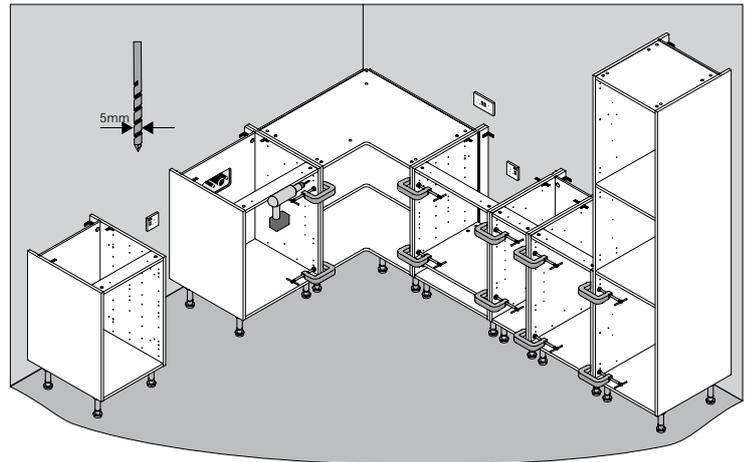The connecting bolts used to connect the units together can be hidden by putting them adjacent to the hinge plate, shelf or drawer runner.




Clamp the units together. Decide where to locate the connection bolts. This shows the hole being drilled behind a hinge location. Drill through with a 5mm wood drill into a piece of scrap wood. Push in the bolt and tighten the screw.

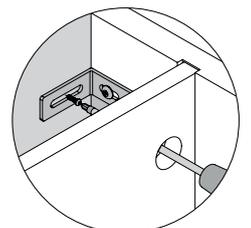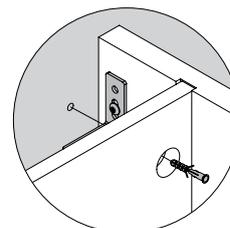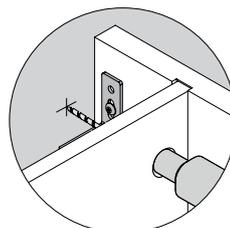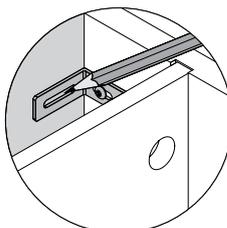Alternative position above a drawer runner.



Mark the position for drilling. Remove a screw from the bracket and move the bracket out of the way. Drill using a bit suitable for the wall and the size of wall plug. Fit the plug. Put the bracket back in position, replace the screw and fit a suitable screw into the wall. Plasterboard is not strong enough to support wall or tall units so plasterboard fixings are not suitable for fixing those units, but are acceptable for base units only. Tall units, especially ones with appliances, need to be very securely fixed to the wall. If necessary, fit a batten to studs within the wall and then fix the unit to the batten.

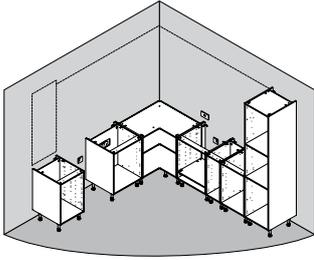Step 5 - Mark a line for the wall hanging plates




Mark a line around the room at the height for the wall hanging plates.

Kitchens **WITH** tall or standard larder/appliance housing units: measure 64mm down from the top of the larder/appliance housing unit.


Kitchens **WITHOUT** tall or standard larder/appliance housing units but **WITH** standard wall units: measure 2134mm up from the floor.

Kitchens **WITHOUT** tall or standard larder/appliance housing units but **WITH** tall wall units: measure 2281mm up from the floor.

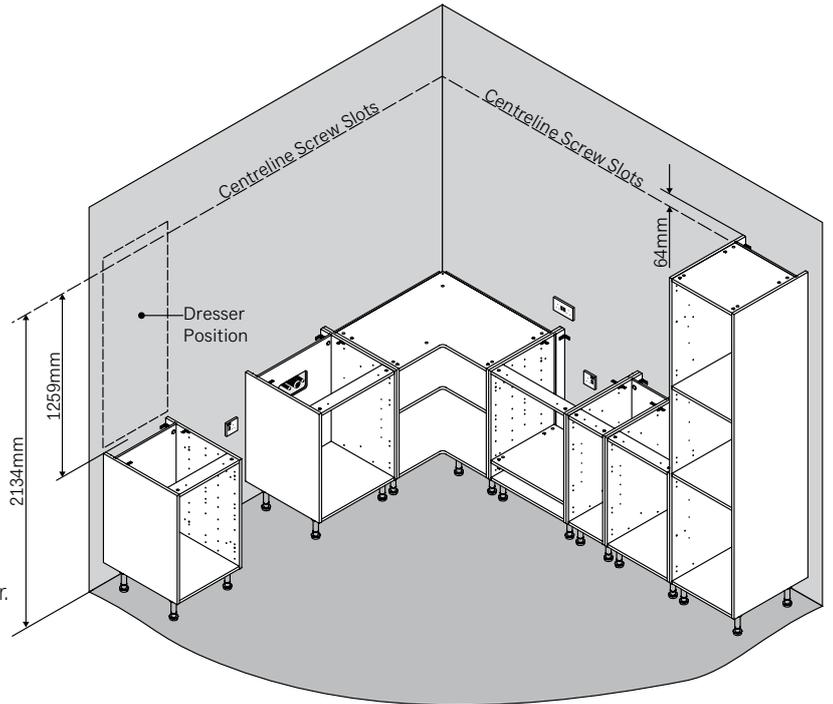If there are dresser units, make sure there is 1259mm between the line and the top of the base units. See page 45 for further information.



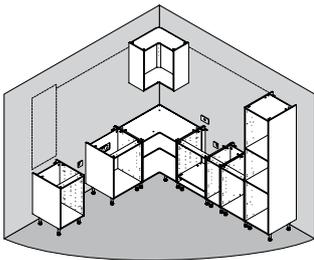Step 6 - Assemble and fit the corner wall units




CAUTION!

2 people are required for this stage

Assemble the corner wall unit. There are a number of types of corner unit.

Installation for the L-Shaped and internal curved cabinet are as follows: Fix the wall hanging plates to the wall as shown in the instructions. They are fitted to the wall 20mm in from the outside edge of the unit. Use plugs or other suitable fixings of the correct type for the wall construction.

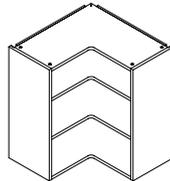
L - Shaped Corner Wall



Installation for the 600 closed corner wall unit with blanking panel is as follows:

This must be fitted to the wall whilst leaving a 25mm gap between the unit side panel and the wall.







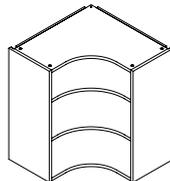
625 Internal Curved Corner Wall Unit



Wall hanging plates must be securely fixed to the wall. If necessary, fit a batten to studs within the wall and then fix the plates to the batten. Seek additional assistance if required.

Hang the unit on the plates. This requires two people. Don't adjust the hanging bracket at this stage.

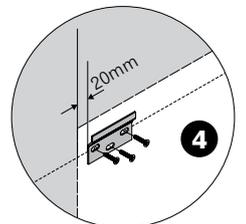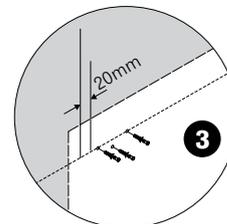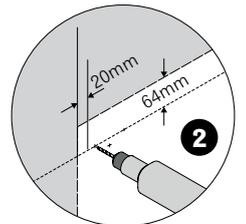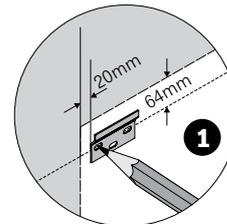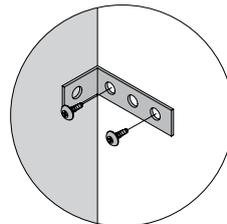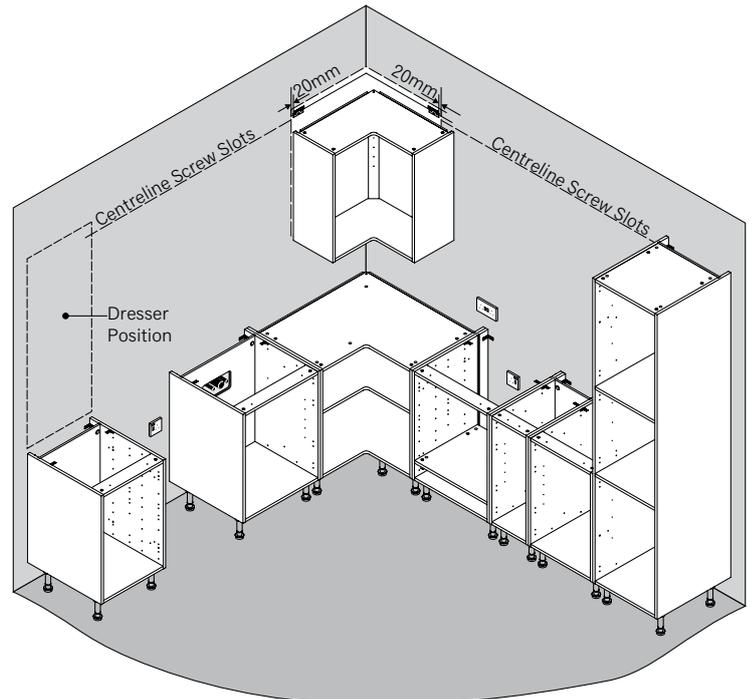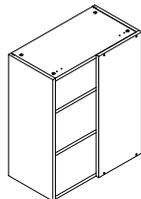600 Closed Corner Wall Unit




Ensure any larger units have the supplied L-Brackets fitted to the underside and use wall appropriate screws (not supplied) to secure to the wall.



Plasterboard Fixing - Not suitable for wall units.

See notes in step 4.

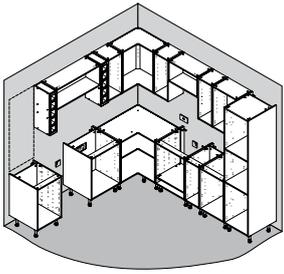Step 7 - Assemble and fit the remaining wall and feature units



Assemble the remaining wall units and accessories. Hang the remaining wall units.

Level the wall units by adjusting the wall hanging brackets and fit the covers. Fix the standard units together with connecting bolts (see step 4).

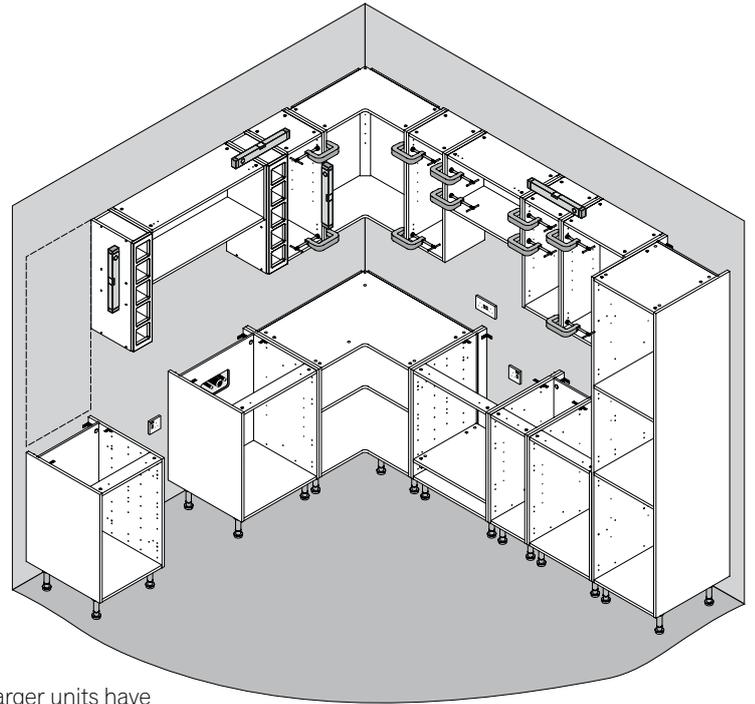
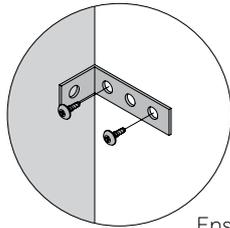
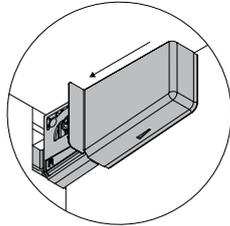
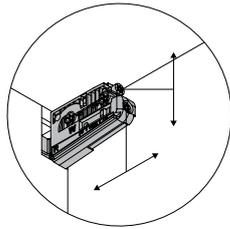
Certain accessories are connected with 30mm screws fitted from the adjacent units instead of connecting bolts. Fit wine rack frames before fixing to other units.

After fixing, tighten the units to the wall.





Fitting Accessories

Use 30mm screws to connect the accessories to other units. Countersinking the screws allows them to be fitted behind hinge plates, shelves or drawer runners.


Use a 3mm drill to make 30mm deep pilot holes. Do not drill through both units.



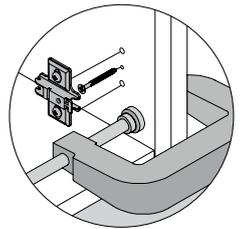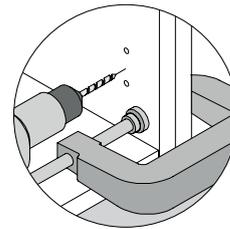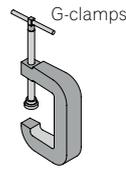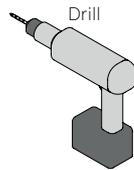Ensure any larger units have the supplied L-Brackets fitted to the underside and use wall appropriate screws (not supplied) to secure to the wall.



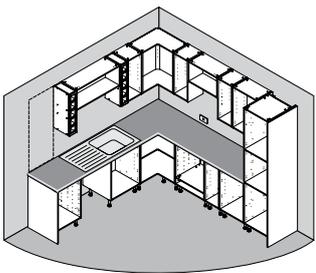Step 8 - Fit decor ends and laminate worktops



If décor panels have been ordered, fit them now. See page 23 for details.

Cut the worktop to the correct size and apply edging.

Mark and cut out the holes for the sinks and hobs.

Fit the worktops. For laminate worktops, see opposite, for other worktop types, please see instructions from the supplier.

At the front, the worktop is held in place by screws through the front rails. At the rear, use roundhead screws through the brackets. Fit the hob. Refer to the manufacturer's handbook.

Fit the sink. Finish plumbing.

Worktops

Cutting - Before cutting be sure to double-check all measurements.

If using an electric circular or jig saw, cut the worktop face down so that the saw teeth cut into the laminate surface starting from the profiled front edge.

If using a hand saw (10 to 12 teeth per 25mm), cut the worktop face up. Always start from the profiled front edge and keep the saw at a low angle.

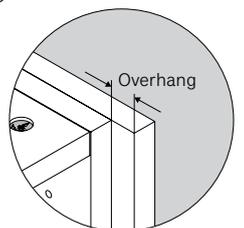
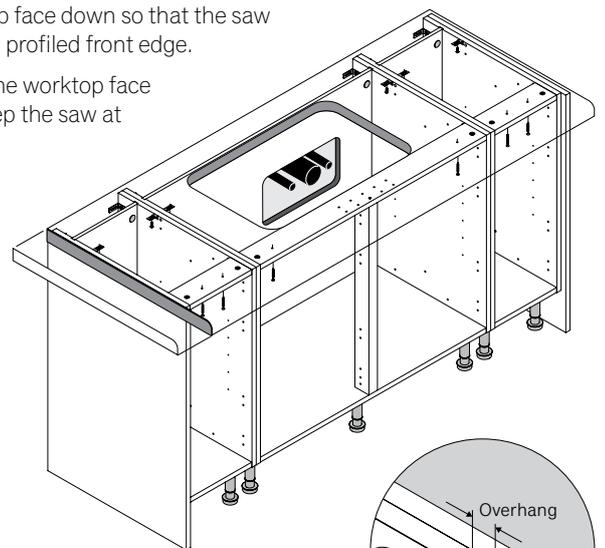
Once cut, the worktop can be trimmed and cleaned using a portable hand router to achieve a perfect chip-free cut.

Joints - Ensure the two edges are clean and apply a continuous bead of sealant down entire length of joint. Use three tension bolts to tighten until joint is tight and allows excess sealant to form over joint, then wipe off all excess.


Sealing - All cut edges where raw chipboard is exposed on both the worktop and the carcass must be sealed with a moisture resistant sealer such as gloss paint, varnish or silicone sealant.

Cut-Outs - Any cut-outs should be carefully measured and marked. Work from the decorative face, drill through corners with a 12mm drill bit to allow access for jig saw. It is recommended to leave at least 250mm between cut-outs and from cut-outs to edge of worktop. Leave a 50mm gap between cut-outs and the front and back edges.

Always follow instructions on sealant labels.



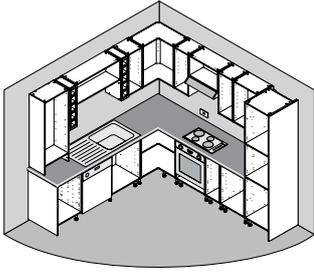Step 9 - Fit dressers, cornice, pelmet and appliances



Fit the dressers, see page 45 for further information. Tile the walls and finish decorating.

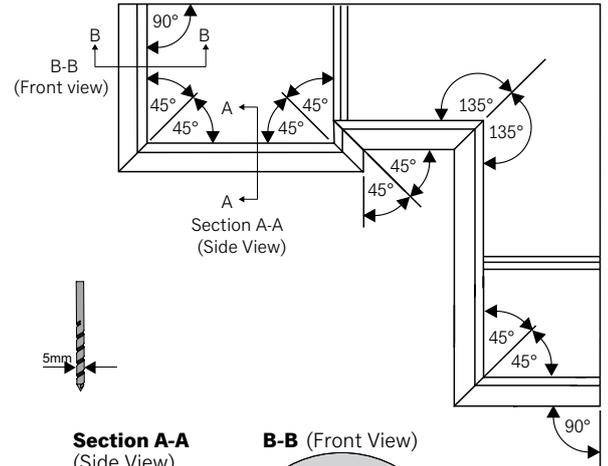
Mitre and fit the cornice and light pelmet.

Fit remaining appliances, refer to manufacturer's instructions for information. Pay particular attention to notes on ventilation.

Cornice and Pelmet

The cornice and pelmet should be cut using a mitre block and saw. Follow the diagram for the correct angles. Different styles of cornice and pelmet are fitted in slightly different positions. See the illustration for guidance. Section A-A shows the view from the side and how the items overhang the doors. Section B-B shows the view from the front and how the items overhang the sides.

Drill 5mm holes or attach half blocks 50mm in from each end and every 450mm along straight sections.





Section A-A
(Side View)



B-B (Front View)

Section A-A
(Side View)

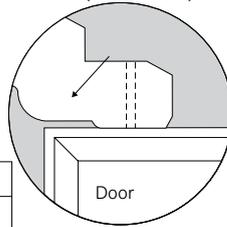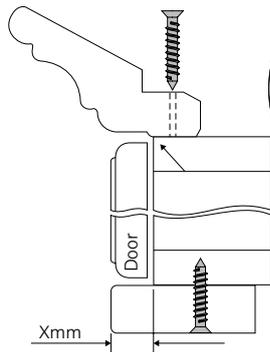
B-B (Front View)



Xmm being the thickness of the door.

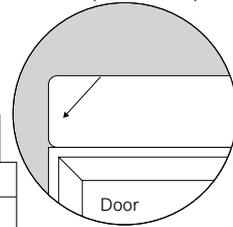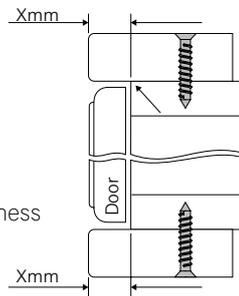

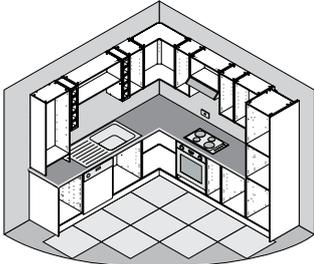Step 10 - Flooring and plinth




Lay flooring. The flooring usually stops at the legs but will need to continue under units with decorative legs.


Fit the plinth. The plinth may need to be trimmed to allow for irregularities in the floor.

A return plinth is made from a section of continuous plinth. It will need to be notched to fit around the legs. It is fitted behind the plinth along the front. Any cut edges should be covered with the supplied edging tape using contact adhesive.

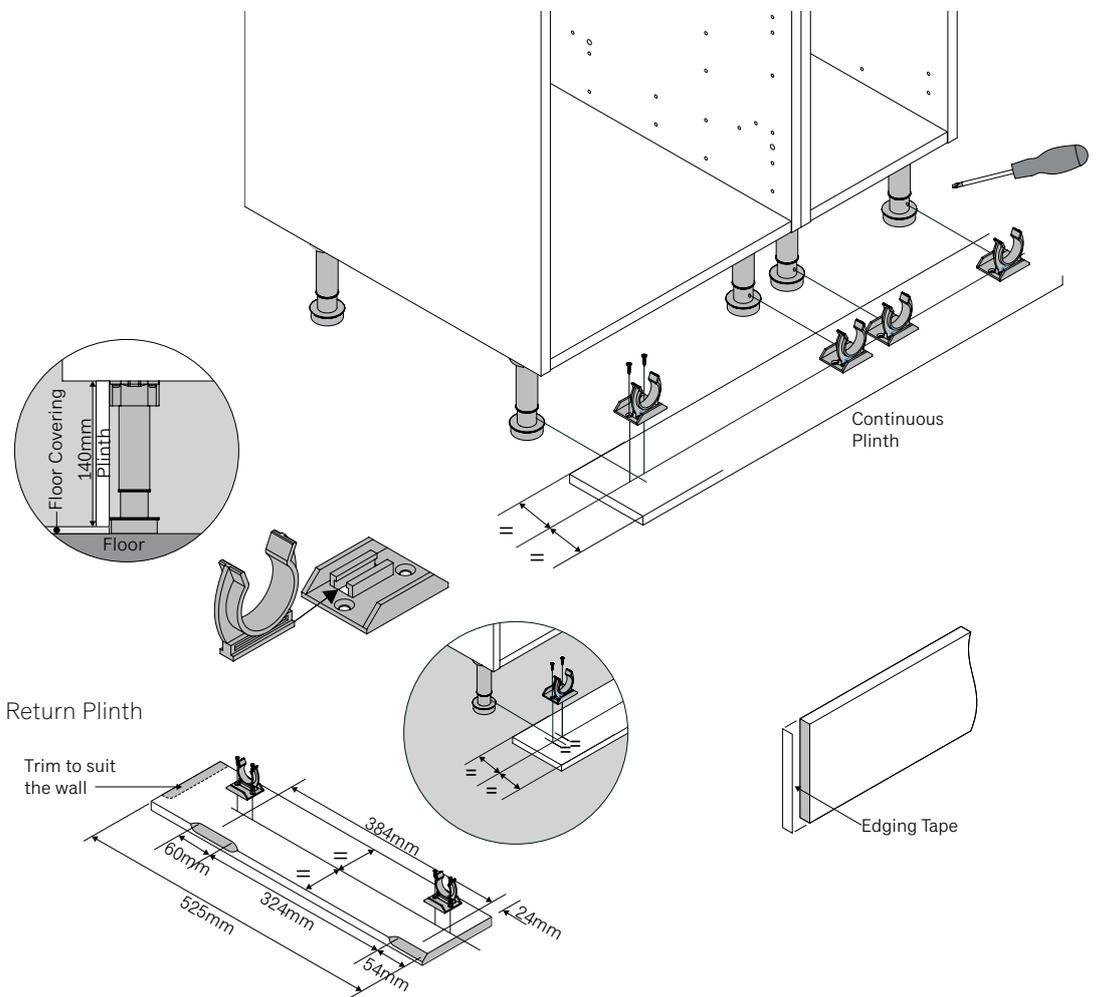On the return, fit the plinth clips the other way up to avoid clashing with the plinth clip on the front.



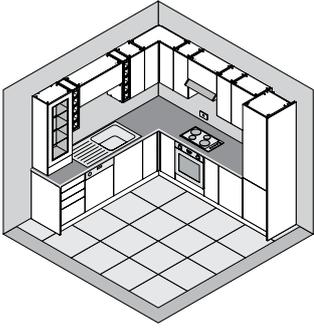Step 11 - Fit the doors and drawers



Assemble and fit the drawer boxes.
Fit the shelves.

Hang the doors. Refer to pages 25 to 31 for more information. Refer to information included with the appliance for information on fitting integrated appliance doors.

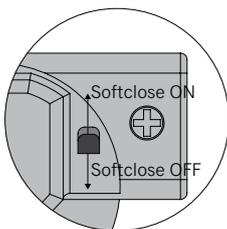
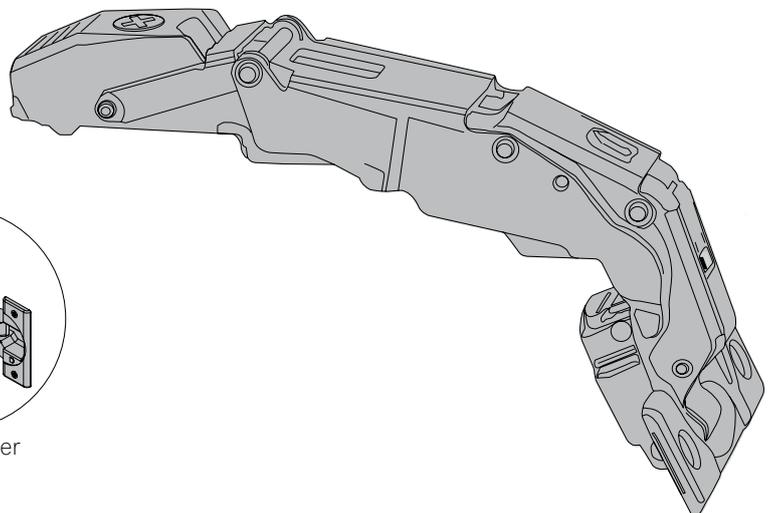
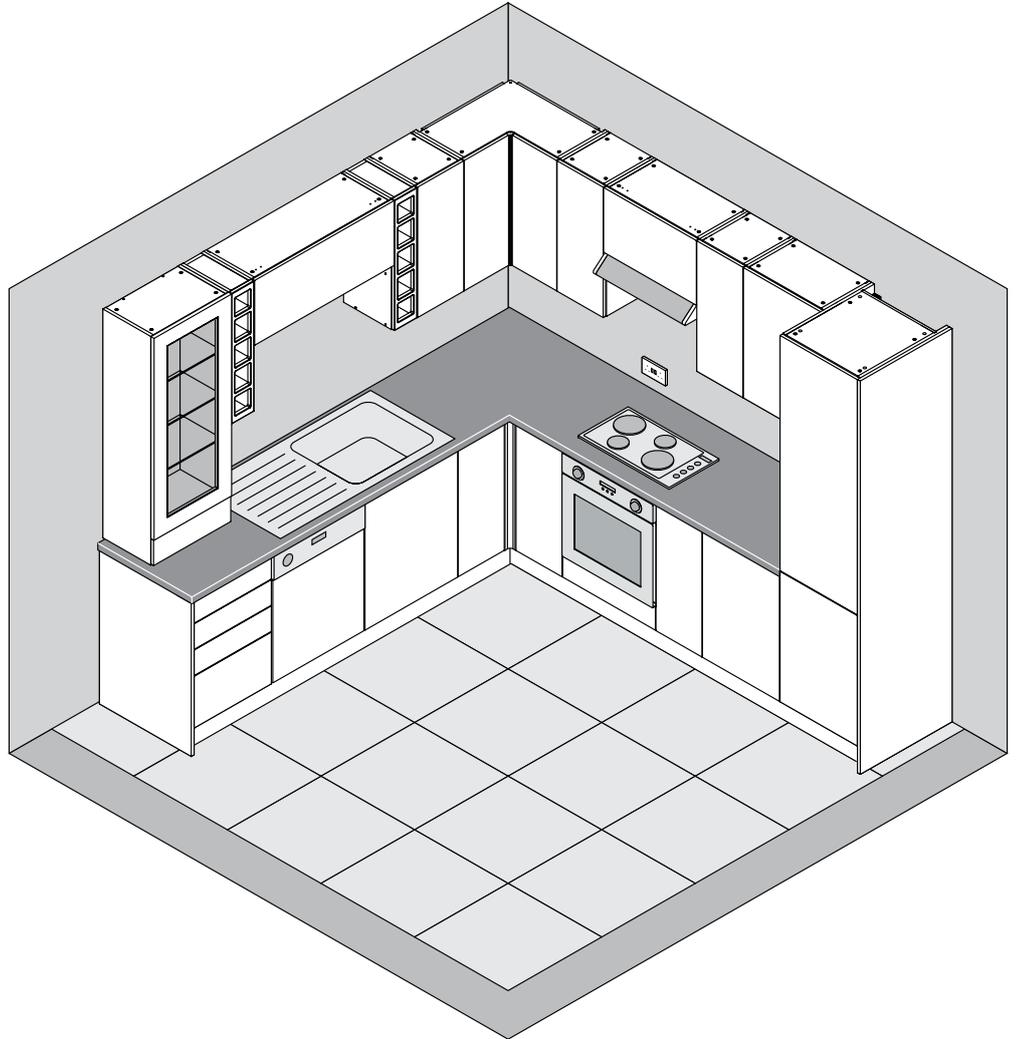
Activate soft close mechanism or fit soft close buffers if applicable. Smaller doors need only one softclose buffer. Larger doors use two softclose buffers. Use cover caps as required on exposed hinges. Refer to the assembly instructions.

Fit the drawer fronts.


Drill the door and drawer fronts for the handles. On the 925x925 L-shaped base and 625x625 L-shaped wall, only one handle is required, refer to page 26 for further information on L-Shaped units.

Refer to page 31 for more information on handle drilling.


NOTE: Fit any wirework required this step. Refer to manufacturer's instructions for information on how to fit.



(107° Hinge Soft Close Activation)

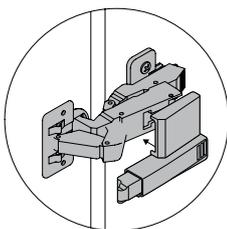

(170° Hinge Soft Close Buffer Fix)

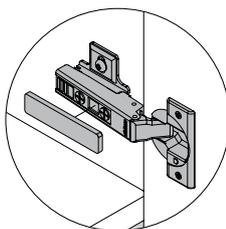


(Hinge Cover Cap Fix)

Section 5:

Finishing touches - decor panel fitting


Scribing to the Wall

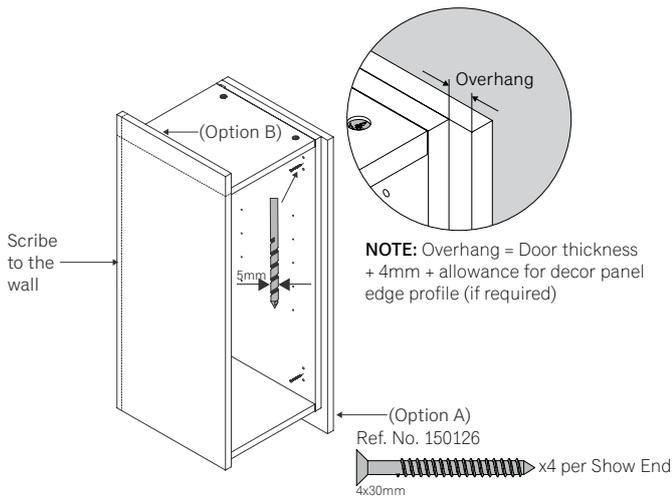Position the unit. Clamp the show end to the unit so that it is just touching the wall. Measure the overhang at the front of the unit and subtract the amount needed to overhang the door. Cut a small block of wood to this size and, by placing it against the wall, draw a line parallel to the wall onto the Show End. Trim the Show End along the line. If desired, the fit can be tested on a piece of the packaging before cutting the Show End.



Wall and Dresser Units

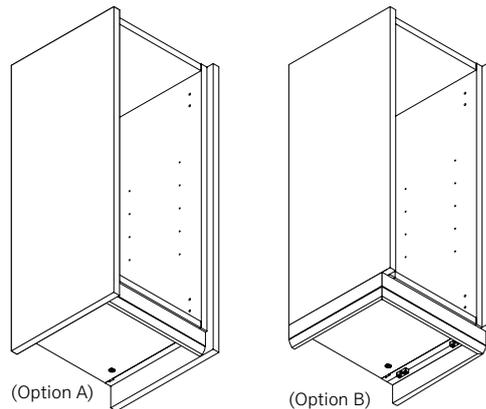
The Decor Panel is supplied 30mm deeper than the carcass to allow for scribing to the wall at the back and overhanging the door at the front. The amount of overhang required is the total sum of the thickness of the door plus 4mm, also taking into account the edge profile of the decor panel (if it is square edged or curved/bevelled etc). The bottom of the Decor Panel can either be left to enclose the pelmet (Option A) or the top trimmed so that the bottom of the Decor Panel is flush to the bottom of the unit and the pelmet fitted underneath the Decor Panel (Option B). See page 20 for hints on concealing screws.



Bottom of Wall Unit


Base and Appliance/Larder Units

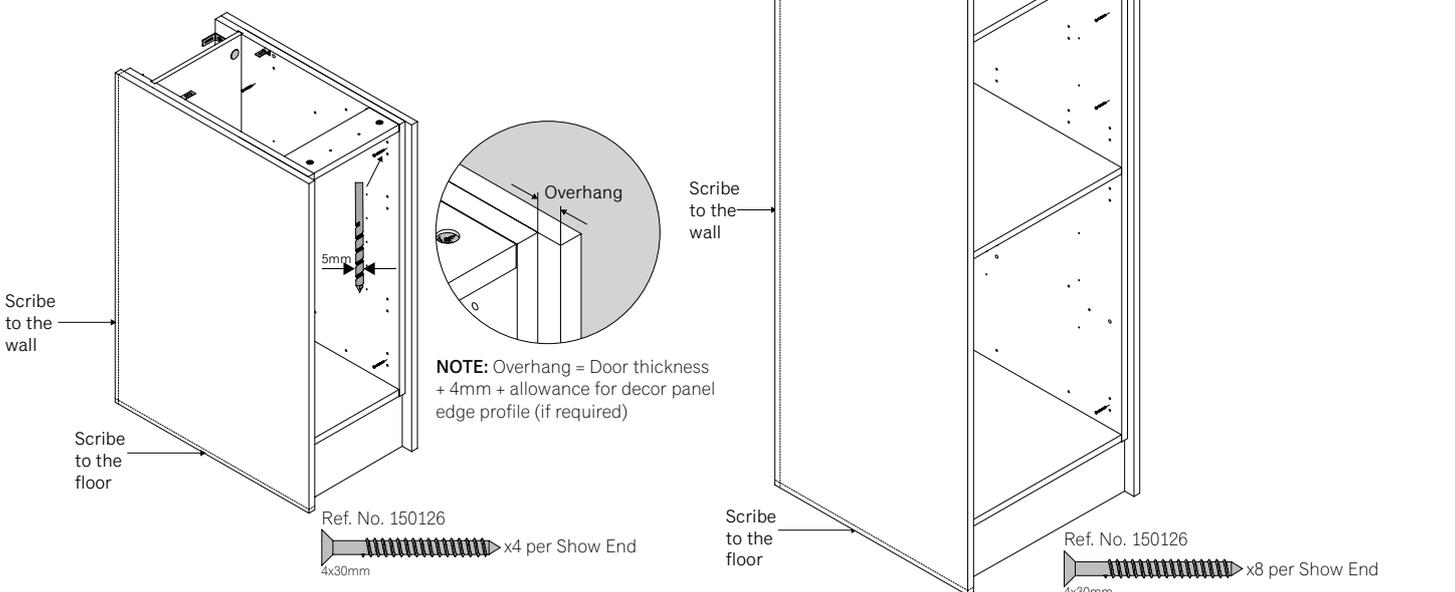The Decor Panel needs to be cut down to suit the height of the unit once it has been installed. The Decor Panel should overhang the front of the cabinet and continue to the floor. The Decor Panel is supplied 30mm deeper than the cabinet to allow for scribing to the wall at the back and to overhang the door at the front. The amount of overhang required is the total sum of the thickness of the door plus 4mm, also taking into account the edge profile of the decor panel (if it is square edged or curved/bevelled etc). The bottom and back can be scribed to the floor and wall and the raw edge must be sealed with a suitable sealer. See page 20 for hints on concealing screws.




Tall curved corner posts

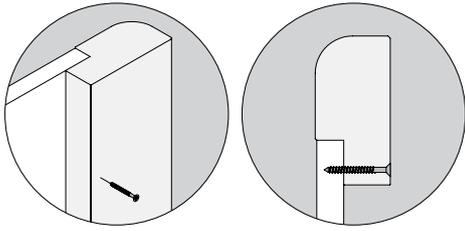
These posts are used in conjunction with standard decor panels to finish the customer's kitchen. They are 2400mm high as standard and are cut down for use with base, wall, tall wall and tall units.




Fix the decor panel to the corner post and packer using 30mm countersunk screws (not supplied). Ensure screws are flush with corner post/packer for a flat finish with unit. Offer the corner post/decor end panel assembly to the unit. Measure the thickness of the fascia, add an extra 4mm and set the corner post forward of the unit by this dimension (X) to achieve an in line finish. Scribe the rear of the decor end to the wall, ensuring the raw edge is sealed. Secure the assembly by countersinking 30mm screws (not supplied) through from the inside of the unit to the dimensions shown within the units.

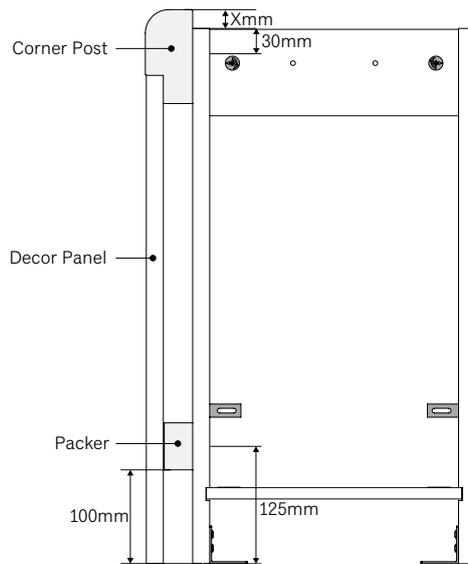

Base and Tall Unit fitting position

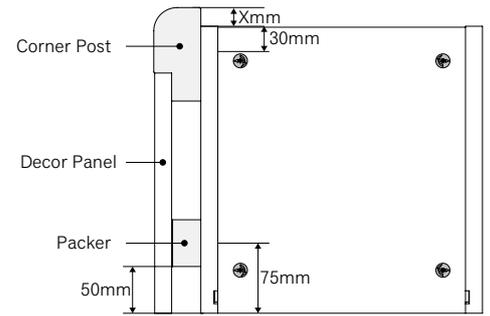


Wall Unit fitting position

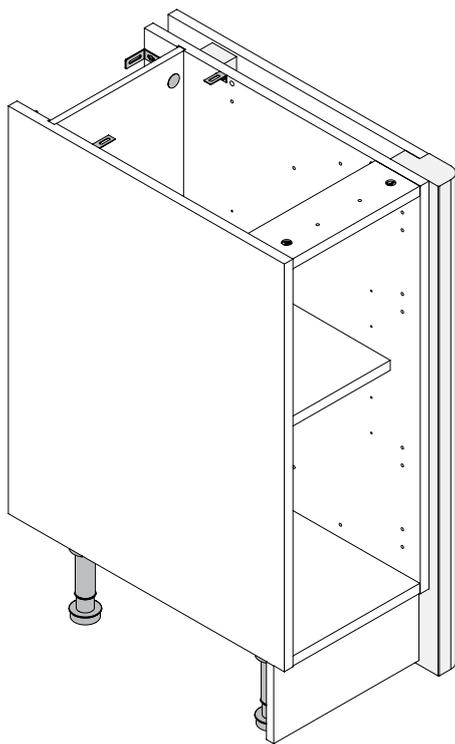

Plinth Fitting

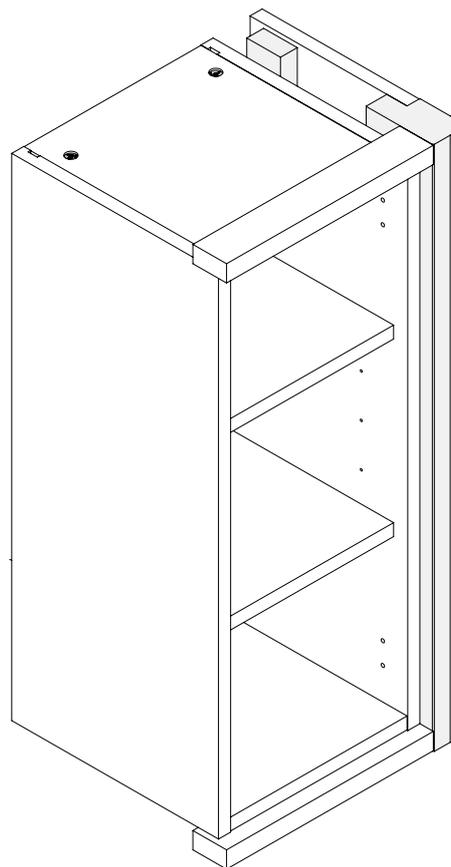
When used with a base or tall unit, the plinth runs into the corner post/decor panel assembly.



Modern/Contemporary Cornice and Pelmet

When used with a wall or tall unit that has modern/contemporary cornice, the cornice is run into the corner post. The post and decor panel is fitted above the unit as shown.

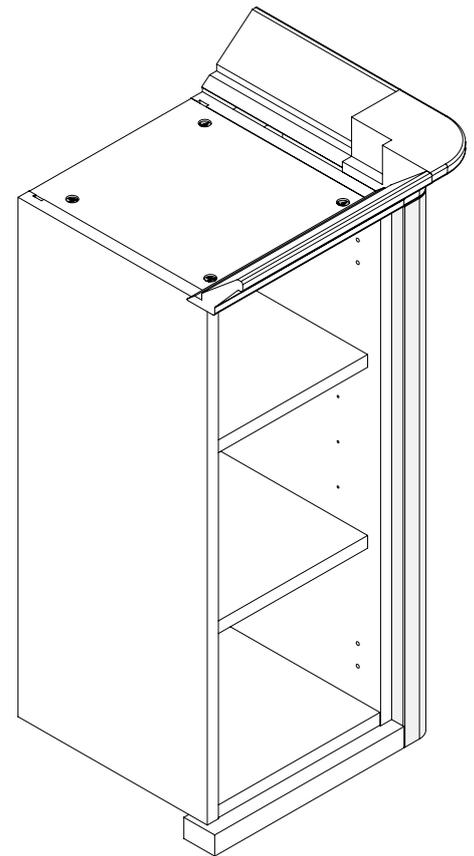The pelmet is run into the corner post also, with the post and panel fitted below the unit as shown.



Classic/Traditional Cornice

When used with a wall or tall unit that has classic/traditional cornice, the cornice goes above the panel and post. A special corner piece is used to run around the curve. The post and decor panel is fitted in line with the unit as shown.

The pelmet is run into the corner post, with the post and panel fitted below the unit as shown.

Section 6:

Finishing touches - fascia installation

Please spend five minutes reading this section after the units have been assembled and fitted but before you start to fit the doors

For timber doors, drawer fronts and accessories

Unpacking

The doors, drawer fronts and some accessories of a Benchmarx Kitchen are manufactured from carefully selected solid timber/veneers of the finest quality.

As with most things in nature, there is a degree of variation in both colour and graining. These differences are part of the special character and beauty of wood, differences which make a wood kitchen such a desirable product.

Any large differences in tone apparent when the customer's kitchen is first unpacked will diminish over a few months as the timber mellows with exposure to daylight to give a natural uniformity.

Installation

For best results the doors and drawer fronts should be checked together. After unpacking, and before installing doors and drawers, it is recommended that they are placed against their respective units in order to judge the final effect. Reposition any items to obtain the most even match.

Some door styles may have a protective film to help ensure they arrive in good condition. Once installed this should be removed.

Note: It is not advisable to fit timber doors in newly constructed or recently plastered rooms. A high moisture content in the environment may cause the doors to swell and split. It is recommended that doors are stored in a suitably dry environment outside the kitchen until the room has dried out thoroughly.

Hinges and Drawers

Once the customer is happy with the overall effect, fit the hinges and drawer boxes. Attach doors and drawers to the cabinets, taking care not to damage the lacquered surfaces. When all items are installed and you have checked the results, attach the handles.

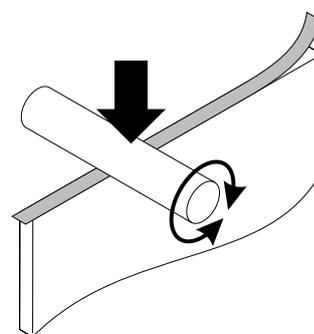
Handles

Check one more time before drilling. Place a piece of scrap wood behind the hole to prevent splintering, then, using a 5mm drill, carefully drill through. Fit handles, taking care not to let the screwdriver slip. See page 31 for more information on handle fitting.

Note: Any doors or drawer fronts which have been fitted with hinges or drilled for handles cannot be returned to store.


Self-Adhesive Edging Tape

Self-adhesive edging tape is available to colour match the doors. It is applied to the front edges of the cabinet before attaching the doors. The edge of the carcass must be clean, dry and free from dust and grease. Apply the tape carefully. Press the tape down firmly with a clean, hard roller or similar tool to ensure good adhesion. Trim any excess with a sharp knife.




Fitting fascias to L-shaped corner base units

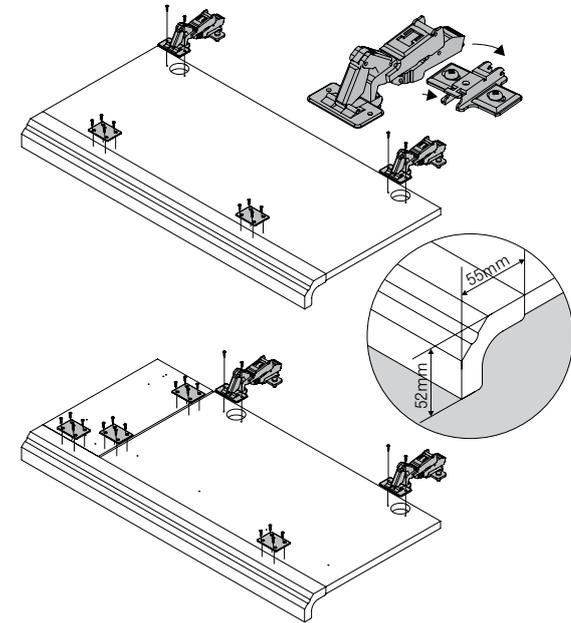This unit is supplied with two fascias, one handle and one corner filler. The filler is **NOT** even on each side and must be fitted to one door as shown below. Decide with the customer which door is to have the filler; the other door will have the handle fitted to it. Fitting the filler the incorrect way will stop the doors from closing.




Ref. No. 150101
 x16/32
 3.5x12mm

Ref. No. 154041




Note: Some fascias may require 35mm cover caps.

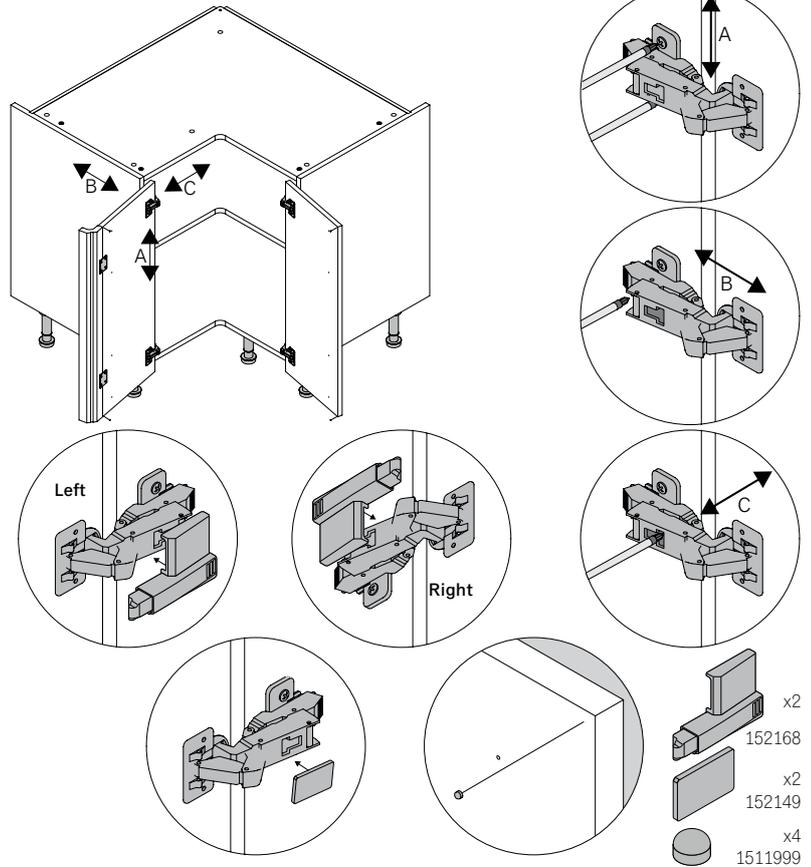Do not put the handle on the door with the filler. One soft close buffer is fitted to each door. The other hinges are fitted with cover caps. Refer to page 31 for information on drilling the door for a handle.



Fitting fascias to L-shaped corner wall units

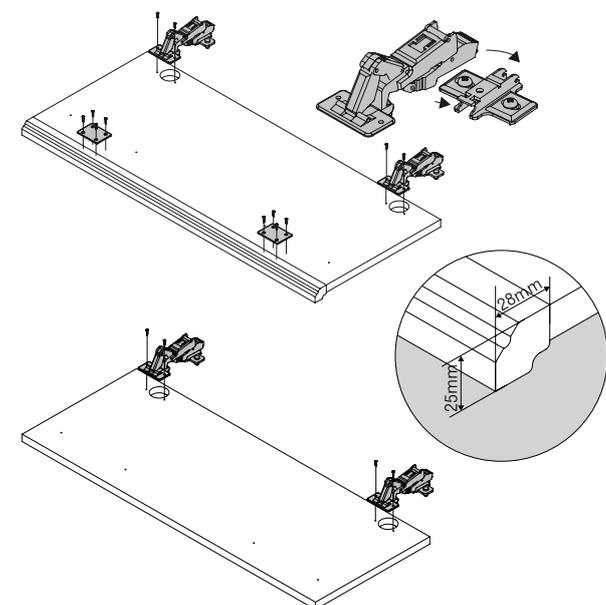This unit is supplied with two fascias, one handle and one corner filler. The filler is **NOT** even on each side and must be fitted to one door as shown below. Decide with the customer which door is to have the filler; the other door will have the handle fitted to it. Fitting the filler the incorrect way will stop the doors from closing.




Ref. No. 150101
 x16
 3.5x12mm

Ref. No. 154041






Note: Some fascias may require 35mm cover caps.

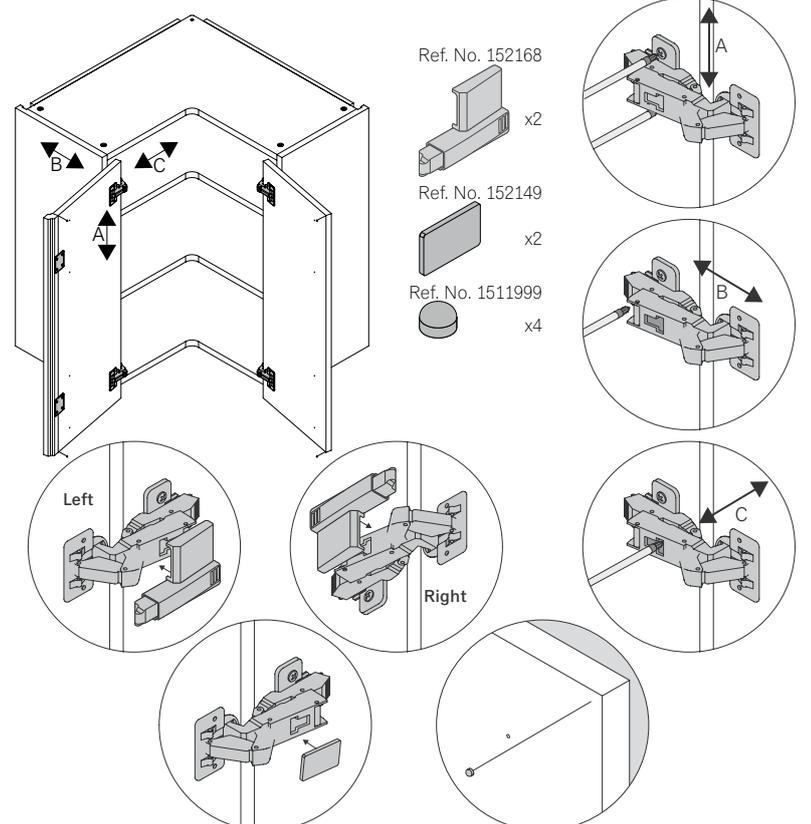Do not put the handle on the door with the filler. One soft close buffer is fitted to each door. The other hinges are fitted with cover caps. Refer to page 31 for information on drilling the door for a handle.



Fitting fascias to closed corner wall units

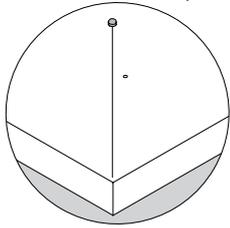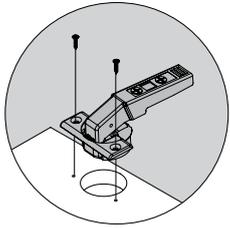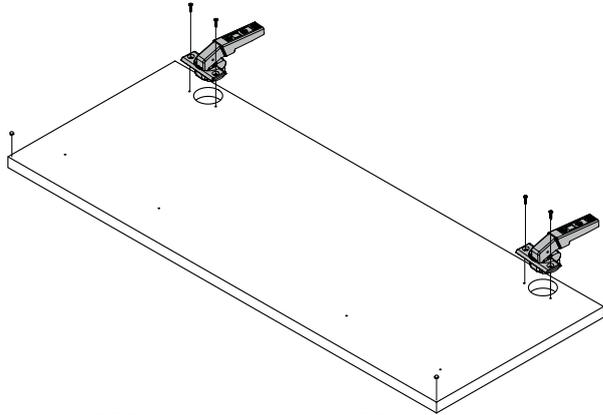This unit is supplied with one fascia and a blanking panel. The fascia uses two specific blind hinges to fix it to the blanking panel. It is advisable to fit the hinge plates to the blanking panel before fixing unit to the wall.







Ref. No. 150101
 x4
 3.5x12mm


Ref. No. 151999
 x2

Note: Some fascias may require 35mm cover caps.

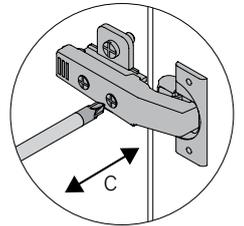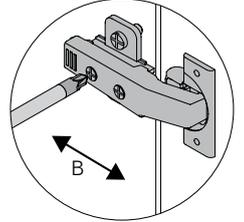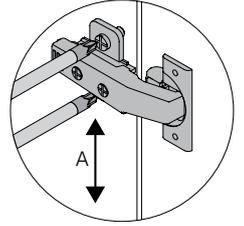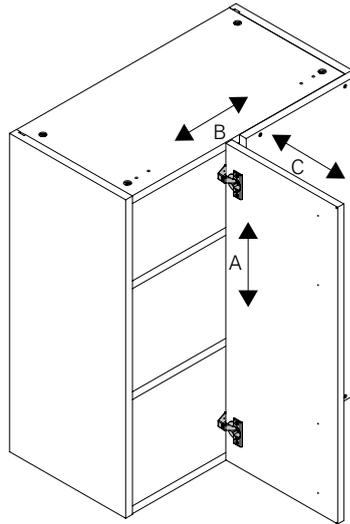
Clip the hinge onto the hinge plates, then adjust door as required.



Soft Close Activation

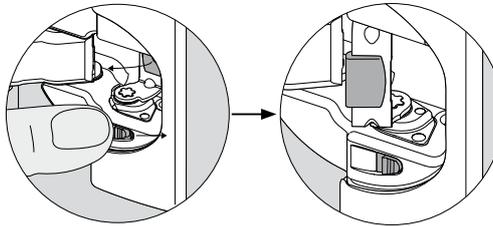



Soft Close Activation

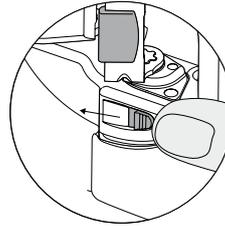

Standard fascia fixing - fitting the door and fascia adjustments


Door Adjustment

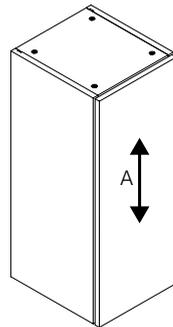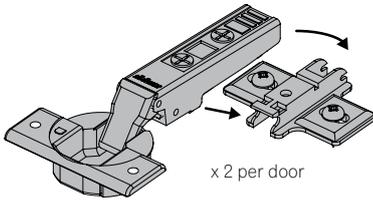Please Note: The door on a single unit may open either left or right. Before attaching hinges to the door, check with the customer which opening is required and fit hinges to the appropriate side.




A - Vertical

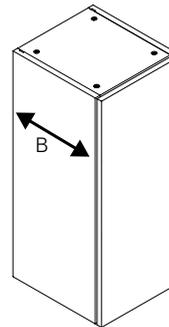Loosen screw "A" on all hinges. Adjust door and retighten screw.




B - Lateral

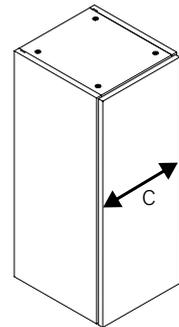Loosen screw "B". Adjust door and retighten screw.






C - Horizontal




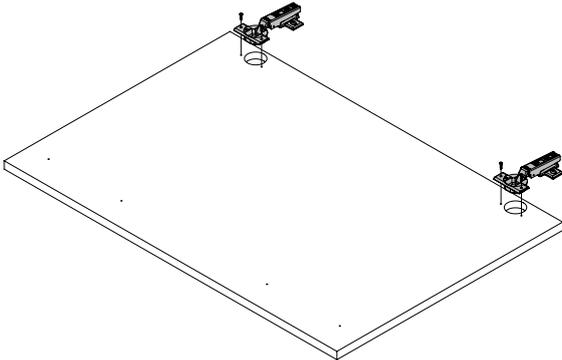
Loosen screw "B" 1/2 turn. Turn screw "C" until door is positioned correctly and retighten screw "B".




Standard Hinge

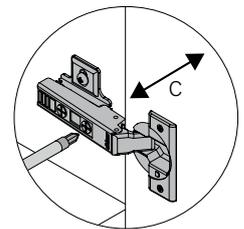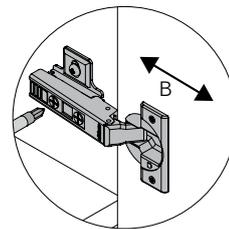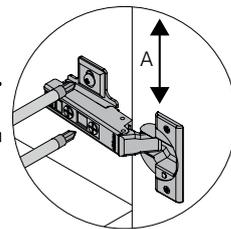

Corner Unit Hinge

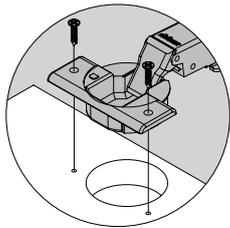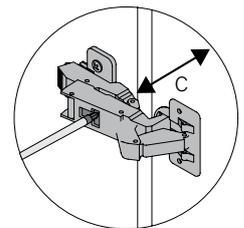
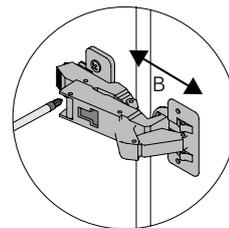
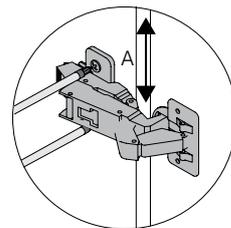


Ref. No. 150101
x2 per hinge
3.5x12mm

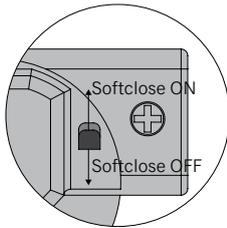

(107° Hinge Soft Close Activation)

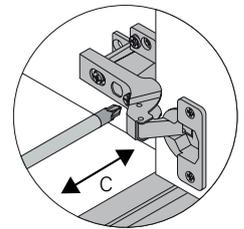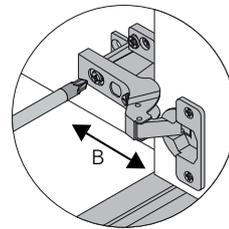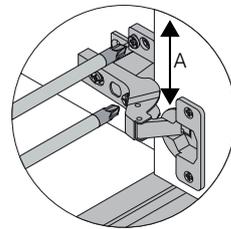
Fixed Frame Door Hinge



Note: Some fascias may require 35mm cover caps.

Door and drawer handle drilling

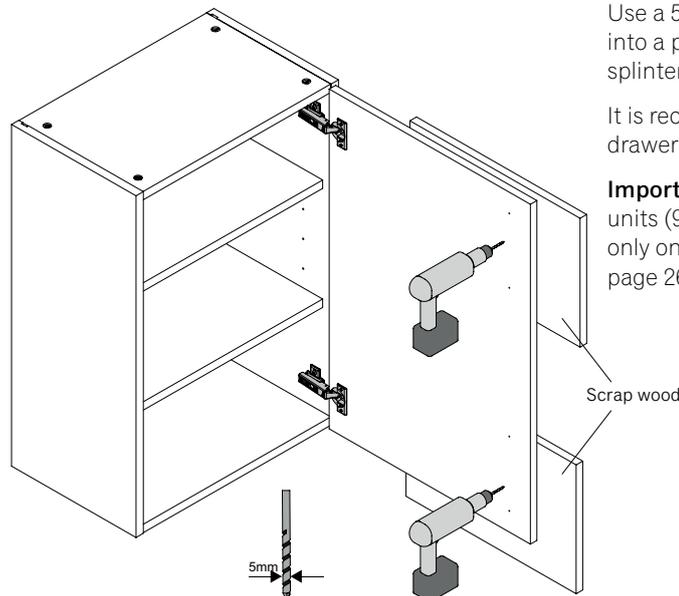Please Note: Some doors and drawers may have pin marks on the back of them. Do **NOT** use these as a guide for handle drilling. Please check size of handle with the customer, then measure and mark required drill holes accordingly with a bradawl. Decide with the customer the handle position on all units and check all details carefully before drilling, as drilled doors and drawer fronts cannot be returned.



Use a 5mm flat-tipped drill bit and drill into a piece of scrap wood to prevent splintering.

It is recommended that the doors and drawers are fitted before drilling.

Important: For the two L-Shaped corner units (925x925 base and 625x625 wall) only one handle is required. Please see page 26 for more information.

Section 7:

Finishing touches - drawer fitting and other internals

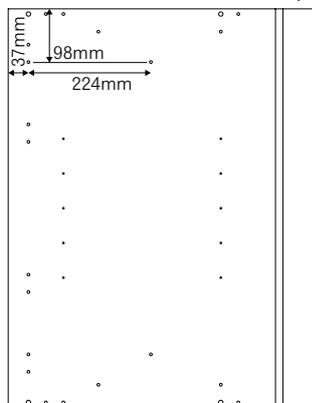
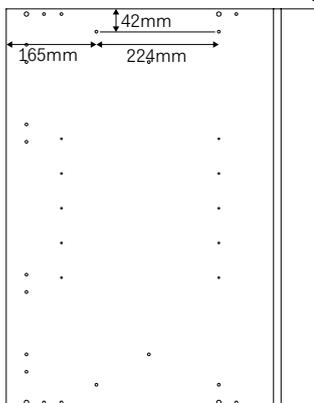
Metal box runner positions

Tandem box runner positions

Please Note: Only the left side is shown; the right side is a mirror image. These images are for standard fascias only. For framed kitchens, see pages 33 and 34.

Drawerline Units

Using fascia packs
FB3, FB4, FB5 and FB6





Drawerline Units

Using fascia packs
FB3, FB4, FB5 and FB6

Four Drawer Units

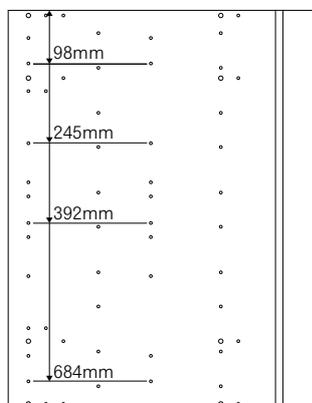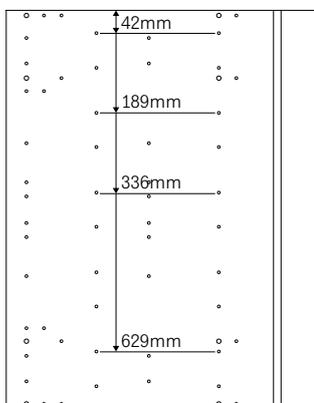Using fascia packs
FD34 and FD54





Four Drawer Units

Using fascia packs
FD34 and FD54

Three Pan Drawer Units

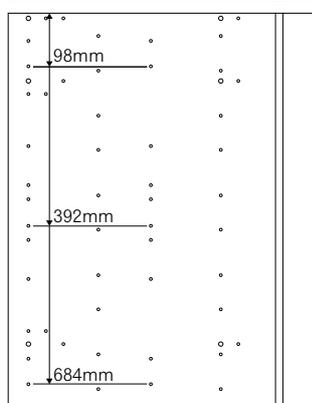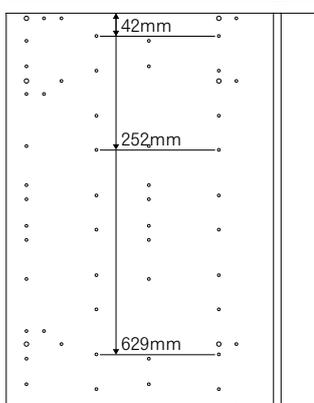Using fascia packs
FPD63 and FPD93





Three Pan Drawer Units

Using fascia packs
FPD63 and FPD93

Two Pan Drawer Units


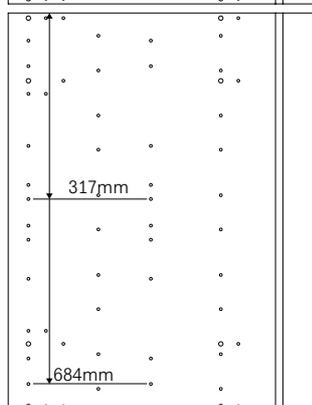
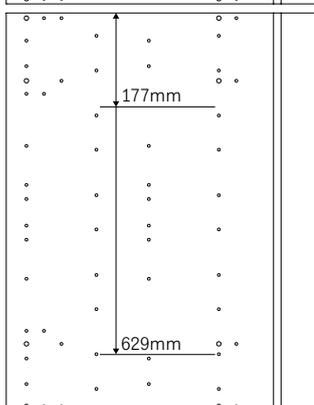
Using fascia packs
FPD62 and FPD92





Two Pan Drawer Units

Using fascia packs
FPD62 and FPD92


Metal Box Drawer Runner



Tandem Drawer Runner

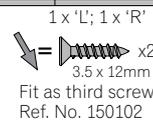


Tandem Drawer Runner
900mm Wide Units ONLY




Crossrail packer for drawerline units

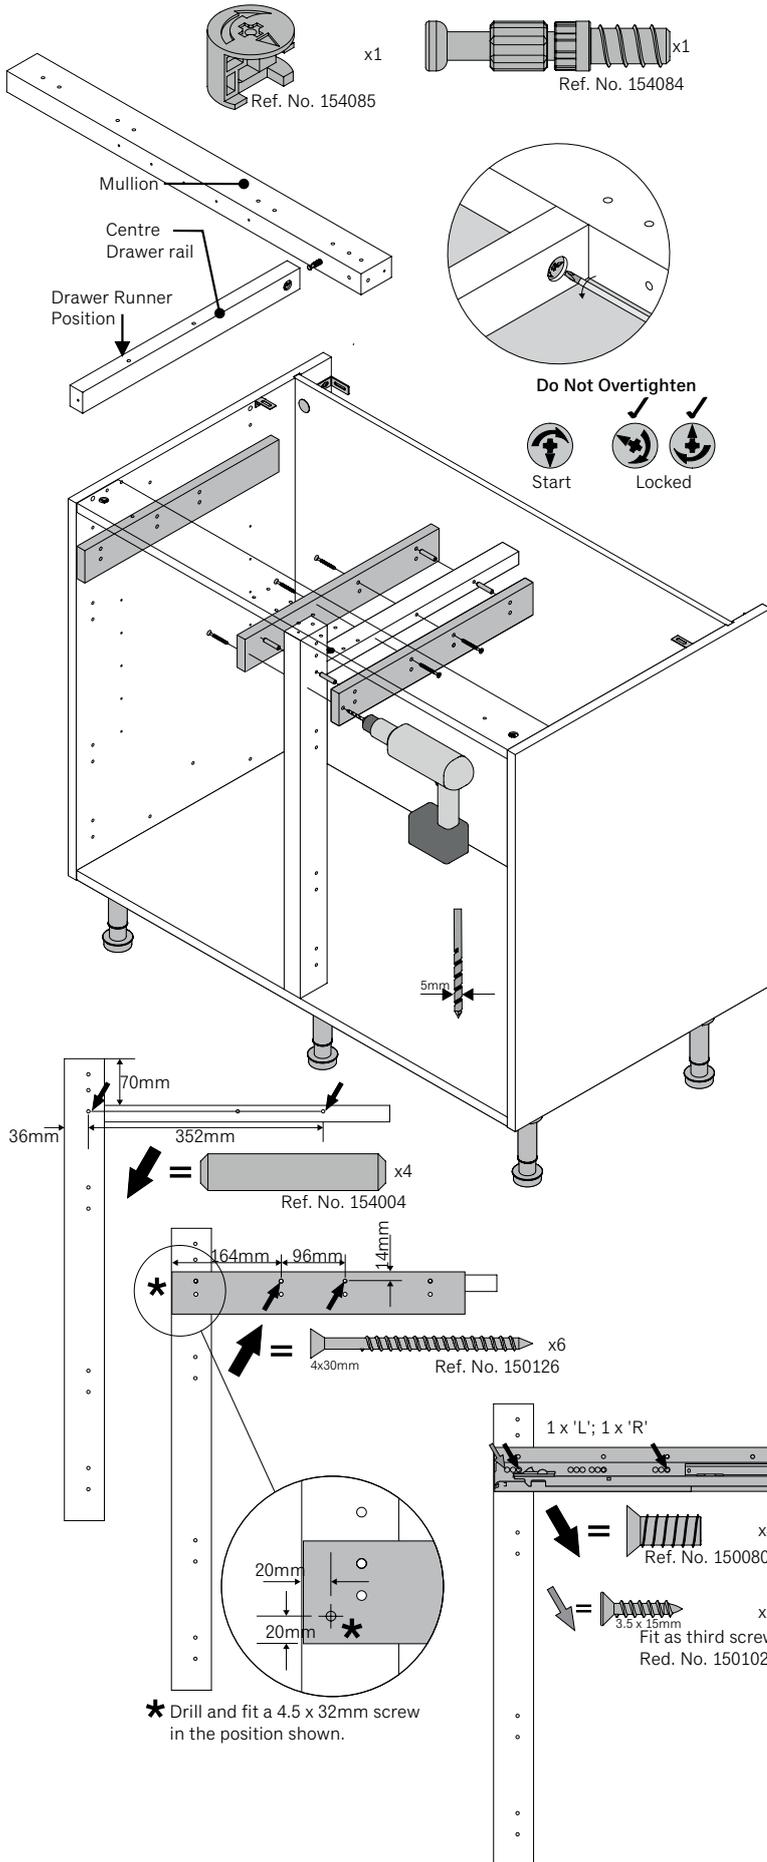Please Note: The Centre Drawer Rail must be fitted in the position shown here. Before attaching the drawer runners to the packers, drill through the packer then fix the packer to the mullion with a 32mm screw as shown.



Dresser units

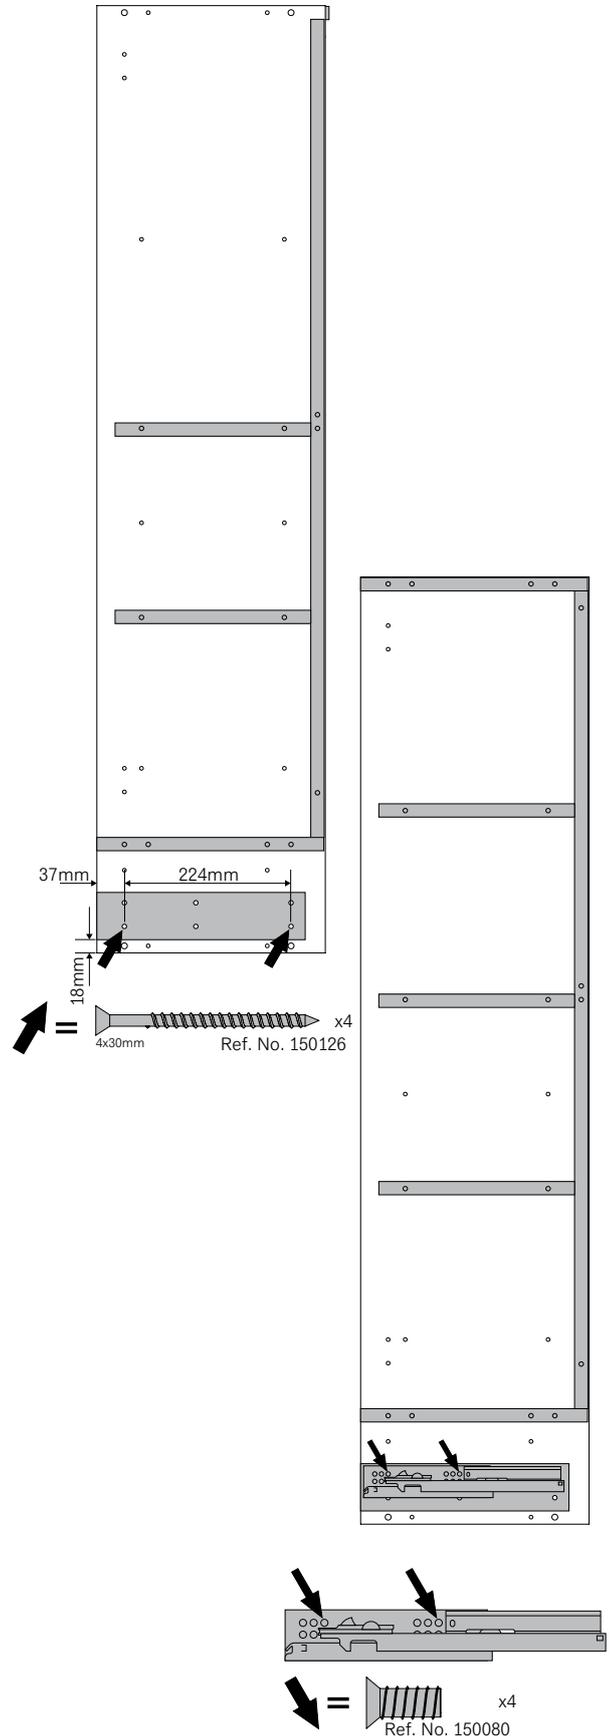Please Note: The packer for the dresser is fitted 18mm up from the bottom of the end panel. It may be easier to locate the packer by temporarily putting the unused bottom panel into position and fixing the packer above it.



150mm pull out units with wirework


Please Note: Refer to the fitting instructions supplied with your wirework.

Fit the prongs on the back of the runner into the drilled holes and fix through the star shaped holes indicated. It will be necessary to move the outer runner rails to get access to the holes.

These drawings show the positions for mounting the unit on the right hand panel. Reverse the positions for the left hand side.

Caution: Some parts of the runner are sharp. Handle with care.



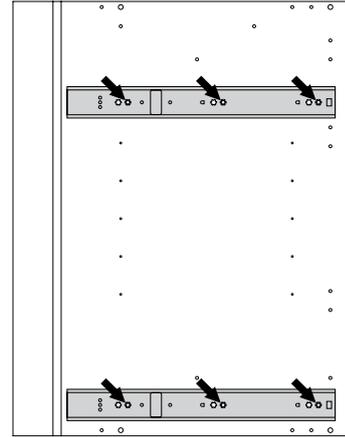
 x6
4.5x15mm
Supplied with wirework




Before attaching the frame to the runners, the following steps must be completed. First the softclose catch must be pushed to the back of the mechanism until it clicks.

Then the centre section of the drawer runners must be pulled forward before attaching the frame. The keyhole slot goes over the screw on the runner. After fitting, tighten the screw.

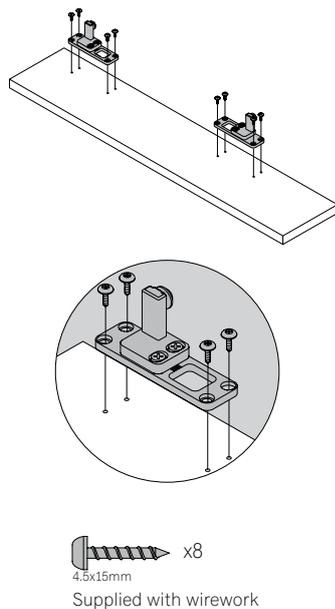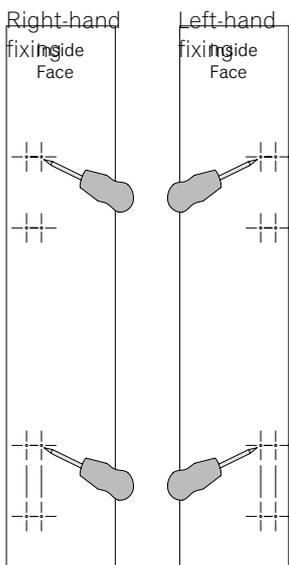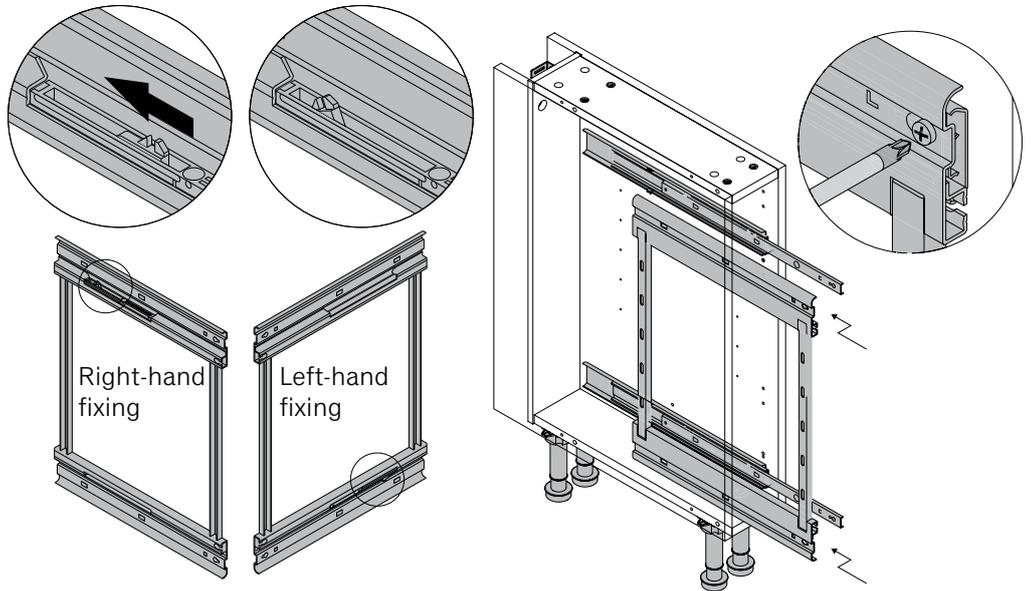Note: The softclose catch is at the top of the frame when fixing to the right hand side and at the bottom for a left hand side fixing.



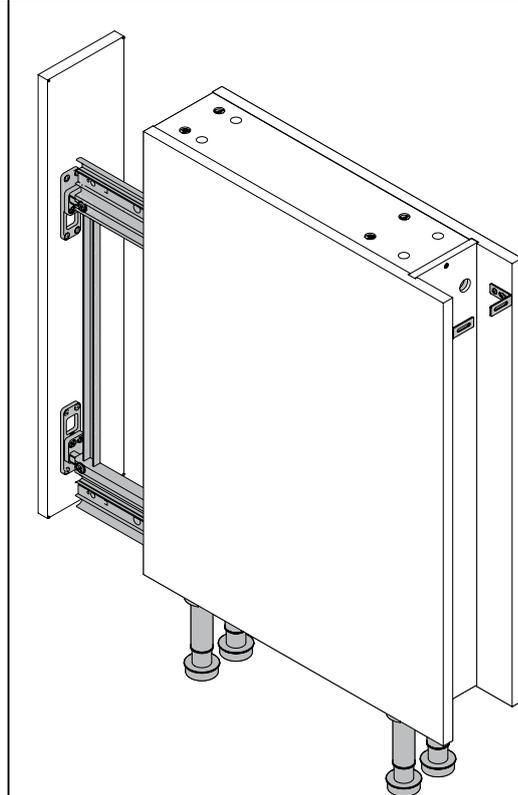The holes for the brackets should be marked using a bradawl. Refer to the wirework instructions for measurements.




Check wirework instructions for directions on altering fascia position to fit.

Section 8:

Finishing touches - curved units

External curved base and wall units

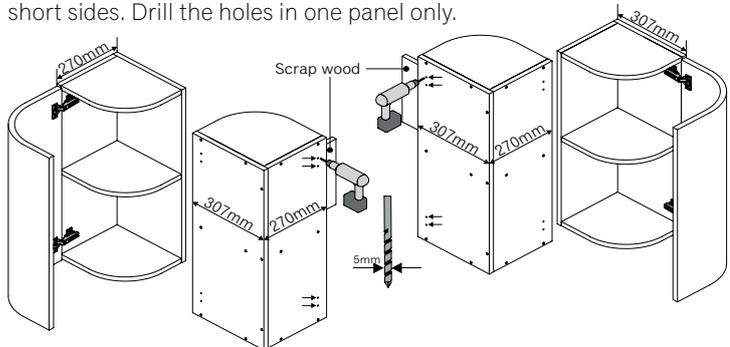
The holes for the hinge plates need to be drilled through from the back. The sides of the unit are different sizes, so make sure that only the correct side is drilled. The unit is turned over to reverse the position of the long and short sides. Drill the holes in one panel only.




For framed kitchen ranges it is important to be careful when making holes in the cabinet to fix the frame as the dimensions at the top and bottom of the unit are different on wall and base units. Refer to page 29 for details on fitting frame brackets.

Wall Units:
X = 101mm Y = 101mm

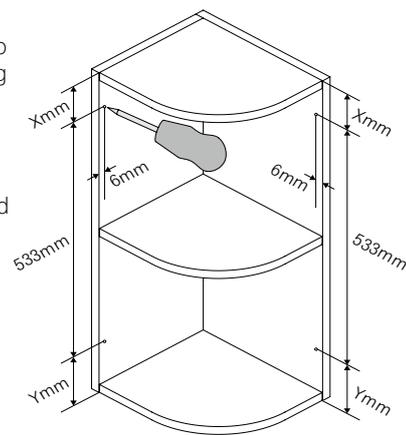
Base Units:
X = 103mm Y = 99mm



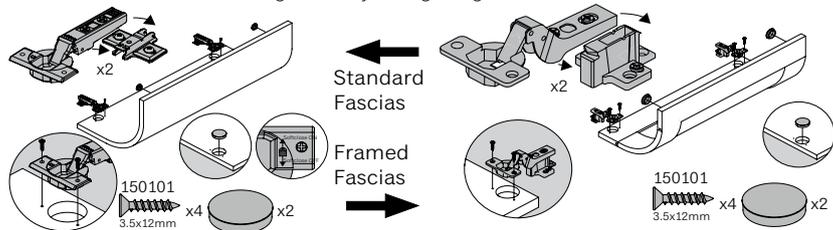Important: Align the fascia with the cabinet as it can only be fitted one way. Fix the hinges in accordance with the customer's opening preferences. The unsprung hinge must be used for handleless units. Refer to pages 30 and 31 for further details on fitting and adjusting hinges for standard and framed fascias.




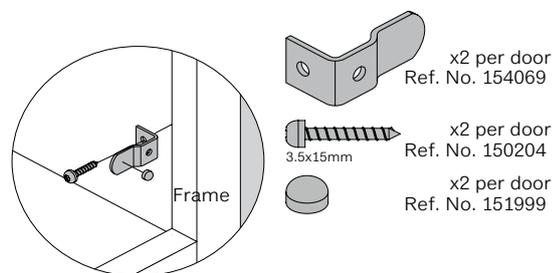For framed kitchens, screw the bracket for the buffer to the side of the carcass behind the frame.




Important: When this unit is used as a base unit it is done so in conjunction with other units to make up the correct depth. This will either be a 300mm wall unit or other units with a total width of 300mm. Please refer to the customer's plans to see which units should be used with the curved unit.

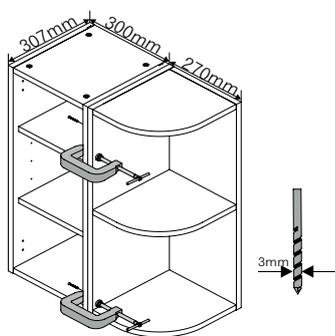Fix the curved unit and other unit(s) together before fixing plinth to the underside of the units. From inside the carcass of the adjacent unit, use a 3mm wood drill to make 30mm deep pilot holes. Do not drill completely through both units.



Attach the plinth in the position shown with suitable brackets or half blocks (not supplied).

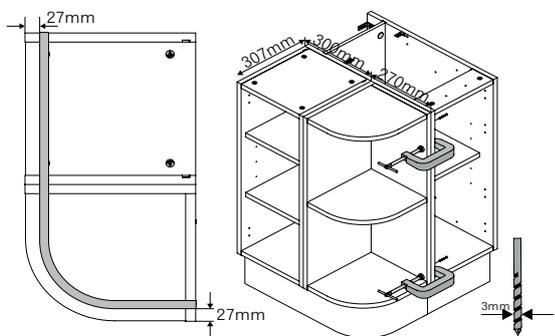
The plinth is supplied longer than required so that it can be scribed to the wall.



For all units, before fixing cornice or pelmet, it is advisable to glue a straight piece to the curved cornice or pelmet blocks, otherwise it may be difficult to achieve an exact join at a later stage. Once the glue is completely dry, fix the assembled cornice or pelmet to the units with 32mm screws (not supplied).

For instances where a block is supplied, this is reversible and designed to work either as cornice or pelmet. It is supplied overlength on the long side to allow for scribing to the wall. The block should overhang the cabinet by the thickness of the fascia on front and side, (x).

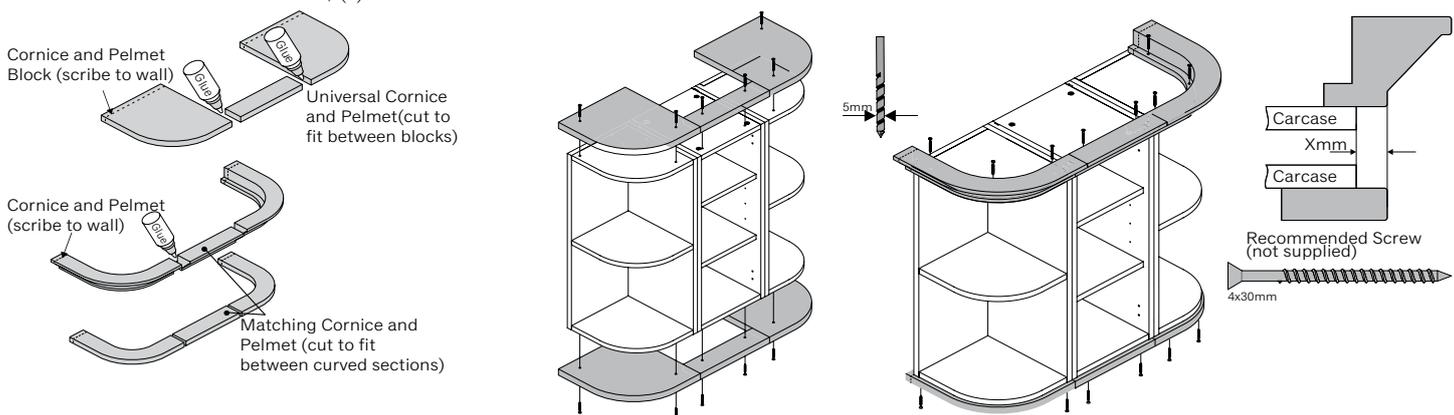For instances where a rail is supplied, this item is handed as either left or right. The pelmet is reversible and can be used on either side of the unit. Both are supplied overlength on the long side to allow for scribing to the wall. These should overhang the cabinet by the thickness of the fascia on the front and side, (x).




Section 9:

Finishing touches - other decor units


Butler sink units

Important: This unit is designed to be used with either a 28mm or 38mm thick worktop. Before including in the kitchen please check with the customer which thickness of worktop is being fitted and ensure the shelf is in the correct position.

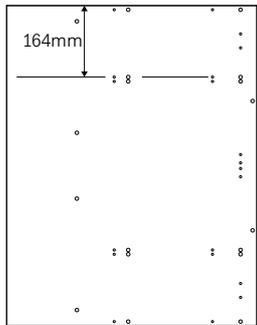
Shelf Position
-38mm Thick Worktops




Shelf Position
-28mm Thick Worktops

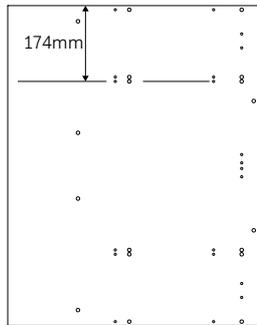

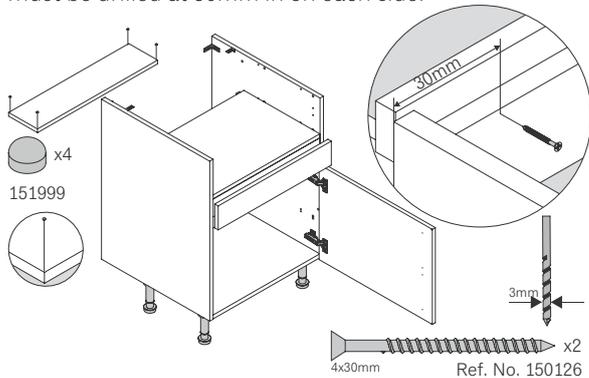Important: The fixing holes on the filler panel must be drilled at 30mm in on each side.



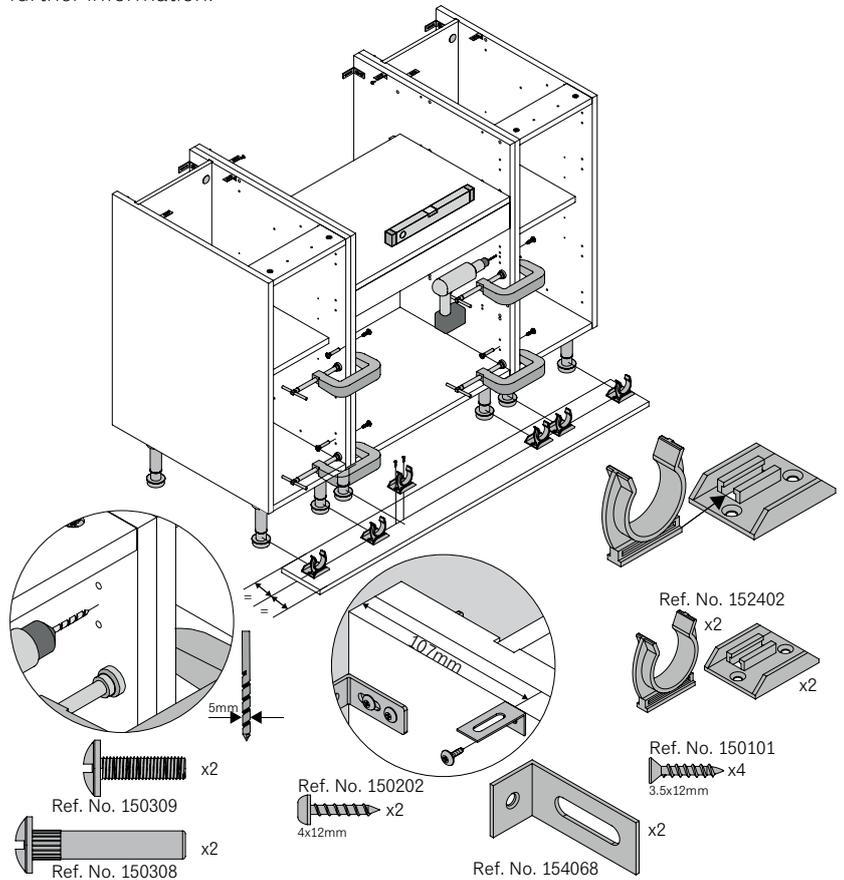
This unit is always used between other units. Level the units. Fix together and secure to the wall with suitable fixings (not supplied). See step 4 page 18 for further information.




Belfast sink units

Level the units, fix together and secure to the wall with suitable fixings (not supplied). See step 4 page 18 (or above) for further information.

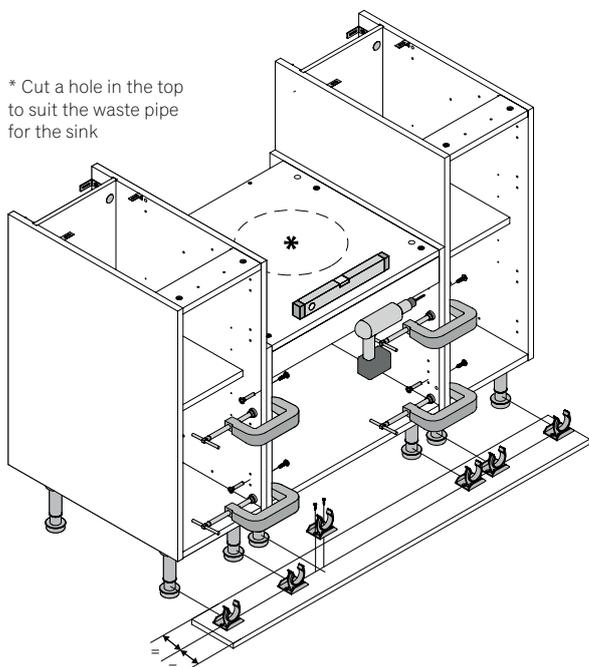* Cut a hole in the top to suit the waste pipe for the sink



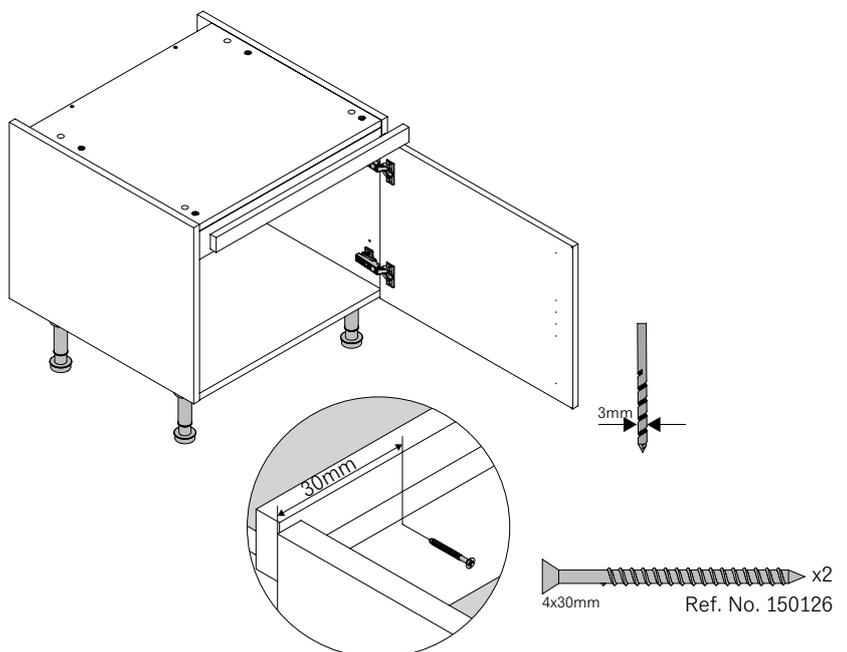
Important: The fixing holes on the 40mm filler panel must be drilled at 30mm in on each side.




Wine racks and frames

These units can be used at either wall or base unit level. They are usually planned to go between other units and are supported by fixing them to the adjoining units. Use a 3mm wood drill to make 30mm deep pilot holes. Do not drill through both units. See step 7 page 20 for further information. Although the images show only the standard height, these guidelines are also true for the tall version.

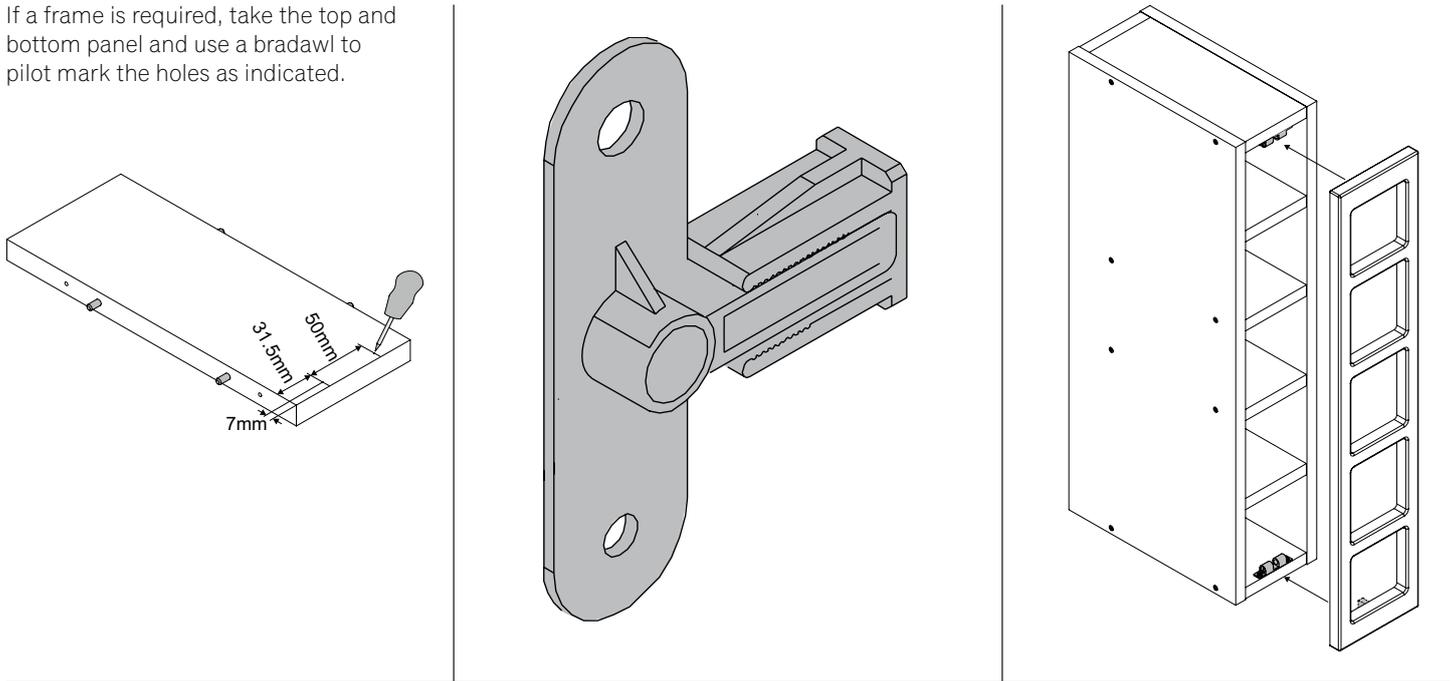
If a frame is required, take the top and bottom panel and use a bradawl to pilot mark the holes as indicated.





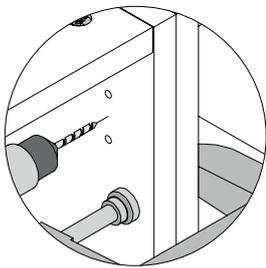
Please Note: If a frame is being fitted, the wine rack should be situated flush with the front of the adjoining units. If a frame is not being fitted, the wine rack should be situated flush with the adjoining unit cabinet doors.



4x30mm x6
Ref. No. 150126

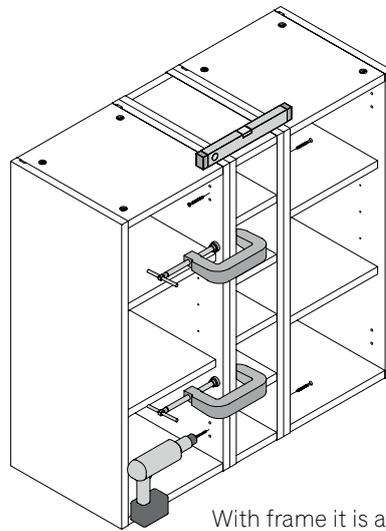

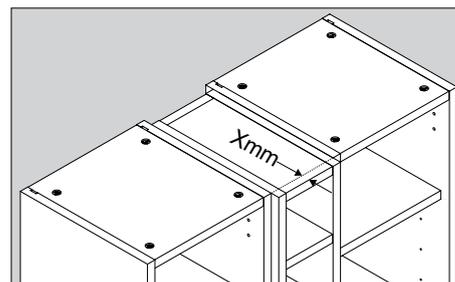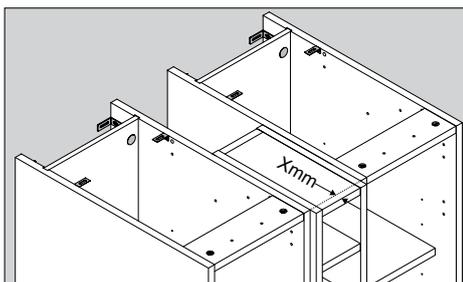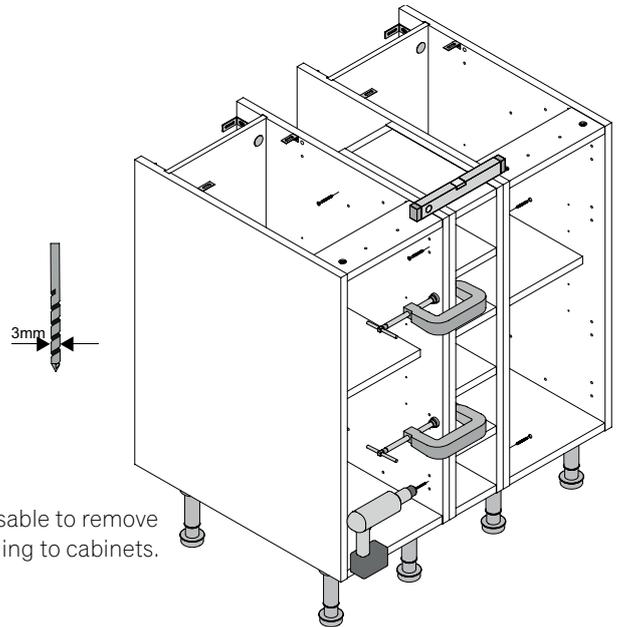With frame it is advisable to remove the frame whilst joining to cabinets.




Without frame fit forward by the thickness of the doors, shown as Xmm.




Built under oven unit

This unit may be fitted with a drawer. If one is required the unit will need to be disassembled.

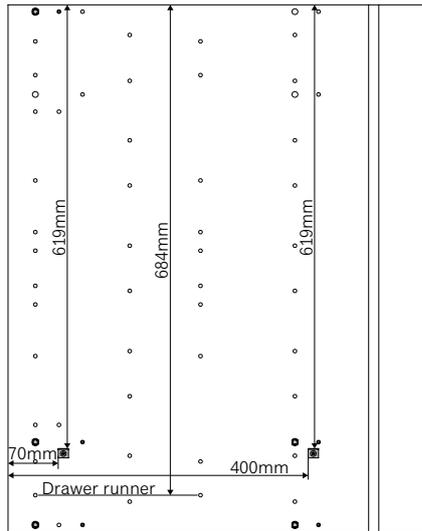Remove the supports for the shelf and replace with brackets at positions shown. The drawer runner should also be fitted.




Ref. No. 150202
4x12mm x4

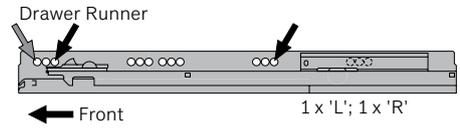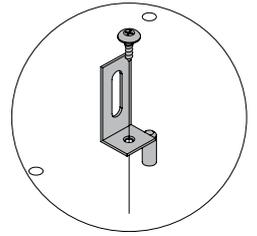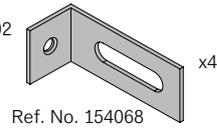


Ref. No. 150080 x4

3.5 x 15mm x2
Fit as third screw
Ref. No. 150102

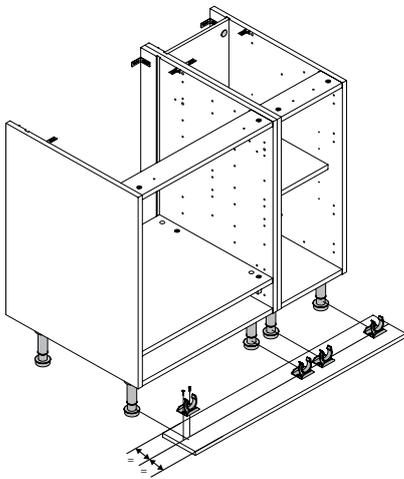Before fitting the plinth, check the oven manufacturer's instructions to see if the plinth needs to be vented.








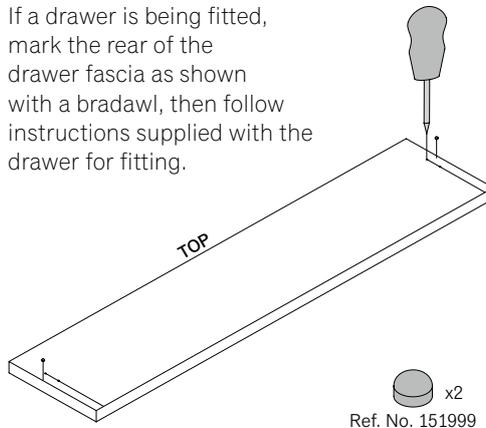If a drawer is being fitted, mark the rear of the drawer fascia as shown with a bradawl, then follow instructions supplied with the drawer for fitting.



Ref. No. 151999 x2

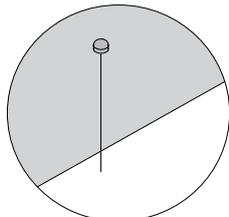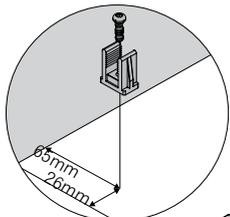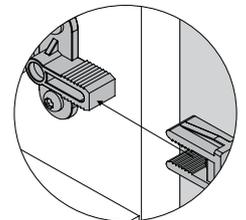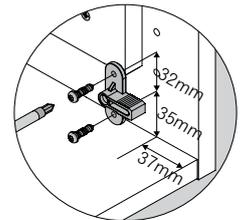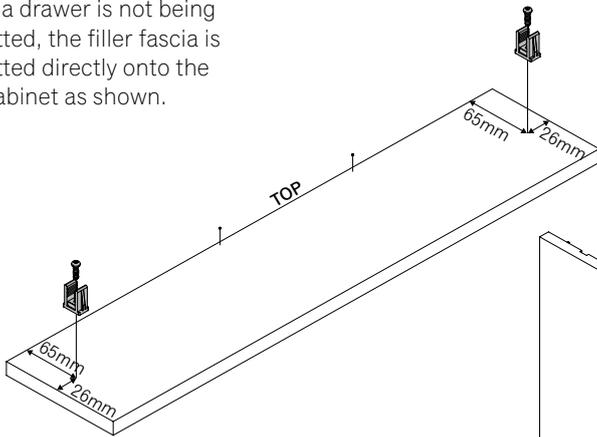If a drawer is not being fitted, the filler fascia is fitted directly onto the cabinet as shown.



Ref. No. 154015 x2

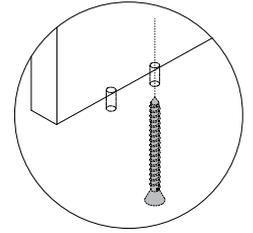
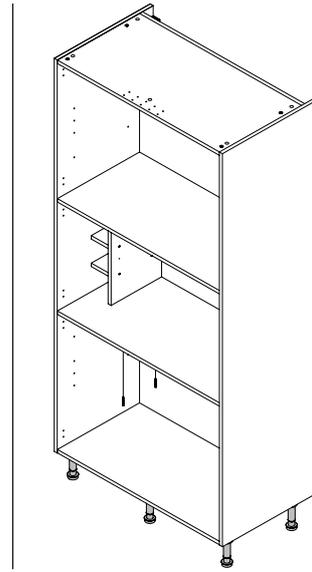
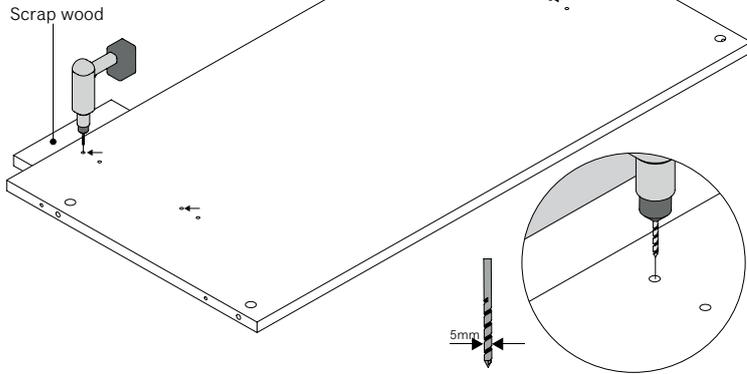
Ref. No. 154014 x2

Ref. No. 150201
4x15mm x6


Ref. No. 151999 x2

1000 Larder pantry unit


Before fitting, drill the back hole in each pair on one of the fixed shelves as shown. Refer to instructions provided with unit for full construction.




Ref. No. 150199



925 L-shape corner larder unit

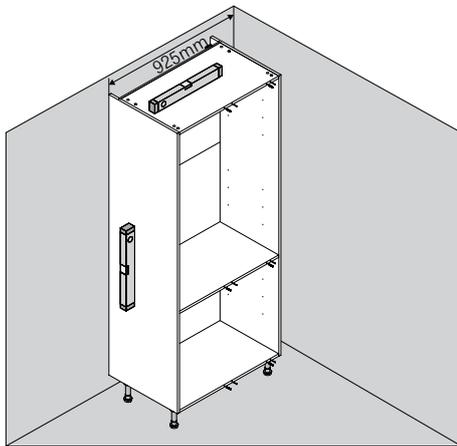

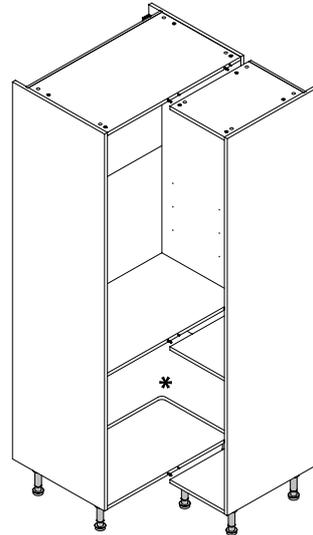Ensure to leave a gap so total distance for first part of cabinet is 925 before fixing to wall. Refer to instructions provided with unit for full construction.





If adjustable shelves are being fitted to the unit, ensure one is put in the lower section of the cabinet (marked with a * on image) before joining the two parts together.


If a carousel is being fitted, do this after fitting the parts together. Refer to carousel instructions for further details.

Corner larder unit

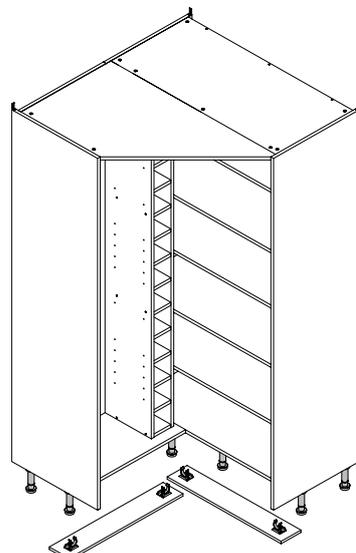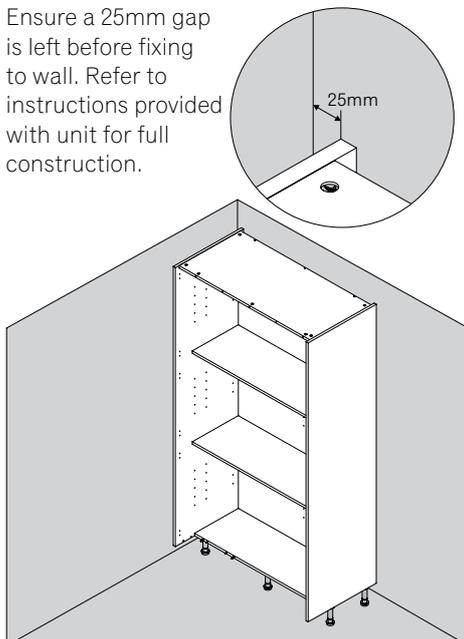Ensure a 25mm gap is left before fixing to wall. Refer to instructions provided with unit for full construction.





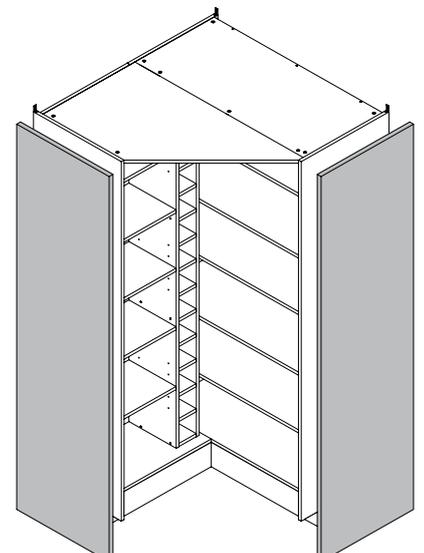One of the two supplied cabinet colour plinths will need to be cut down in order to fit.




Decor panels must be fitted before fitting doors, plinth or other cabinets.

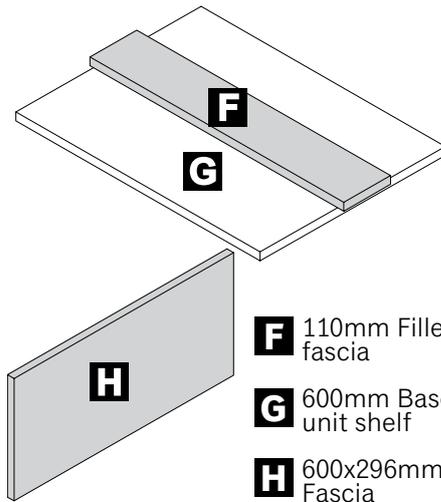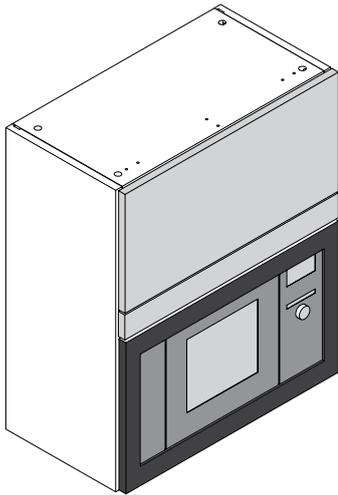New Components



- F** 110mm Filler fascia
- G** 600mm Base unit shelf
- H** 600x296mm Fascia

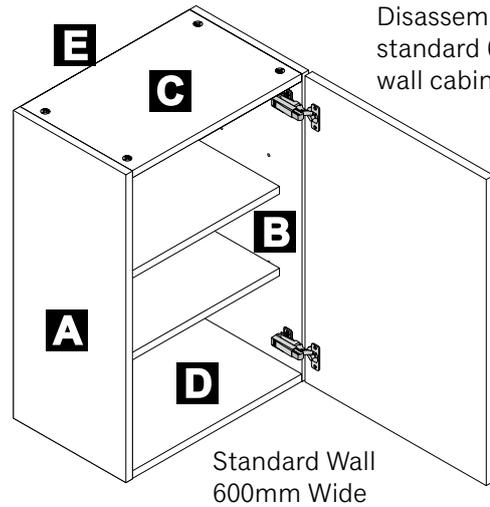
Step 1



Disassemble the standard 600mm wall cabinet

Standard Wall 600mm Wide

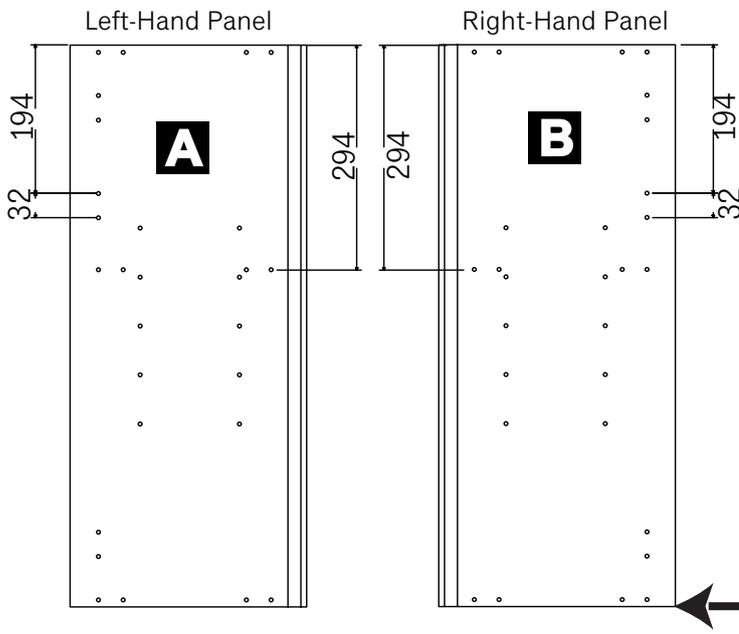Step 2



Drill 6 new holes on each end panel in the location shown. Use the end panel bottom row of holes as a template when drilling the new extra holes for the new shelf fix position.

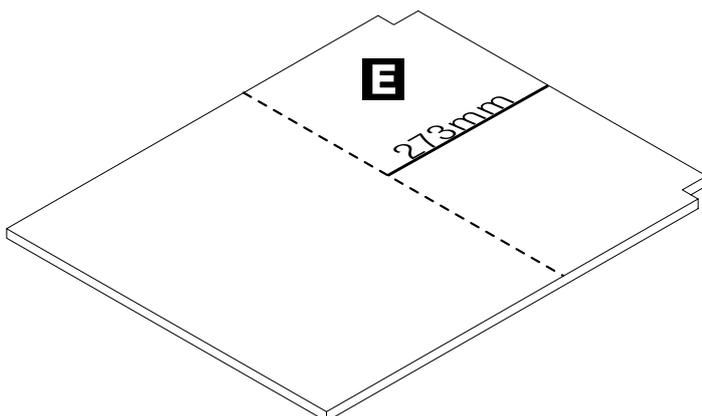
The holes are 5mm x 12mm deep

(If you have decided on the top door fascia opening direction, you could omit the drilling for the hinges on the opposite end panel).

End panel bottom row of holes to use as a template


Step 3

Cut the back panel down to 273mm in height.




Step 4

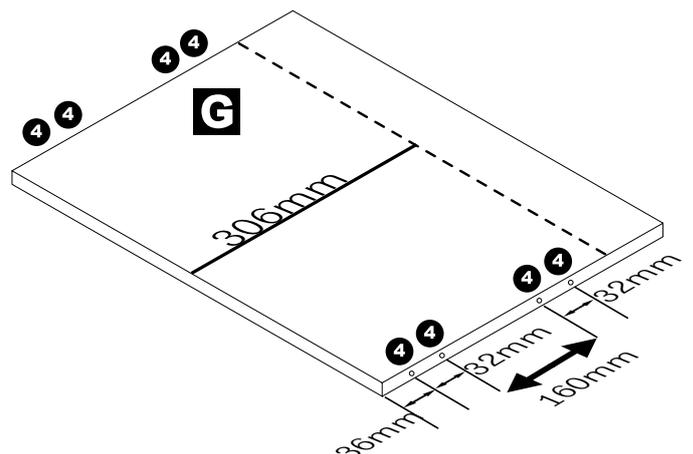Cut the B6 shelf panel down to 306mm in depth and add 4mm x 10mm pilot holes in line with holes on side panels




Step 5

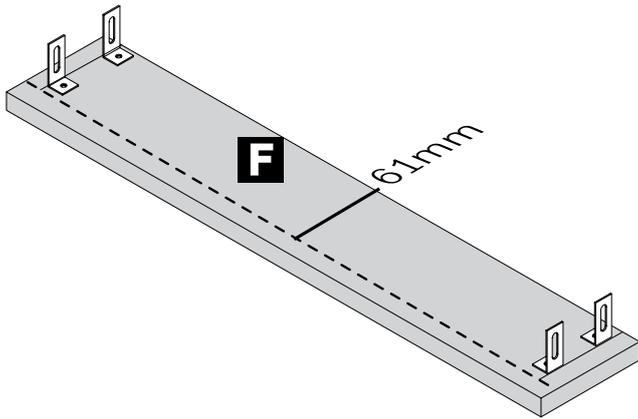Cut the 110mm filler panel down to 61mm in height and use L brackets to fit the fascia to the cabinet (not supplied)





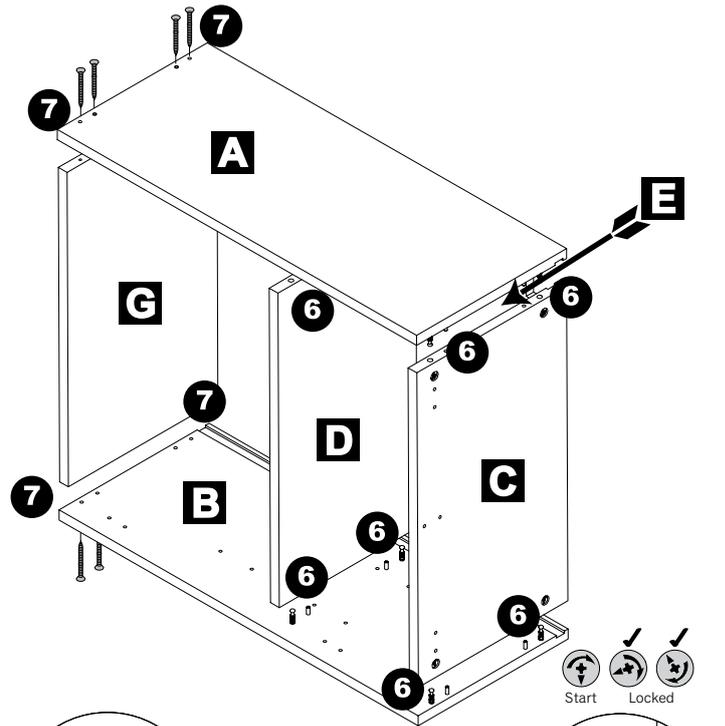Step 6 & 7





Step 8

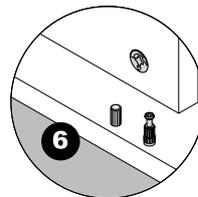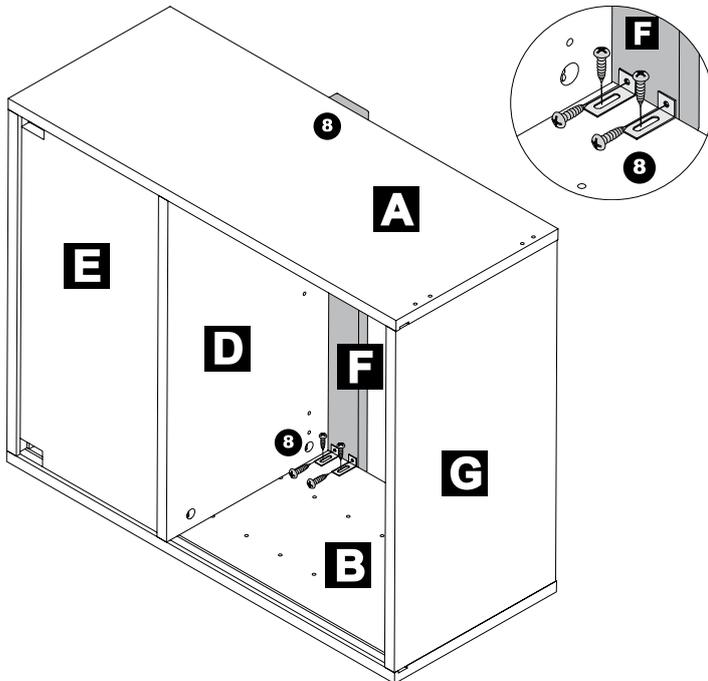Fit the filler fascia panel to the cabinet using 4 x L brackets & screws (not supplied)



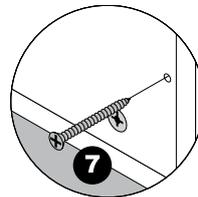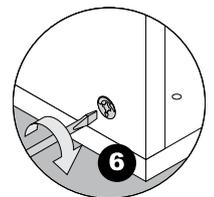
The cam locks between 8:30 and 11:30 o'clock
Do Not Over Tighten



Fit new base panel with 4.5mm diameter 45mm HILLO screws (not supplied)


Step 9

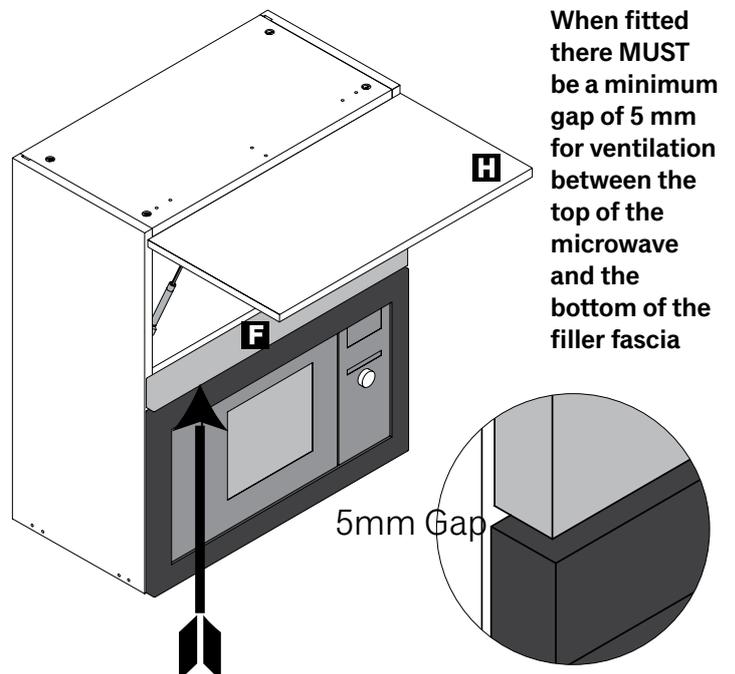Fit the top fascia panel to the cabinet using the standard hinge and screws from the W6 cabinet




When fitted there MUST be a minimum gap of 5 mm for ventilation between the top of the microwave and the bottom of the filler fascia

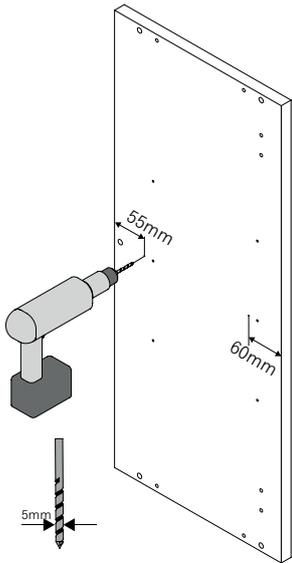
500mm open display unit



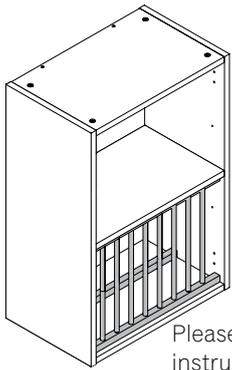If glass shelves are not being used, then holes must be drilled in the side panels for the dowels used in fitting solid shelves. Holes are 55mm in diameter and 60mm deep. Use the pin prick as a guide.



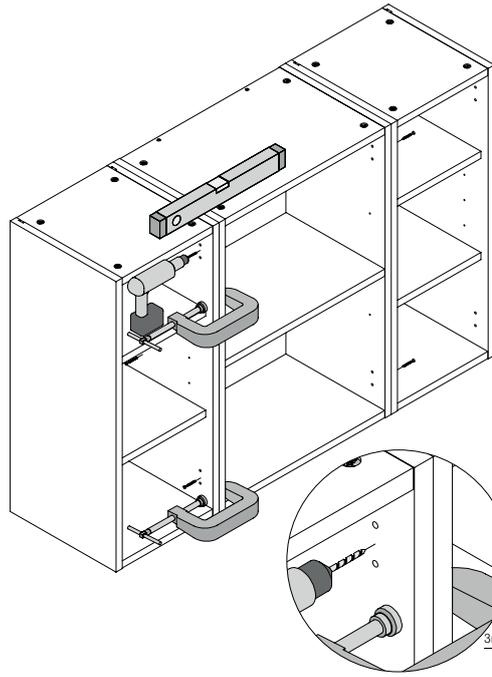Please refer to instructions provided with decorative features (wine/plate rack) for fitting.



The 500 display cabinet is designed to be used as a wall or base unit.

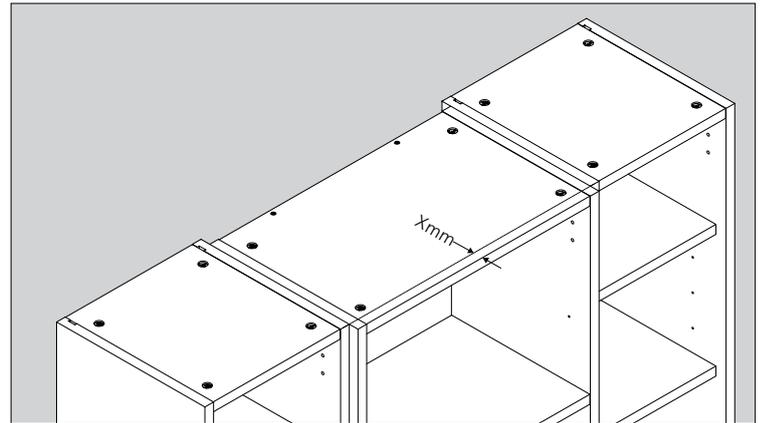

Wall Unit - the unit may be fixed to wall through the back using suitable fixings (not supplied).

Base Unit - either fit between two units or fit to a Show End Panel.

Use a 3mm wood drill to make 30mm deep pilot holes. Do not drill through both units.


Refer to step 7 page 20 for more information on installing the units and concealing the connecting screws.

Note: If glass shelves are being used in this unit, do not fit the pegs for a standard shelf. Refer to instructions in glass shelves for fitting.




If no door or frame is being fitted, the cabinet can be fit forward the thickness of the door (Xmm) to give an in line finish.

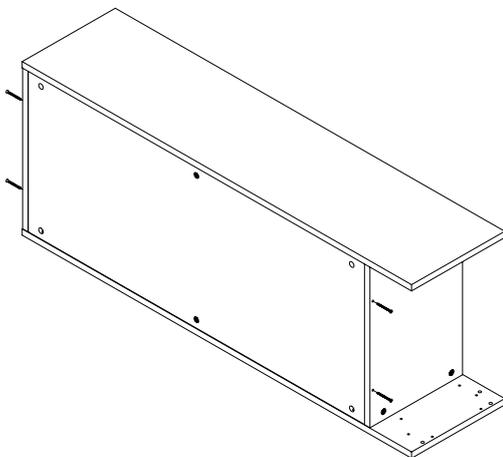Dresser units



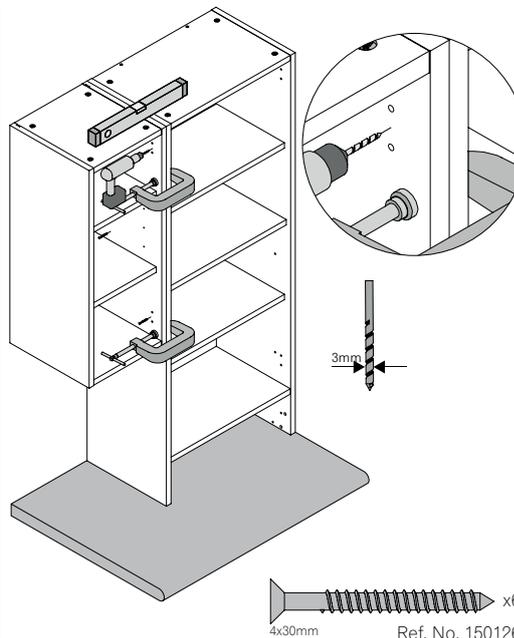This unit has no bottom panel as it is used with a Tandem Box drawer.



When starting the build, ensure the thickness of the worktop has been taken into account to ensure the top of the dresser is flush with the top of other units. If a standard larder or appliance unit is present, then a 38mm worktop will give the correct height when combined with a dresser. If a 28mm worktop is used, then a small offcut piece can be used to elevate the unit to the correct height.

Use a 3mm wood drill to make 30mm deep pilot holes; do not drill through both units. Refer to step 7, page 20 for more information on installing units and concealing the connecting screws. The Dresser Unit may also be fixed to the wall through the back using suitable fixings (not supplied).

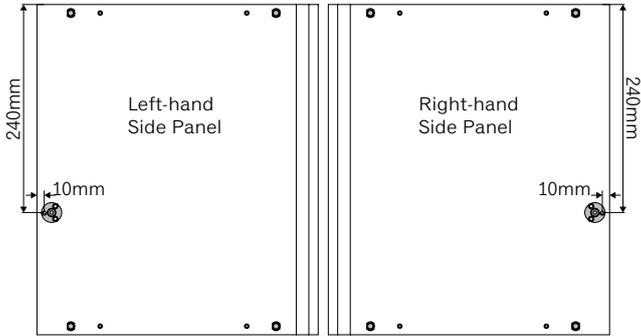


Feature bridging units




Important: If an extractor fan is being fitted to the Bridging Unit, refer to the manufacturer's instructions before installing this unit.

Fit the brackets for the Gas Stay. 600mm wide standard height units are fitted with 1 on the right-hand end panels; 600mm wide tall height and both 900mm wide units have a stay on each side.


367mm High x 900mm Wide Feature Bridging Unit shown, fitting measurements are the same for all units.



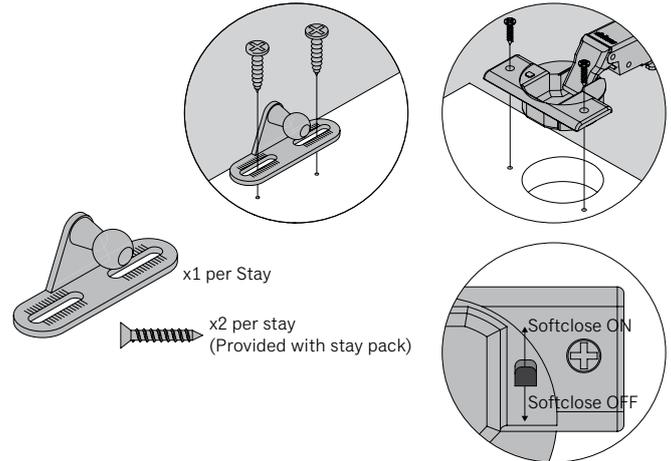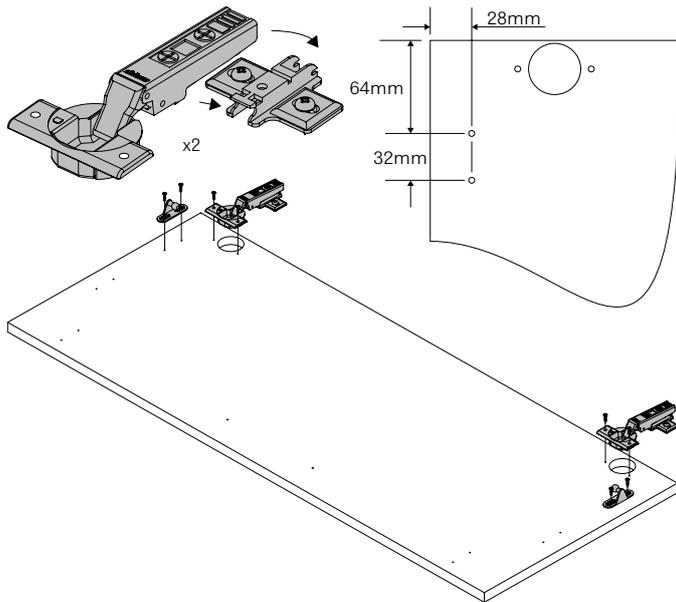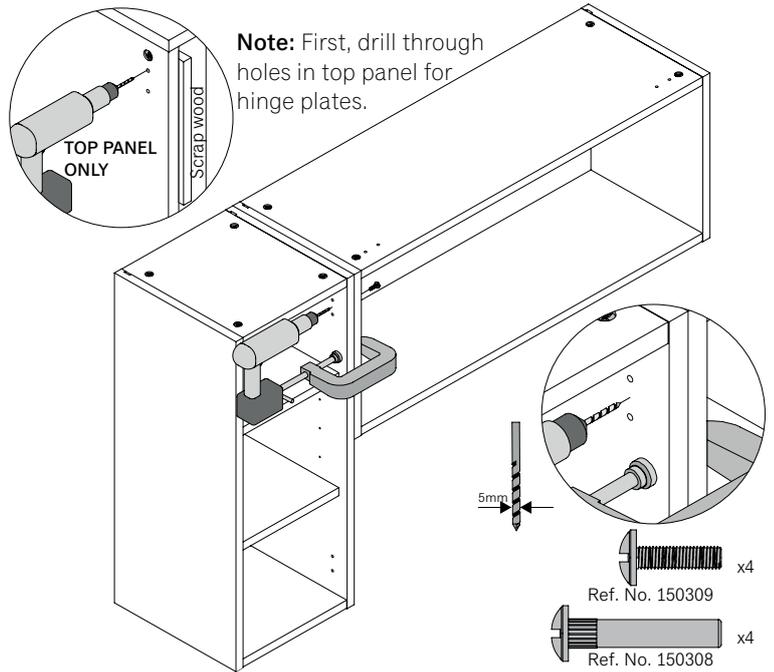Refer to section 4 page 18 for information on concealing connecting bolts. Do not drill through both units. Fit one connecting bolt at the front and one at the back at each side.




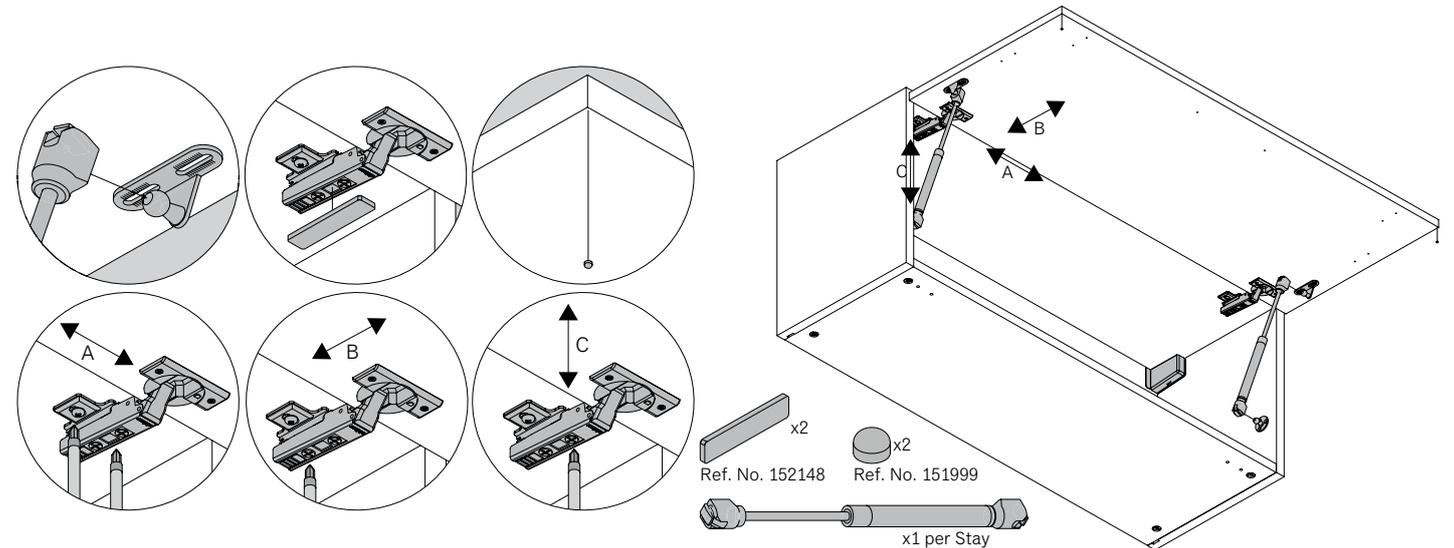The stays and doors attachment differ slightly depending on door type. For a standard fascia, please see illustration for where to drill the fascia. For an aluminium fascia, use the pre-drilled holes on the fascia. 600mm wide standard height units require only one stay, whilst 600mm wide tall and both 900mm wide units require two.





Aventos feature units

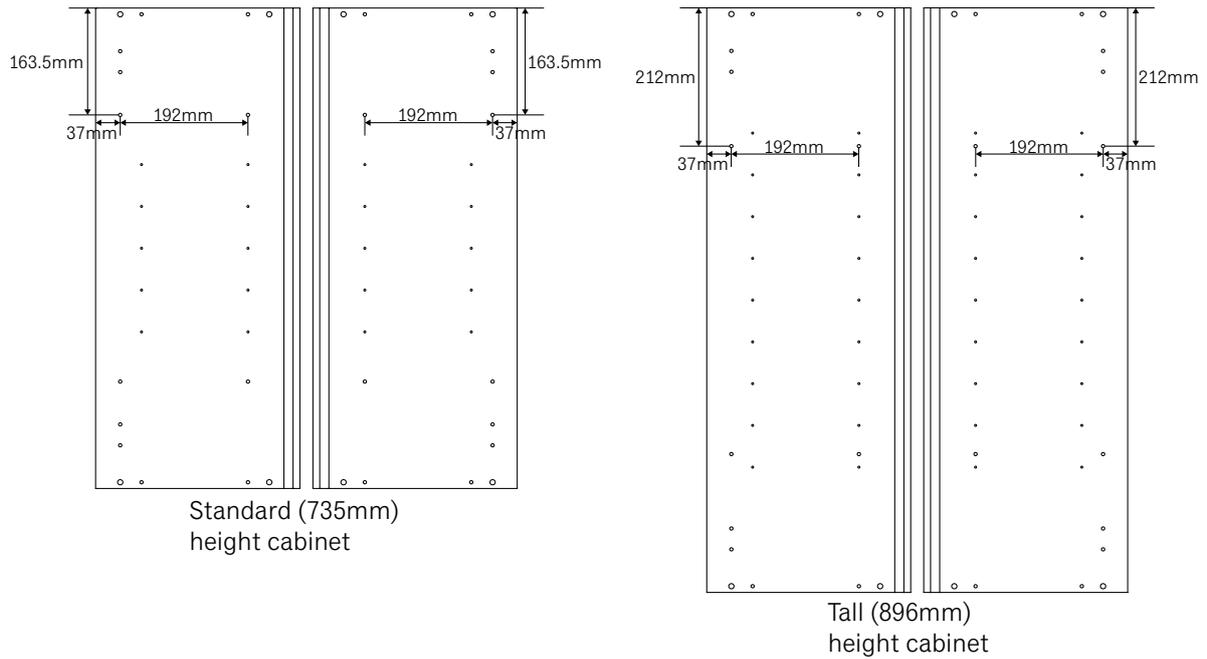This unit has pre-drilled side panels for the mechanism. Fit to the measurements as shown below.



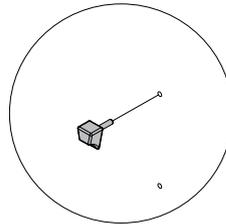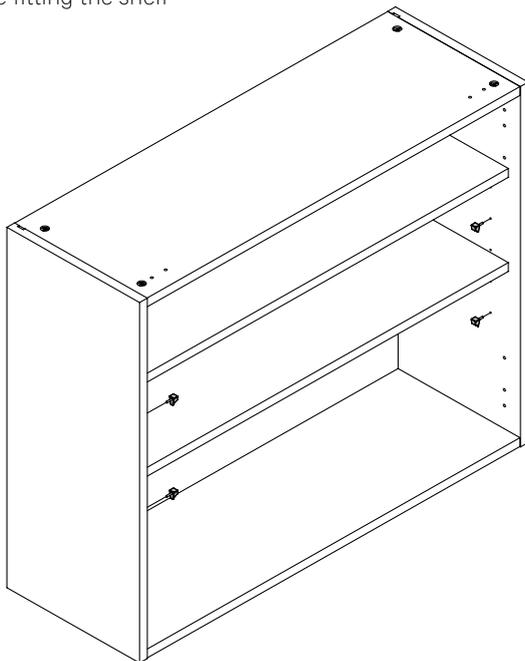Fit the doors and mechanism before fitting the shelf



x8 600mm Wide Units
x10 600mm Wide Units

Ref. No. 154027

There are three different strengths of this mechanism; this is to suit varying kitchen door sizes and weights. The appropriate strength of mechanism pack will be supplied with your kitchen delivery.

Fitting the Mechanism

The Aventos arm mechanisms are supplied as a separate pack. Please refer to instructions supplied with the mechanism. The following are notes that refer to the pages of the Aventos instructions.

Important Points:

The mechanism and doors are fitted after the unit has been assembled and installed.


Page 1- Planning

The mounting positions are pre-drilled so it is not necessary to refer to this page.

Page 2-4 Assembly

Follow these instructions as shown. Note that the hinge plate shown in Step 3 is not correct and a standard hinge plate is used instead of the 'in line' hinge plate shown.

The doors are pre-drilled for the hinges and there are dimples showing the locations to fit the rest of the mechanism.



Standard hinge plate similar to the one used in Step 3 of the mechanism instructions.

Section 10:

Customer care guidance

As much as it can be tempting to go at your kitchen cupboards with bleach and a scourer, please don't!

Firstly, it's not necessary and secondly, you could end up damaging the finish of your kitchen fascias.

Please read on for advice on how to keep your kitchen clean and germ free, whilst also looking as good as new.

High Gloss Doors

- Use a cleaning product not containing aggressive substances like acetone, alcohol, bleach etc., as those components could seriously damage the surface of the door. Preferably use a soft cotton or microfibre cloth with only water and soft soap (containing a maximum of 1% of liquid soap)
- Smoking may cause discolouration on some finishes which is not removed by the recommended cleaning methods.
- Vuplex gloss cleaner is available to purchase and is recommended for gloss finishes

Matt Doors

- Do not use kitchen cleaners on matt doors, as they leave a residue on the surface which over time builds up, leading to a surface which will mark with fingerprints etc.
- Use a mild detergent to keep the surface clean and fingerprint free.
- Avoid excessive changes in temperature and humidity as much as possible. Always try to ensure adequate ventilation when cooking and washing.
- Matt Maxxe cleaner is available to purchase and is recommended for matt finishes

Timber Doors

- Wood products will resist most household chemicals, including alcohol. However any spillage which occurs should be wiped off at once, and thoroughly dried.
- Marks can, in most cases be removed with a soft damp cloth or, failing that a mild detergent and warm water.
- Do not use solvents or abrasive cleaners.

Worktops

- All exposed worktop edges must be sealed with a waterproof sealant to prevent water moisture penetration, which will cause the laminate to lift.
- Although the worktop is very hardwearing, sharp knives and objects will scratch the surface. To prevent damage, a chopping board should be used and pots and pans should be lifted and not

dragged. Care should be taken not to drop any heavy objects onto the worktop as the surface may crack.

- The laminate surface can tolerate boiling water and hot cooking splashes but may be damaged if very hot saucepans, oven dishes or electric irons are placed on the surface. To prevent damage always use heat resistant mats.
- For cleaning, a damp soapy cloth will clean off most spills. Bleaches, scouring pads and multi-surface cleaners should not be used. Concentrated juices, corrosive liquids and food colourants should be wiped off immediately. On no account should any spillage, even water, be allowed to lie on the surface.
- Refer to the worktop supplier's instructions for further information.

Carcases

- Do not use polish on any surfaces; a damp cloth with soapy water will clean off most marks and spills. On no account should any spillage, even water, be allowed to lie on the surface. Bleaches, scouring pads and multi-surface cleaners should not be used.

Drawers, Runners, Doors and Hinges

- These should be wiped out with a damp soapy cloth and wiped dry with a soft cloth when necessary. The roller runners and hinges are lubricated and should not be cleaned with degreasing agents, as this will affect the action of the moving parts.
- Never lean on partially or fully open doors and drawers in order to gain access to base units. The specification of the hinges are to adequately support the weight of a door plus small additional weights such as wire racks holding cloths, small jars and herbs etc. It is advised that once the kitchen has been installed, the customer should check every six months that all screw "B" on the hinges are tight.
- It is recommended not to attach a waste bin to the door but instead use one supported by the carcass.

Wall Units

- Care should be taken not to position kettles, or any appliance which creates large amounts of heat or steam, underneath a wall unit. Excessive heat or moisture can damage the units and doors.

Handle Care Guidelines

When you've invested in new door handles, taking care of their upkeep can further ensure their longevity. Often, you'll have bought your new home furniture with one eye on improving the overall aesthetics of your property, so it makes sense to take care of it.

Antique Brass

To care for internal door handles, you simply need to wipe over internal fittings with a soft, non-abrasive cloth; buffing as you clean. It's worth bearing in mind that over time, distressed finishes are naturally intended to wear to enhance the aged appearance. This may result in colour variation and is not a sign that your door furniture needs replacing.

Polished Chrome and Satin Chrome

Chrome is an extremely durable and hard-wearing material that has been designed to last the test of time. The only likely care that it will require is the removal of finger marks on polished services. A good way to deal with this is through lightly dusting your chrome door handles with a soft, non-abrasive cloth. You should always avoid using wax polish with this material.

Satin Nickel

For satin nickel, the care requirements depend on whether the fittings are internal or external at the property. If they are indoors, simply wipe over the surface with a non-abrasive cloth and buff gently until you get a shine. For external fittings, you will need to sparingly apply a high-quality wax polish; which you will need to buff gently with before it dries and causes smears.

Polished Brass

First and foremost, it's vital that you don't use any metal or spray polishes here as the grit or solvents commonly found in these products can damage the material. The technique of buffing with a soft non-abrasive cloth is common to polished brass care treatment, but there are other things to consider for the maintenance of external fittings. They need to be wiped over with a good wax polish, before the wax dries and causes any smears.

Temperature and Humidity

- Avoid excessive changes in temperature and humidity as much as possible. Always try to ensure adequate ventilation when cooking and washing. Dryers, if possible, should be vented to the outside to avoid excessive humidity in the kitchen.

Black Antique

As iron in any form can be vulnerable to rusting, a lot of the door handles that we supply have been covered by zinc plating and powder coating to prevent this as much as possible. For ongoing care, a light oiling may be required occasionally to ensure smooth functionality. Additionally, any harmful deposits which cause corrosion can be removed through wiping with a lightly oiled cloth.

Stainless and brushed steel, chrome, copper

Clean these products with a dilute solution of liquid soap and rinse with clean water, drying with a soft cloth immediately afterwards.

A stainless-steel polish can be used with a soft cloth, taking care not to get the cleaning agent onto other surfaces. If the product is oil based, the area will need to be cleaned again to finish. Any discolouration should be removed immediately using a mild proprietary cleaner, rubbed in with the grain of the steel. Rinse with clean water immediately afterwards and dry with a soft cloth.

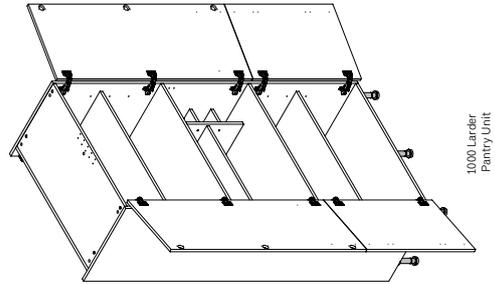
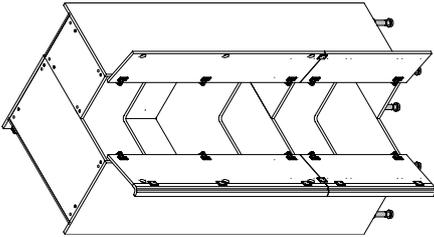

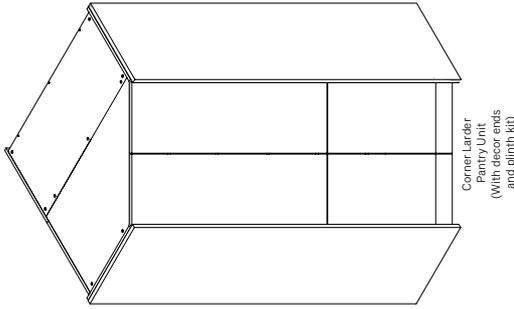
Common bleaches, cleaners, acids, concentrators, disinfectants, chlorides and general alkalis can lead to pitting of the surface. If any of these substances come into contact with the surface, they should be rinsed off immediately. Avoid using coarse, abrasive materials that can scratch the product surface.

If metal particles (e.g. from Brillo pads) are left on the stainless steel, it can quickly turn to rust and give the appearance that the sink/hob/tap is rusting. In this case, use a soft bristle brush such as nylon and use the grain of the material to clean away the particles.






FAILURE TO FOLLOW THE APPROPRIATE AFTERCARE AND MAINTENANCE METHODS MAY INVALIDATE THE PRODUCT GUARANTEE OR WARRANTY.

Corner units and tall feature items



Feature Units



Corner Wall Units

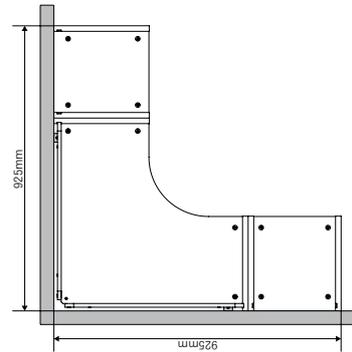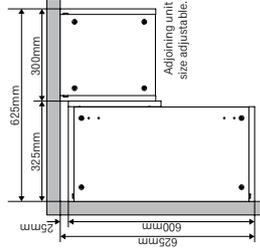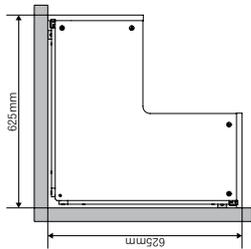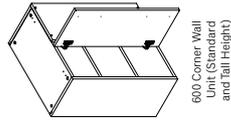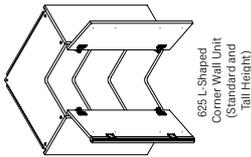

Corner Base Units

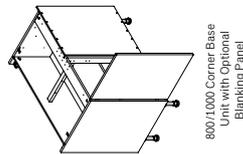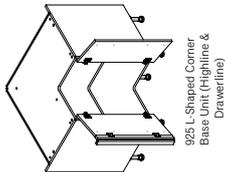

1000 Wide Unit:
400 Door, X = 25mm
450 Door, X = 75mm
500 Door, X = 125mm
600 Door, X = 225mm

